

# rhFS1.buttons16

type: FS01



I-E



**SERVICE BOOK**

**preliminary  
safety  
information**

before using the machine, carefully read this information that helps you behave properly and guarantees a safe use;  
the following pages use the symbols listed here below, whose meaning is of attention:

**GENERAL;**

if the text is highlighted by this symbol, it is recommended to pay special attention to the performance of the procedures described; if not carefully performed on safe conditions, they can be source of general danger;

**HIGH VOLTAGE;**

if not properly performed, the actions marked by this symbol may expose to accidental contacts with electric voltage;

**DANGEROUS TEMPERATURE;**

if not properly performed, the actions marked by this symbol may expose to accidental contacts with high-temperature parts;

**MOVING PARTS;**

if not properly performed, the actions marked by this symbol may expose to accidental contacts with moving parts;

**CRUSHING;**

if not properly carried out, the actions marked by this symbol may expose to a risk of crushing;

the same symbols are placed inside the vending machine to indicate the parts on which to act with the utmost caution;

**SERVICE KEY IN USE;**

the symbol recommends the utmost attention during the actions described; the use of the service key activating all machine functions when the door is open is only reserved to the technical operators who know the operation of the vending machine, who are aware of its potential risks and who make sure they are operating on totally safe conditions;  
the use of the service key shall be strictly limited to the time necessary to perform the actions requiring the use thereof; users shall be informed of the prohibition on using and approaching the vending machine;

**WEIGHT;**

the symbol reminds the user to consider the machine weight carefully for handling and placing it definitively;

**WATER SUPPLY;**

it marks the parts duly requiring caution in case of leakage, if connected to the water mains;


**SUPPORT SURFACE;**

it reminds the user to install the machine on a support surface, the max. inclination of which is 2°;

**safety rules for using the vending machine**

- \*\*\* pay special attention to the chapters and notes highlighted by the symbols of alert; strictly observe the rules concerning, in particular, the operators' and users' safety;
- \*\*\* the vending machine may be used by children who are at least 8 years old and by people having reduced physical, sensory or mental capacities or not having all necessary experience and knowledge, provided that they are under supervision or after they have received all necessary instructions for using the machine on safe conditions and for understanding the dangers related thereto; children must be supervised and prevented from playing with the vending machine;  
cleaning and servicing shall not be carried out by children;
- \*\*\* if you should find out a water leak or the presence of smoke, immediately detach the vending machine from the electric and hydraulic network, never try to restore its operation and apply to skilled technicians;
- \*\*\* the machine shall be installed according to national rules; pay special attention to the rules about the machines directly connected with the hydraulic network;
- \*\*\* room (during storage and operation):  
temperature: 5 °C ÷ 35 °C  
relative humidity: max 80 %
- \*\*\* the inclination of the vending machine support surface shall not exceed 2°;
- \*\*\* if the hydraulic connection tube is not supplied with the machine or in case of replacement, the connection must be carried out only with:
  - new tube;
  - of type-approved material for food use;
  - compliant with "IEC 61770 Electric appliances connected to the water mains";
  - it can support the working pressure;
- \*\*\* the user is not allowed to access the maintaining and servicing area that shall be properly signalled;
- \*\*\* never remove protections, never override safety devices and never modify the machine or its components;
- \*\*\* tools necessary to act with this vending machine:
  - a pair of scissors for electricians, a Phillips PH2 cross screwdriver for 4/6 mm self-threading screws, a set of wrenches up to 13 mm, a set of Allen wrenches from 2 to 8 mm;
  - it may be of use to procure some expendables, such as disposable paper, single-use gloves, clean cloths, cups and a bucket for the collection of waste water;
- \*\*\* never wash the machine by using water jets; the vending machine is not suitable for installation in areas where it can be reached by water jets;
- \*\*\* for cleaning at regular intervals refer to Service Manual

**safety rules for  
using the  
vending machine**

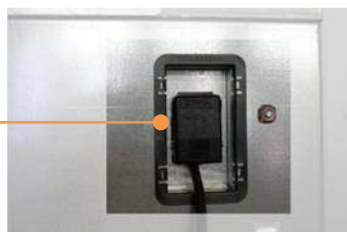

the symbol means that it is forbidden to dispose of the equipment as urban waste and compulsory to provide for separate collection in order to prevent any potential effect on the environment and human health; strictly follow the provisions of the European Parliament's 2012/19/EU Directive;



**residual risks**

a residual risk is understood as a potential danger that can not be eliminated and it persists despite all precautions in use since it is related to the intrinsic features of the product and it also includes non-identifiable risks;

the actions and behaviours listed here below are intended to reduce residual risks and you shall always adopt them when interacting with the machine;



wear clothes that can properly avoid any accident (never wear rings, chains, clothes with laces or excessively long sleeves, ...);



carefully evaluate the treatment of residues from installation (wood, plastics, ...) and utilisation (product powder, bags, ...);



never repair or carry out any technical action if you have not been properly trained;



signal that a technical action is in progress on the machine (barriers against approach, signs, ...), carry it out quickly without leaving the station;



install the machine in a sheltered, illuminated, ventilated and noiseless environment; keep it clean and never place tools or any other object on it; never install it outdoors or, anyway, never expose it to atmospheric agents;



make sure it can be neither reached by water sprays or vapours nor hit by objects that might damage it;



carefully consider the machine weight and stability during the installation and in the final working position;



supply the machine within voltage, temperature, pressure and hydraulic limits, ... as it is detailed on the following pages and provide for an effective earthing;



even if detached from supply, the machine may contain hot pressurised water at a high temperature;



never detach hydraulic and electric supplies when they are active;

**general  
guarantee  
conditions**

these conditions regulate Rheavendors Industries S.p.A.'s obligations with reference to guarantee and repair; any other term or condition, either verbal or written, is not applicable, including those in the purchaser's purchase orders, if not explicitly accepted and signed by Rheavendors Industries S.p.A.; if the guarantee terms here below should be held not to be valid and/or lawful in the Country where the product is sold, they will not be effective whereas all the other clauses will remain valid and applicable;

- 1st the mechanical and electronic components of the machine are guaranteed for twelve months, starting from the sales date certified by the fiscal receipt;
- 2nd the guarantee shall be understood as the free replacement or repair of any part of the machine that – at the manufacturer's unquestionable discretion – should prove to be originally defective due to manufacturing defects; the cost of sending the manufacturer machines, defective pieces and spare parts will be totally charged to the user's account; the manufacturer reserves the right to use new or reconditioned components for repair; if replaced, original components will be guaranteed for 12 months; the parts replaced under guarantee will become the property of Rheavendors Services S.p.A. (request for "Form PO 19.01/2b" Materials under guarantee – Authorisation to return);
- 3rd in case of irreparable failure or if a failure of the same origin is repeated, the manufacturer may – at its unquestionable discretion – replace the machine with another one, the model of which is either the same or an equivalent one; the guarantee of the new machine will be extended up to the original term of guarantee of the replaced machine;
- 4th all the parts that should prove to be defective due to negligence or carelessness (non-observance of the instructions for the operation of the machine), incorrect installation or maintenance by unauthorised personnel, transport damage or any circumstance – anyway – not due to the manufacturing defects of the machine are not covered by guarantee; the installation and connection with supply plants as well as the maintenance operations mentioned by the installation manual are also excluded from any performance under guarantee; the guarantee will not cover payment systems either; whether installed on the machine or supplied as an accessory, they are subject to their manufacturer's guarantee whereas Rheavendors Industries S.p.A. will just act as a broker;  
all changes made to the machine and not agreed with the manufacturer in writing will involve the immediate termination of the guarantee period and anyway fall under the Customer's total responsibility;
- 5th the guarantee is excluded in all cases of improper use of the machine;
- 6th Rheavendors Industries S.p.A. will disclaim all responsibility for any damage that may be directly or indirectly caused to people, animals or things as a result of:  
improper use of the vending machine; incorrect installation; improper energy or water supply; serious maintenance deficiency; actions or changes not explicitly authorised; use of non original spare parts;
- 7th in case of failure, Rheavendors Industries S.p.A. is obliged neither to compensate any economic damage due a forced stop of the machine nor to extend the guarantee period;  
if the machine should be transferred to a centre designated by the manufacturer for overhaul or repair, the relative transportation risks and costs will be charged to the user's account. The freight charges of machines, defective pieces and spare parts are always understood as charged to the user's account;

**Preventive maintenance:**

Preventive maintenance is performed periodically in order to reduce the incidence of equipment failure and the costs associated with it.


Ideally, preventive maintenance will take place just before failure occurs in order to maximize the time that equipment is in use between scheduled maintenance activities.

It is the preset check of the vending machines and all the replacements required to ensure the quality of products and to maintain the optimum performance of reliability of the vending machines series.

**Scheduled PM (Preventive Maintenance) Program Overview:**

the purpose of scheduled Preventive Maintenance is to avoid or reduce emergency service costs by implementing a standardized regular interval of Preventive Maintenance.

the bathtub curve is typically used as a visual model to illustrate the three key periods of product failure.

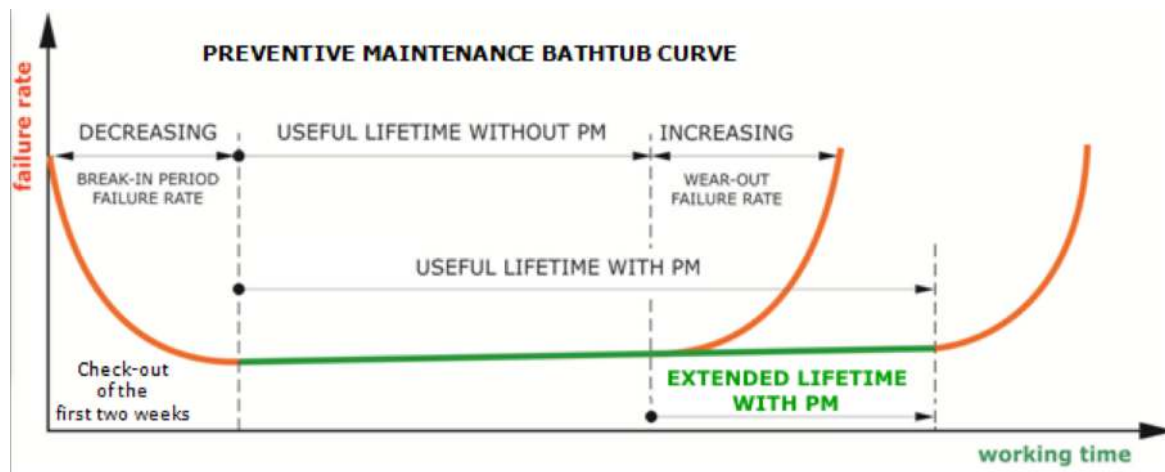

**note:** preventive maintenance increases the useful lifetime of the machine; the mean-time-to-failure (MTTF) or bathtub curve indicates that a new machine has higher probability of failure during the first two weeks of operations, usually caused by setting issues. Following this initial period, the probability of failure is low for an extended period of time.

After this normal machine life period, the probability of failure increases sharply with elapsed time of hours of operations. Preventive maintenance is based on replacing components after a certain length of time or amount of use to extend the operating life of machines.

The following pages summarize the scheduled preventive maintenance suggested for Rhea Machines; the level of PM performed will be determined by cycle count accumulations or months since the first installation.

**Use only official Rheavendors spare parts**

**CLEANING.** Cleaning of the machine is mandatory for a correct maintenance of the machine. It must be considered as an active part of the preventive maintenance.

## Concept of "preventive maintenance"

The components and assembly parts included in the preventive maintenance kit for Rhea machines are conceived according to our experience and considering:

1. Use cases: the cycles required by Rheavendors refer to standard conditions of indoor use and can't be considered valid in case, for example, of use of the machines in particularly wet environments, hot or dusty location
2. Wear and tear of the components at distribution stage
3. Wear and tear of the components with time
4. Natural deterioration of materials due to the different work cycles (daily consumptions) inside the machines
5. Changes in the performances due to the raise of damaging elements for the components themselves, such as:
  - scale (water filter is recommended)
  - different consistency of the coffee beans
  - remains of coffee inside the grinders for a long inactivity time
  - cleaning of the machine
6. Sizing of the machines according to the number of consumptions per day
7. Observance of the easy cleaning procedure during each loading in the vending case
8. Observance of the deep cleaning and sanitization procedures of the machines, that allows to work under the existing sanitary-hygiene regulations.

**Note that HACCP rules are not mentioned in this document. Please refer to the specific rules of your country.**

In the light of the above, the preventive maintenance cycles are as follows:

- A. Every 10.000 consumptions: 10k, 20k, 30k, 40k, 50k, 60k, 70k, 80k, 90k, 100k, 110k, 120k, 130k, 140k, 150k, 160k, 170k, 180k and so on
- B. Every 30.000 consumptions: 30k, 60k, 90k, 120k, 150k, 180k and so on
- C. Every 60.000 consumptions: 60k, 120k, 180k, and so on
- D. Every 90.000 consumptions: 90k, 180k, and so on

Should any operational anomalies arise due to any events or circumstances not listed above, Rheavendors will be able to review and adjust the data according to such anomalies.

**In case of machines with fewer consumptions, the preventive maintenance for some specific components MUST be done at least once a years.** Refer to the following pages for more details.

Also, **long inactivity could create some trouble.** In that case it could be required to change the components that are effected by this problem (gaskets, silicon pipes, ...)

**A deep cleaning of the machine will be also required, replacing the internal water and activating a sanitization process.** This is required also to remove fouling and blocking due to leak of cleaning.

**A cleaning of the grinder mills could be also required** in order to remove residual of old coffee beans already grinded.

### Boiler descaling and replacing

Descaling and replacing of the boiler or its elements is not directly related to the number of dispensing cycles. **Also if the machine is not dispensing**, the heating element is continuously activated to keep warm the water.

Descaling is related to the **water hardness**, that's why use of specific **filter** is always recommended.

In the market are available several substance for boiler descaling. De to this **is not possible to provide a specific rule about the descaling and replacing frequency**.

Generally speaking, descaling could be required 1-2 times in a year.

Considering that descaling can reduce the life of the boiler, expecially the heating element, we suggest to change the boiler after some descaling cycles. An average period for replacing can be defined in 3-5 years.

### Grinder mills replacing

The amount of cycles for the PM that we suggest is considered with an average of 7 grams of coffee, coffee beans with standard hardness and standard granulometry setting. In case of different conditions, the frequency of the mills replacement can be different.

After the replacement a new pre grinding period must be considered.

**The following tools are required:**

- Philips screwdrivers short and long
- Open-end wrenches 8, 10, 12 and 13 mm
- Silicone grease (GRS0000004)
- Pliers

**Service maintenance A****Service maintenance A routine:**

- .. Visually inspect brewing-unit, clean brewing chamber
- .. Exchange brewer parts and grease o-ring
- .. Exchange mixers parts
- .. Check beverage setting according to specifications or according to customer wish

**Additional controls:**

- .. Check eventually presence of scale on safety valve
- .. At least **once a year** replace the silicon pipes
- .. Exchange optional parts if required (fresh milk system or similar)
- .. Check optional settings

**Service maintenance B**

The maintenance B will be considered in addition to the maintenance A, when required.

**Service maintenance B routine:**

- .. Visually inspect brewing-unit, clean brewing chamber
- .. Exchange brewer parts and grease o-ring
- .. Exchange mixers parts
- .. Exchange grinder parts
- .. Exchange brewer PTFE pipe
- .. Check beverage setting according to specifications or according to customer wish

**Additional controls:**

- .. Check eventually presence of scale on safety valve
- .. At least **once a year** replace the silicon pipes
- .. Exchange optional parts if required (fresh milk system or similar)
- .. Check optional settings

### Service maintenance C

The maintenance C will be considered in addition to the maintenance A and B, when required.

#### Service maintenance C routine:

- .. Visually inspect brewing-unit, clean brewing chamber
- .. Exchange brewer parts and grease o-ring
- .. Exchange mixers parts
- .. Exchange fans
- .. Exchange Varitherm parts (if installed)
- .. Check boiler parts (exchange if required)
- .. Check product container parts (exchange if required)
- .. Exchange brewer PTFE pipe
- .. Check beverage setting according to specifications or according to customer wish

#### Additional controls:

- .. Check eventually presence of scale on safety valve
- .. At least **once a year** replace the silicon pipes
- .. Exchange optional parts if required (fresh milk system or similar)
- .. Check optional settings

### Service maintenance D

The maintenance D will be considered in addition to the maintenance A, B and C, when required.

#### Service maintenance C routine:

- .. Visually inspect brewing-unit, clean brewing chamber
- .. Exchange brewer parts and grease o-ring
- .. Exchange mixers parts
- .. Exchange fans
- .. Exchange hot water EV
- .. Exchange boiler parts (if required)
- .. Exchange grinder motor and specific parts
- .. Exchange brewer gearbox motor parts
- .. Exchange product container parts
- .. Exchange brewer PTFE pipe
- .. Check beverage setting according to specifications or according to customer wish

#### Additional controls:

- .. Check eventually presence of scale on safety valve
- .. At least **once a year** replace the silicon pipes
- .. Exchange optional parts if required (fresh milk system or similar)
- .. Check optional settings

### Critical

It's recommended to have these parts in stock for service. In case of out of order or damage, these parts will increase the possibility to repair the machine, reducing the out of order time.

## Legend

- Table: table title (grey background)
- Pos: position reference
- Code: part number
- Description: part description
- Critical: parts considered critical. These parts should be always in stock for service.
- Preventive maintenance:
  - A: first cycle of PM
  - B: second cycle of PM
  - C: third cycle of PM
  - D: forth cycle of PM
  - X = number of parts to be replaced during the PM. These numbers are calculated for each machine, considering the maximum configuration available. "xN" means that the number is variable, according to the machine configuration.
  - Y = parts to be replaced at least once a year
  - CK = check the part in order to verify if is required to clean it or replace it
  - § = assembly symbol.
- The single parts are in alternative to the recommended critical assembly components indicated with symbol §
- Recommended Spare Parts, considering the number of vending machines. Number of suggested part to have in stock for service. This number is not including the parts required for the preventive maintenance, but just for minimal stock.

The amount of parts required for the PM are calculated considering the maximum configuration of the machine model. Some detailed info about the machine configuration can be found in the machine code, following this conversion table:

**Machine code structure:**      **D   MMM   T   O   VV   I   M   CCC**  
 For example :                      D   230   6   6   A0   4   2   376

**MMM** = Machine model

**T** = Machine Type

- 0 = Espresso    - 1 = Instant    - 6 = Induction Espresso

**O** = Optionals:

- 0 = Standard    - 5 = Unplumbed version    - 6 = Plumbed version

**VV** = Version Index:

A0 = ...    A1 = ...    To be specified by Rheavendors technical office

**I= N° instant canisters (not included the coffee beans canisters):**


1 = 1 canister                      ..              6 = 6 canisters

**M = N° mixing bowls / mixers**

1 = 1 mixing bowl/mixer              ..              3 = 3 mixing bowls/mixers


**CCC** = Customer code, for example 376 = Romania

cabinet

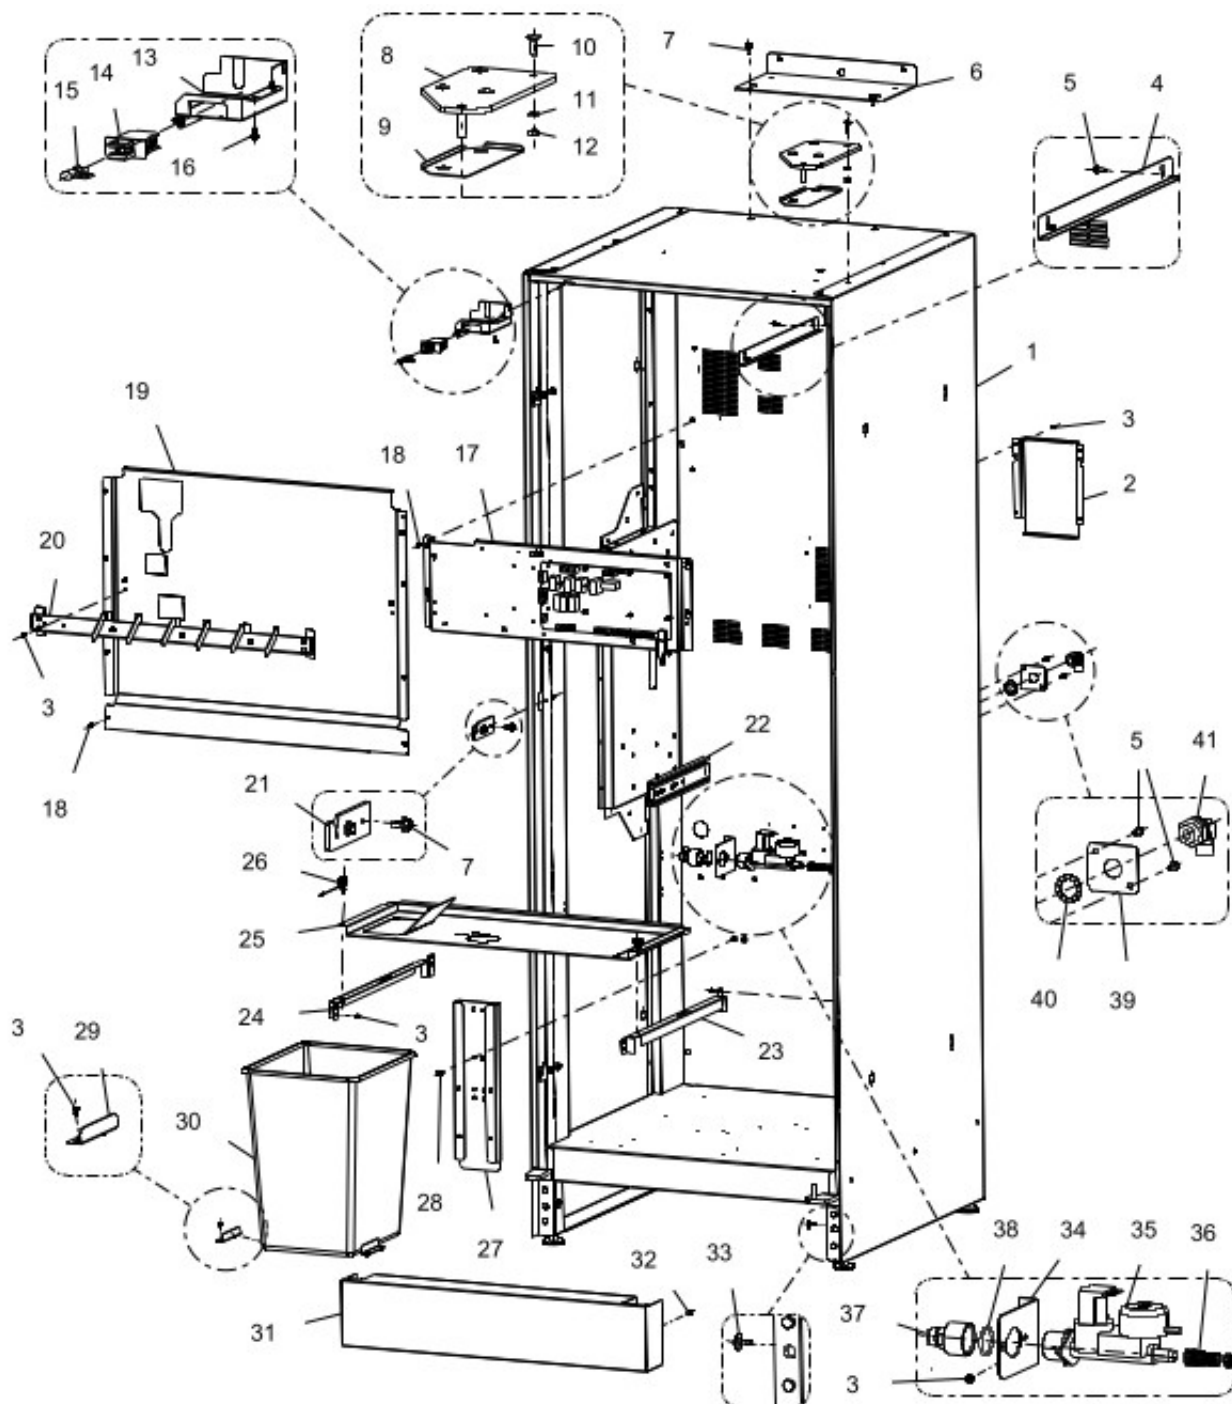


| cabinet |                 |                                   |          |                        |    |    |   |
|---------|-----------------|-----------------------------------|----------|------------------------|----|----|---|
|         |                 |                                   |          | Preventive Maintenance |    |    |   |
| Pos.    | Code            | Description                       | Critical | A                      | B  | C  | D |
| 1       | Z0012400355NACL | § CABINET rhFS1 9005              |          |                        |    |    |   |
| 2       | Z0012300244NA   | COVER BACK                        |          |                        |    |    |   |
| 3       | VIT0002009      | SCREW ST HEAD CAP M3.5X6.5        |          |                        |    |    |   |
| 4       | Z0012300217NA   | WIRING GUIDE                      |          |                        |    |    |   |
| 5       | VIT0000011      | SCREW HEAD TAP CAP M4X8           |          |                        |    |    |   |
| 6       | Z0010018071     | MACHINE FIXING PLATE              |          |                        |    |    |   |
| 7       | VIT0000236      | SCREW HEX HEAD M6X11              |          |                        |    |    |   |
| 8       | Z001B170010NA   | UPPER HINGE                       |          |                        |    |    |   |
| 9       | Z001B170039NA   | THICKNESS FOR UPPER HINGE         |          |                        |    |    |   |
| 10      | VIT0005802      | SCREW 6X20                        |          |                        |    |    |   |
| 11      | VIT0003453      | SPRING WASHER 6,4                 |          |                        |    |    |   |
| 12      | VIT0004505      | NUT M6                            |          |                        |    |    |   |
| 13      | Z001B170057NA   | SUPP.INTER.SAFETY                 |          |                        |    |    |   |
| 14      | ELE0002009      | BIPOLAR SWITCH 15A 250V           | X        |                        |    |    |   |
| 15      | Z0270011109CL   | § SERVICE KEY                     | X        |                        |    |    |   |
| 16      | VIT0002401      | SCREW ST HEAD CAP M3.5X9.5        |          |                        |    |    |   |
| 17      |                 | See table POWER BOARD SUPPORT     |          |                        |    |    |   |
| 18      | VIT0000011      | SCREW HEAD TAP CAP M4X8           |          |                        |    |    |   |
| 19      | Z013B170004     | COVER ELECTRIC PANEL              |          |                        |    |    |   |
| 18/a    | Z001B170083CL   | CANISTER SUPPORT FS1 E7 R4        |          |                        |    |    |   |
| 18/b    | Z001B170083CL3  | CANISTER SUPPORT FS1 E6 R3        |          |                        |    |    |   |
| 18/c    | Z001B170087CL   | CANISTER SUPPORT FS1 E8 R4        |          |                        |    |    |   |
| 21      | Z0010030015     | LOCK HOOK                         |          |                        |    |    |   |
| 22      | Z0070015144     | TELESCOPICS GUIDE                 |          |                        |    |    |   |
| 23      | Z0012300218     | LEFT SHELF SUPPORT                |          |                        |    |    |   |
| 24      | Z0012300220     | RIGHT SHELF SUPPORT               |          |                        |    |    |   |
| 25      | Z0012300222     | PARTITION SHELF                   |          |                        |    |    |   |
| 26      | Z040A158020     | § UNMISSABLE HANDLE               |          |                        |    |    |   |
| 27      | Z0010016027     | FILTER SUPPORT                    |          |                        |    |    |   |
|         | Z0010016027CK   | FILTER SUPPORT DUST GREY RAL 7037 |          |                        |    |    |   |
| 28      | VIT0000042      | SCREW HEAD TAP CAPM5X16           |          |                        |    |    |   |
| 29      | Z001B170066NA   | BUCKET GUIDE BRACKET              |          |                        |    |    |   |
| 30      | CON0000201      | BIN                               |          |                        |    |    |   |
| 31      | Z001B170046NA   | FRONT PLINTH                      |          |                        |    |    |   |
| 32      | Z0020018061     | SELECTION BUTTON PLUG             |          |                        |    |    |   |
| 33      | Z0010030084     | PIN                               |          |                        |    |    |   |
| 34      | Z0070012111CK   | INLET H2O VALVE SUP. RAL7037      |          |                        |    |    |   |
| 35      | Z0110001119     | WATER INLET VALVE 24V DC          | X        |                        | CK | X* |   |
| 36      | Z0010020063     | NOZZLE SPRING D.7/11              |          |                        |    |    |   |
| 37      | Z0010019223     | H2O INLET CONNECTOR 3/4F-3/8M     |          |                        |    |    |   |
| 38      | GUA0000021      | OR 130 NBR AL 75 BLACK            |          |                        |    |    |   |
| 39      | Z0010030118     | SUPPORT FITTING                   |          |                        |    |    |   |
| 40      | VIT0003112      | SPRING WASHER 17x26x1,2           |          |                        |    |    |   |
| 41      | Z0100001105     | CONNECTOR                         |          |                        |    |    |   |

CABINET CONTROL PANEL

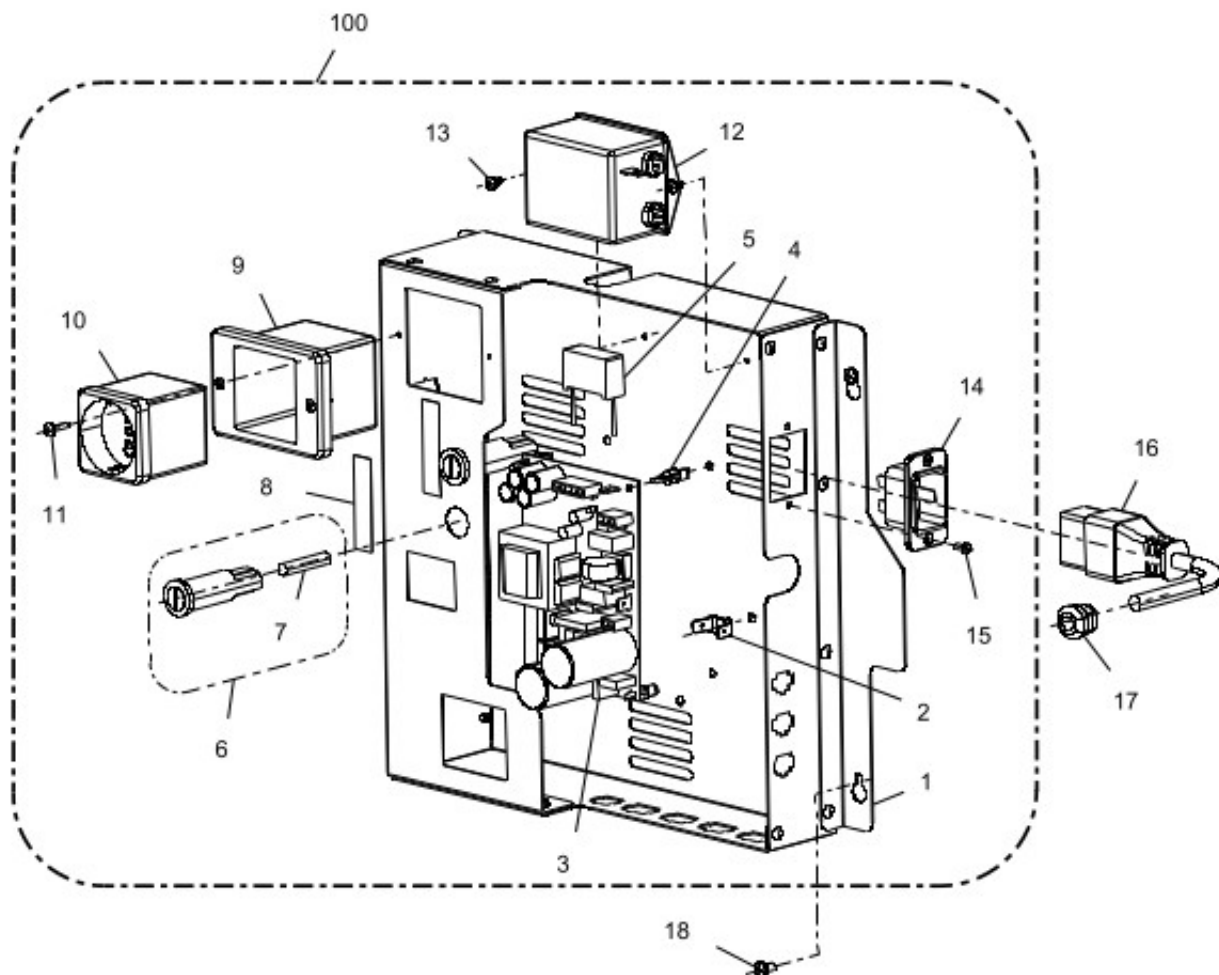


| CABINET CONTROL PANEL |                |                                |          |                        |   |   |   |
|-----------------------|----------------|--------------------------------|----------|------------------------|---|---|---|
|                       |                |                                |          | Preventive Maintenance |   |   |   |
| Pos.                  | Code           | Description                    | Critical | A                      | B | C | D |
| 1                     | Z013B170001    | ELECTRIC PANEL                 |          |                        |   |   |   |
| 2                     | ELE0060520     | GROUND PIN                     |          |                        |   |   |   |
| 3                     | SCHA161001     | SWITCHING BOARD                | X        |                        |   |   |   |
| 4                     | ELE0062003     | BOARD SUPPORT                  |          |                        |   |   |   |
| 5                     | ELT0001503CL   | § FILTER RC 220                |          |                        |   |   |   |
| 6                     | ELE0003509CL1  | FUSE HOLDER+FUSE 16A           |          |                        |   |   |   |
| 7                     | ELE0003043     | FUSE 6,3X32 16A                | X        |                        |   |   |   |
| 8                     | 1010100212     | FUSE F 16A LABEL               |          |                        |   |   |   |
| 9                     | ELE0002307     | ELECTRIC SOCKET 2 POSITION     |          |                        |   |   |   |
| 10                    | ELE0002319     | MAINS SOCKET SCHUKO            | X        |                        |   |   |   |
| 11                    | VIT0002004     | SCREW ST HEAD CAP M3.5X13      |          |                        |   |   |   |
| 12                    | ELE0009066     | NOISE FILTER 16A               | X        |                        |   |   |   |
| 13                    | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5     |          |                        |   |   |   |
| 14                    | ELE0002350     | MAINS SOCKET 16A               | X        |                        |   |   |   |
| 15                    | VIT0000121     | SCREW COUNT FLAT HEAD M3X8     |          |                        |   |   |   |
| 16                    | ELE0055054     | SUPPLY CABLE+PLUG+SCHUK.SOCKET |          |                        |   |   |   |
| 17                    | H00021073      | REOPENABLE PLAST CABLE LOCK    |          |                        |   |   |   |
| 18                    | VIT0000011     | SCREW HEAD TAP CAP M4X8        |          |                        |   |   |   |
| 100                   | Z013B170001CL2 | § ELECTRICAL PANEL             |          |                        |   |   |   |

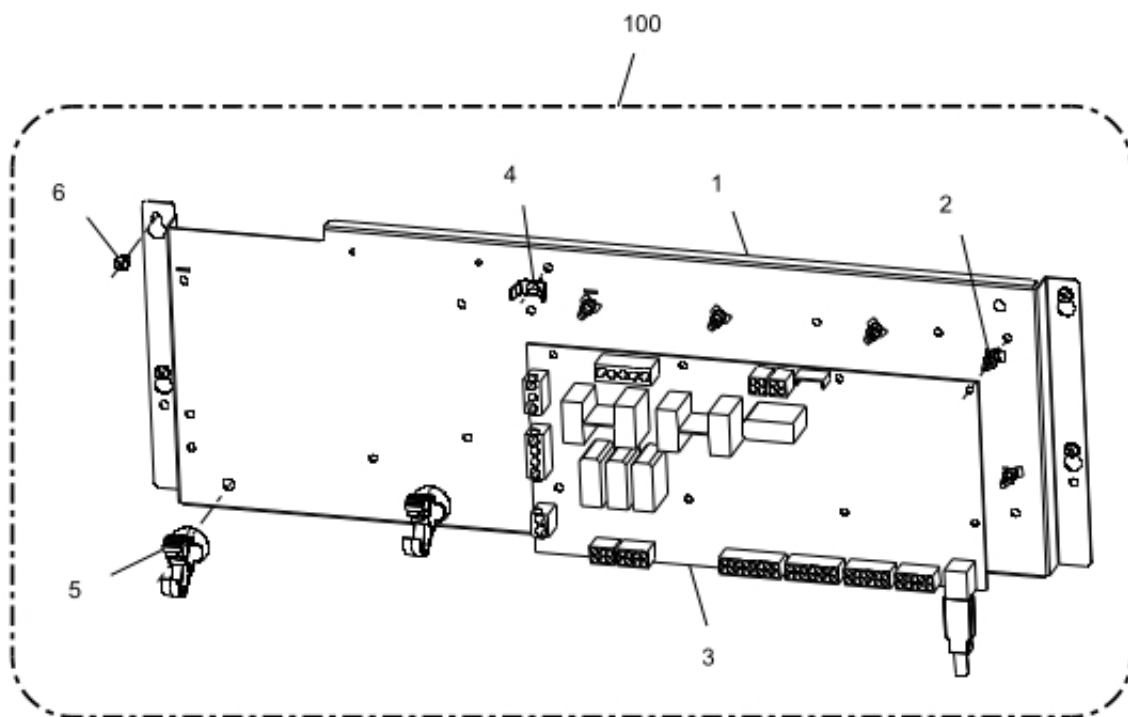


| POWER BOARD SUPPORT |                |                          |          |                        |   |   |   |
|---------------------|----------------|--------------------------|----------|------------------------|---|---|---|
|                     |                |                          |          | Preventive Maintenance |   |   |   |
| Pos.                | Code           | Description              | Critical | A                      | B | C | D |
| 1                   | Z013B170002    | SUPPORT ELECTRONIC BOARD |          |                        |   |   |   |
| 2                   | ELE0062003     | BOARD SUPPORT            |          |                        |   |   |   |
| 3                   | SCH0010580     | POWER BOARD              | X        |                        |   |   |   |
| 4                   | FASC000219     | PIPE CLIP 1 WAY          |          |                        |   |   |   |
| 5                   | ELE0060520     | GROUND PIN               |          |                        |   |   |   |
| 6                   | 1010100111     | GROUND WIRING LABEL      |          |                        |   |   |   |
| 7                   | VIT0000011     | SCREW HEAD TAP CAP M4X8  |          |                        |   |   |   |
| 100                 | Z013B170002CL7 | § POWER BOARD SUPPORT E  |          |                        |   |   |   |

ESPRESSO BOILER DISPENSER

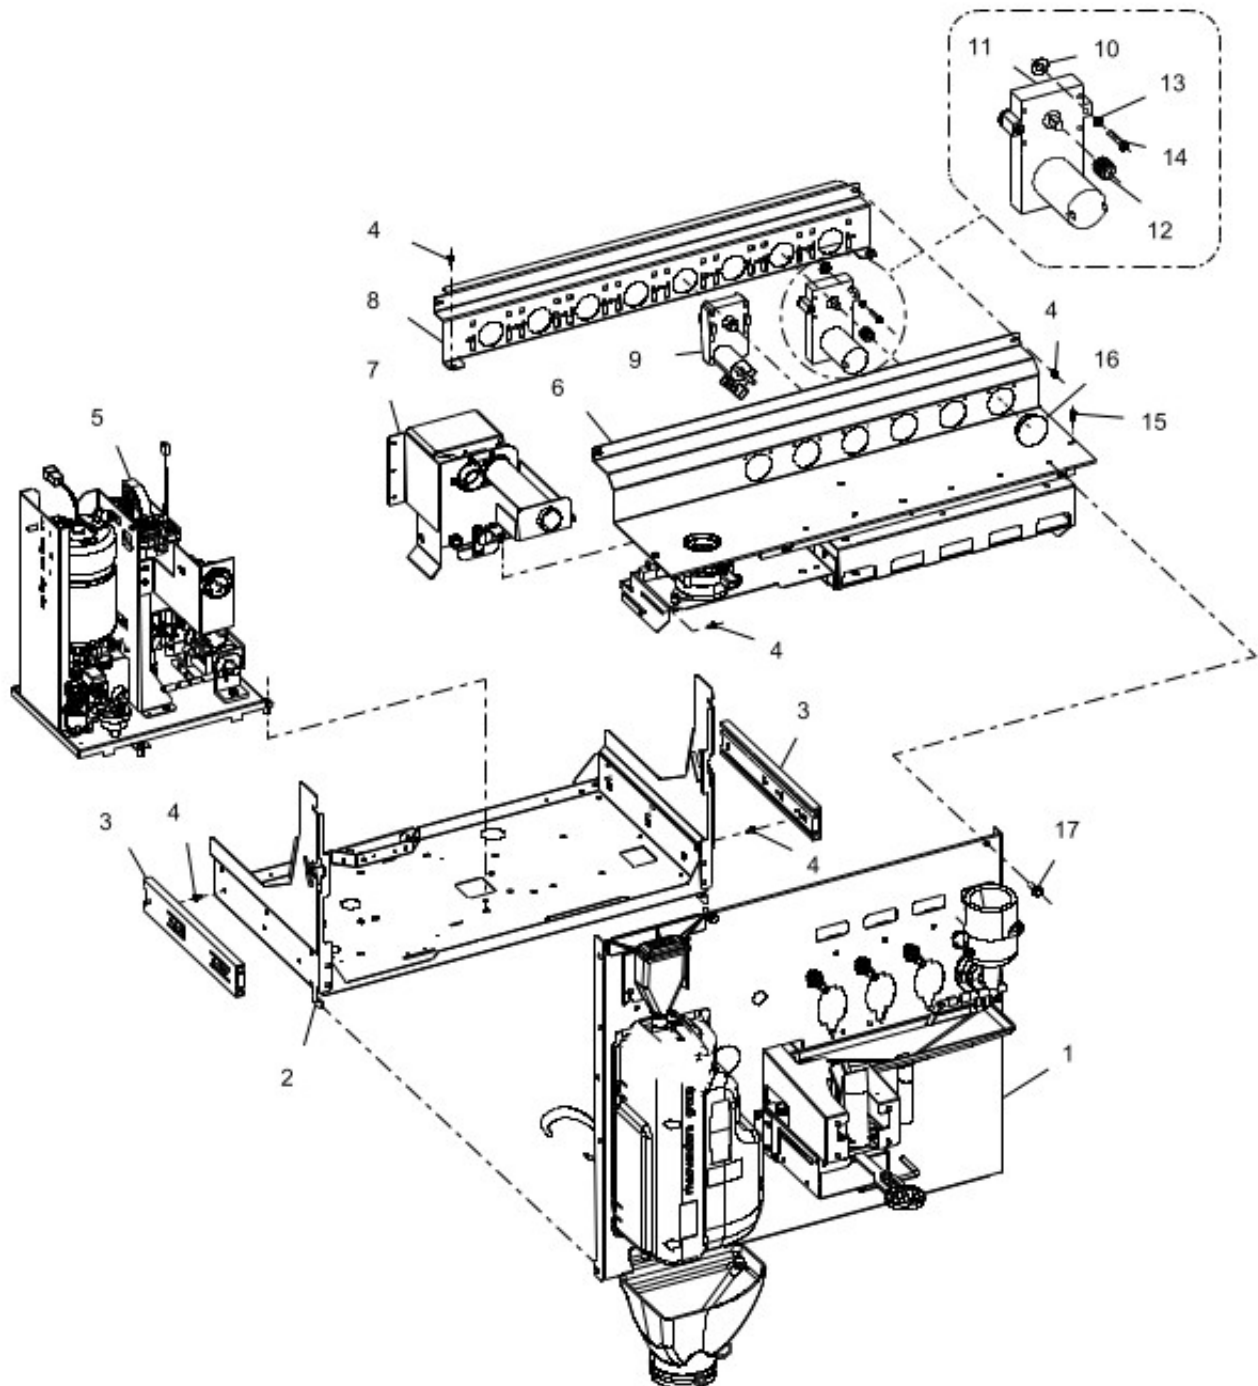


| ESPRESSO BOILER DISPENSER |                 |                                         |          |                        |   |   |   |
|---------------------------|-----------------|-----------------------------------------|----------|------------------------|---|---|---|
|                           |                 |                                         |          | Preventive Maintenance |   |   |   |
| Pos.                      | Code            | Description                             | Critical | A                      | B | C | D |
| 1                         |                 | See table mixer plan                    |          |                        |   |   |   |
| 2                         | Z0072300150     | § IDRAULIC PLAN                         |          |                        |   |   |   |
| 3                         | Z0070015144     | TELESCOPICS GUIDE                       |          |                        |   |   |   |
| 4                         | VIT0000011      | SCREW HEAD TAP CAP M4X8                 |          |                        |   |   |   |
| 5                         |                 | See table VIBRATION PUMP HYDRIC CIRCUIT |          |                        |   |   |   |
| 6                         |                 | See table GRINDER SUPPORT               |          |                        |   |   |   |
| 7                         |                 | See table ASPIRATION FAN                |          |                        |   |   |   |
| 8/a                       | Z007B170081     | GEARMOTORS SUPPORT                      |          |                        |   |   |   |
| 8/b                       | Z007B170270     | GEAR MOTORS SUPPORT                     |          |                        |   |   |   |
| 9                         | Z0090002113R-01 | § GEARBOX MOTOR 24V DC+FILTER           |          |                        |   |   |   |
| 10                        | Z0090002079     | SPACER                                  |          |                        |   |   |   |
| 11/a                      | Z0090002093     | GEAR MOTOR 33 RPM 24V DC                | X        |                        |   |   | X |
| 11/b                      | Z0090002082     | MOTOR 24 DC 55 RPM                      | X        |                        |   |   | X |
| 11/c                      | Z0090002081     | MOTOR 24 DC 85 RPM                      | X        |                        |   |   | X |
| 12                        | Z0230012010     | PINION                                  | X        |                        |   |   | X |
| 13                        | VIT0003103      | SPRING WASHER 4,3                       |          |                        |   |   |   |
| 14                        | VIT0000015      | SCREW HEAD TAP CAP M4X25                |          |                        |   |   |   |
| 15                        | VIT0000012      | SCREW HEAD TAP CAP M4X10                |          |                        |   |   |   |
| 16                        | GUA0011005      | RELEASE PLUG                            |          |                        |   |   |   |
| 17                        | VIT0000264      | SCREW M6X20+F.R. A2 DIN 6921            |          |                        |   |   |   |

ESPRESSO BOILER DISPENSER W/ROTATIVE PUMP

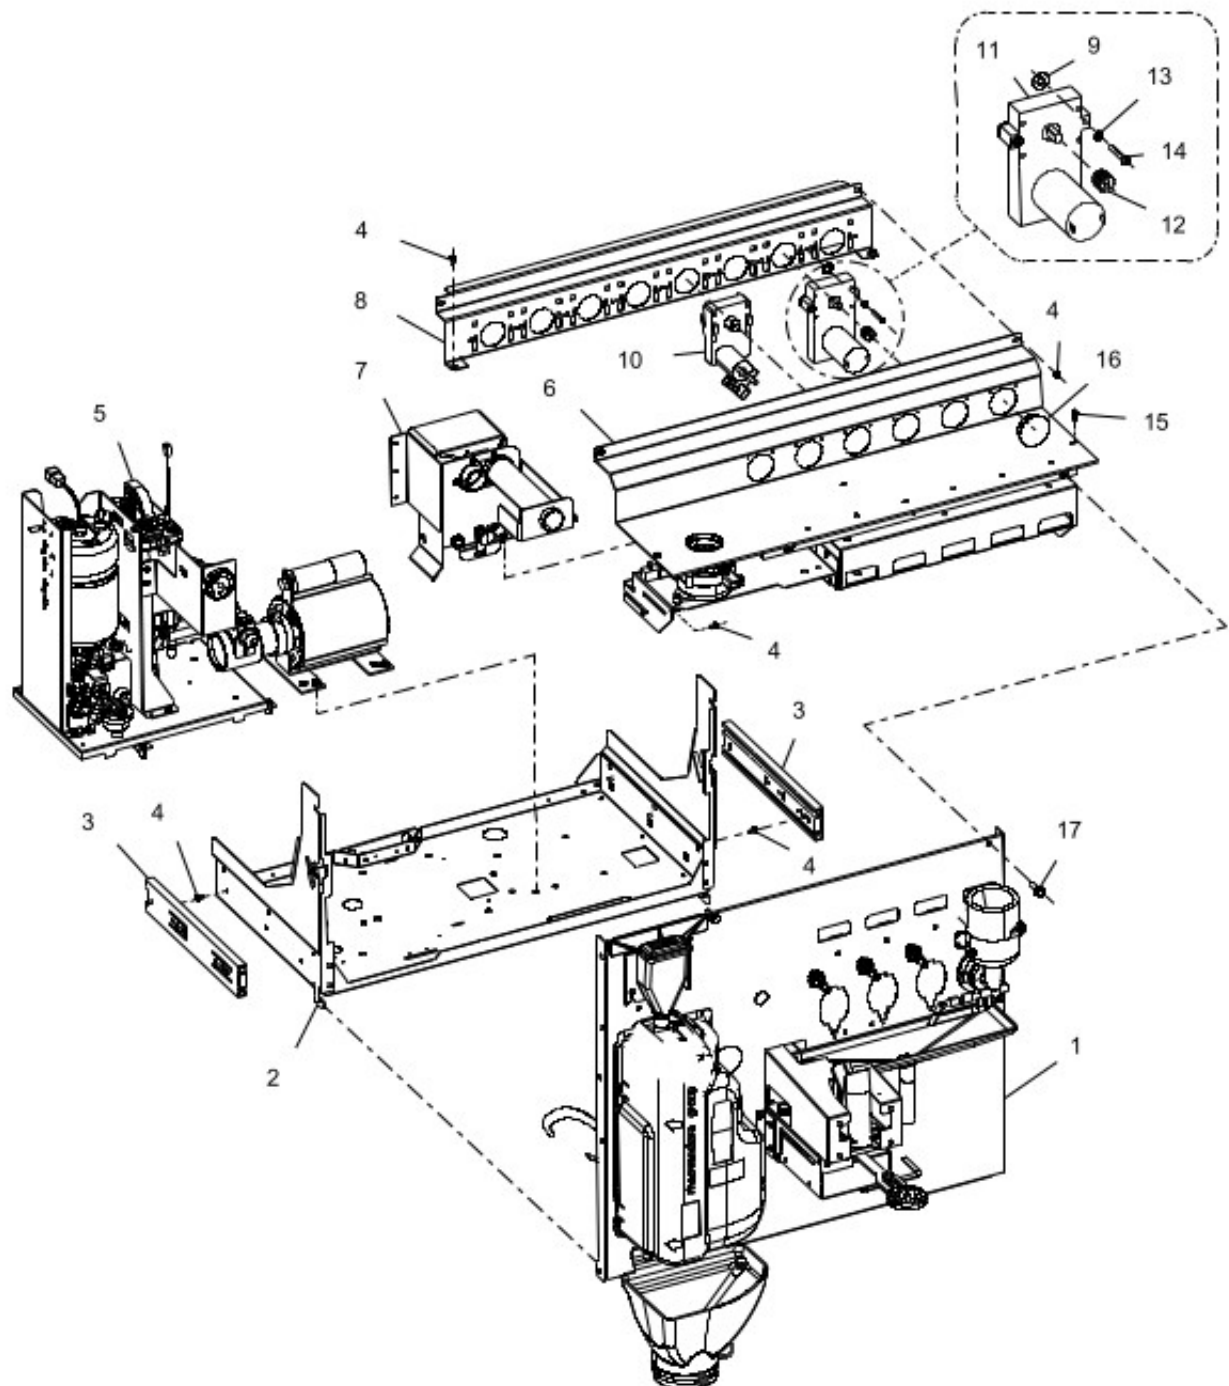


| ESPRESSO BOILER DISPENSER W/ROTATIVE PUMP |                 |                                        |          |                        |   |   |   |
|-------------------------------------------|-----------------|----------------------------------------|----------|------------------------|---|---|---|
|                                           |                 |                                        |          | Preventive Maintenance |   |   |   |
| Pos.                                      | Code            | Description                            | Critical | A                      | B | C | D |
| 1                                         |                 | See table mixer plan                   |          |                        |   |   |   |
| 2                                         | Z0072300150     | § IDRAULIC PLAN                        |          |                        |   |   |   |
| 3                                         | Z0070015144     | TELESCOPICS GUIDE                      |          |                        |   |   |   |
| 4                                         | VIT0000011      | SCREW HEAD TAP CAP M4X8                |          |                        |   |   |   |
| 5                                         |                 | See table ROTATIVE PUMP HYDRIC CIRCUIT |          |                        |   |   |   |
| 6                                         |                 | See table GRINDER SUPPORT              |          |                        |   |   |   |
| 7                                         |                 | See table ASPIRATION FAN               |          |                        |   |   |   |
| 8/a                                       | Z007B170081     | GEARMOTORS SUPPORT                     |          |                        |   |   |   |
| 8/b                                       | Z007B170270     | GEAR MOTORS SUPPORT                    |          |                        |   |   |   |
| 9                                         | Z0090002079     | SPACER                                 |          |                        |   |   |   |
| 10                                        | Z0090002113R-01 | § GEARBOX MOTOR 24V DC+FILTER          |          |                        |   |   |   |
| 11/a                                      | Z0090002093     | GEAR MOTOR 33 RPM 24V DC               | X        |                        |   |   | X |
| 11/b                                      | Z0090002082     | MOTOR 24 DC 55 RPM                     | X        |                        |   |   | X |
| 11/c                                      | Z0090002081     | MOTOR 24 DC 85 RPM                     | X        |                        |   |   | X |
| 12                                        | Z0230012010     | PINION                                 | X        |                        |   |   | X |
| 13                                        | VIT0003103      | SPRING WASHER 4,3                      |          |                        |   |   |   |
| 14                                        | VIT0000015      | SCREW HEAD TAP CAP M4X25               |          |                        |   |   |   |
| 15                                        | VIT0000012      | SCREW HEAD TAP CAP M4X10               |          |                        |   |   |   |
| 16                                        | GUA0011005      | RELEASE PLUG                           |          |                        |   |   |   |
| 17                                        | VIT0000264      | SCREW M6X20+F.R. A2 DIN 6921           |          |                        |   |   |   |


mixer plan

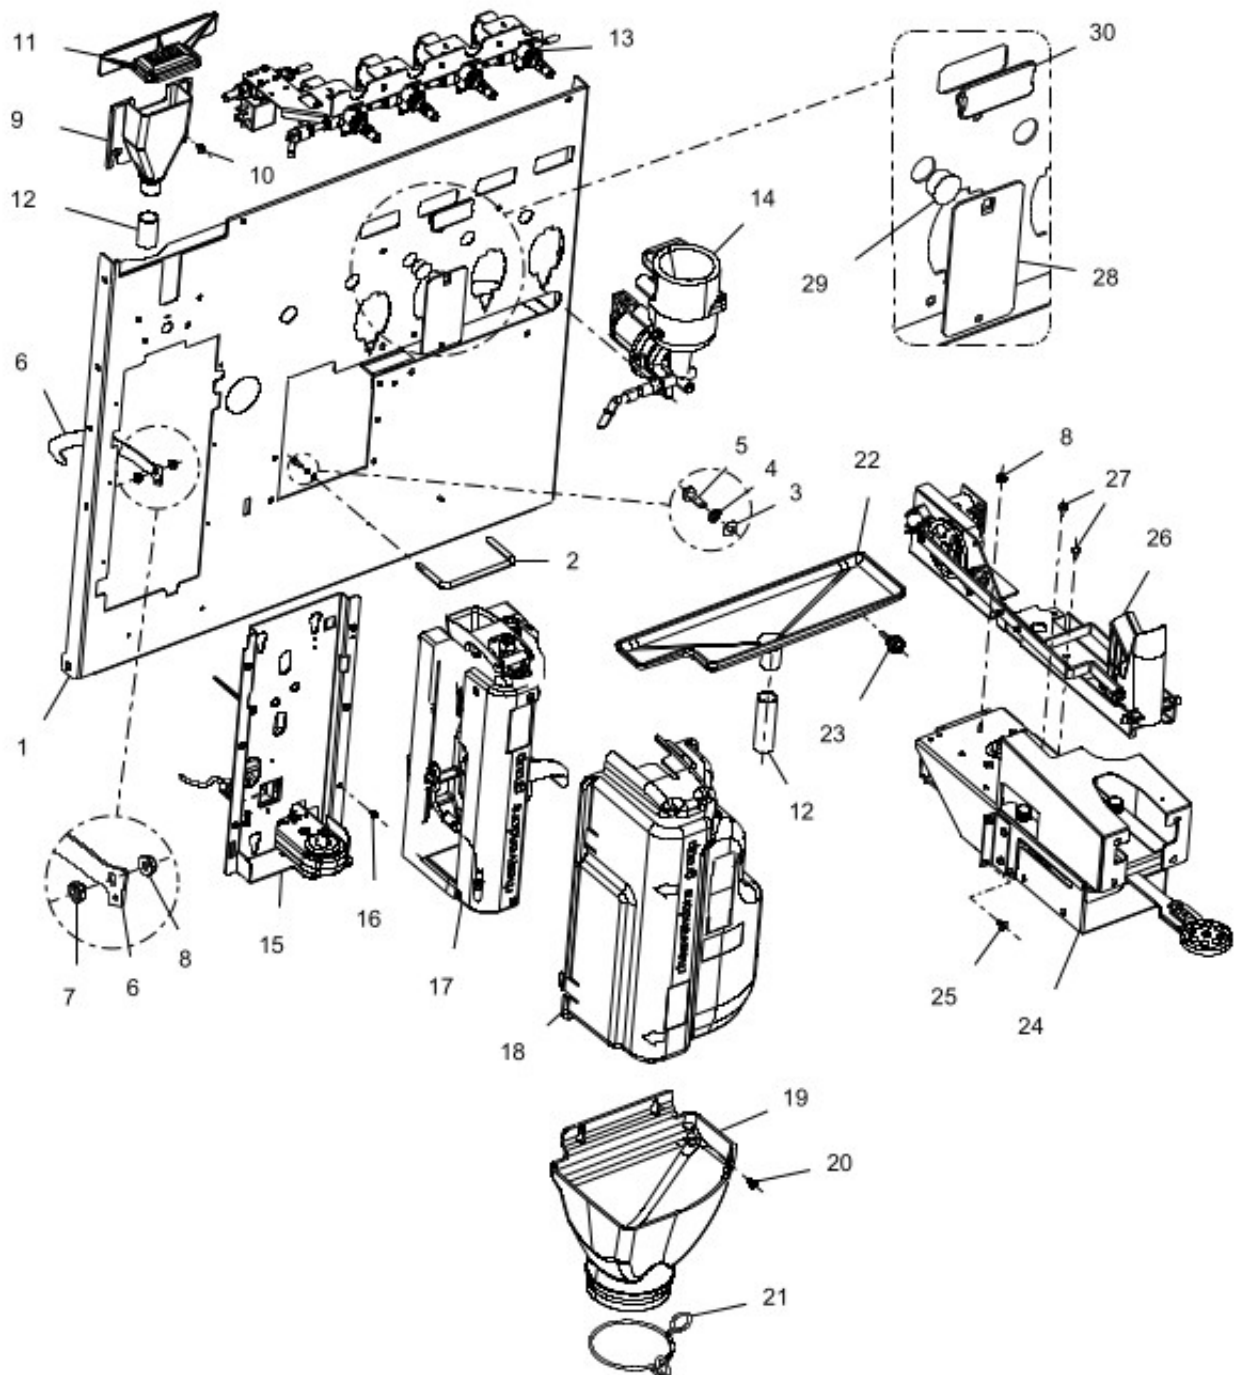

| mixer plan |                |                                             |          |                        |   |   |   |
|------------|----------------|---------------------------------------------|----------|------------------------|---|---|---|
|            |                |                                             |          | Preventive Maintenance |   |   |   |
| Pos.       | Code           | Description                                 | Critical | A                      | B | C | D |
| 1/a        | Z0072300012    | MIXER SUPPORT PLATE                         |          |                        |   |   |   |
| 1/b        | Z0072300026    | MIXER SUPPORT PLATE                         |          |                        |   |   |   |
| 2          | Z0070015143    | BOTTOM EXTRACTABLE HANDLE                   |          |                        |   |   |   |
| 3          | VIT0003002     | WASHER 3,2X7X0,5                            |          |                        |   |   |   |
| 4          | VIT0003102     | SPRING WASHER 3,2                           |          |                        |   |   |   |
| 5          | VIT0000004     | SCREW HEAD TAP CAP M3X10                    |          |                        |   |   |   |
| 6          | Z007B170093    | OPENING GUIDE                               |          |                        |   |   |   |
| 7          | H66100008      | SPACER                                      |          |                        |   |   |   |
| 8          | DAM0000056     | NUT M4                                      |          |                        |   |   |   |
| 9          | Z0072500009NA  | COFFEE CHUTE 1M GV                          |          |                        |   |   |   |
| 10         | VIT0000021     | SCREW HEAD TAP CAP M4X6                     |          |                        |   |   |   |
| 11         | Z0072500010NA  | COFFEE CHUTE COVER 1M GV                    |          |                        |   |   |   |
| 12/a       | TSIL15/19T-10  | SILICON HOSE 15X19 MT.10                    | X        | Y                      | Y | Y | Y |
| 12/a       | TSIL15/19T-50  | SILICON HOSE 15X19 MT.50                    |          |                        |   |   |   |
| 13/a       |                | See table SOLUBLES VALVES                   |          |                        |   |   |   |
| 13/b       |                | See table SOLUBLES VALVES W/HOT WATER       |          |                        |   |   |   |
| 14         |                | See table mixer                             |          |                        |   |   |   |
| 15         |                | See table PRO BREWER SUPPORT+MOTOR          |          |                        |   |   |   |
| 16         | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5                  |          |                        |   |   |   |
| 17/a       |                | See table PROFESSIONAL BREWER GROUP D.36    |          |                        |   |   |   |
| 17/b       |                | See table PROFESSIONAL BREWER GROUP D.45    |          |                        |   |   |   |
| 18         | Z0250014074CL1 | § VARIFLEX BREWER COVER-FS                  |          |                        |   |   |   |
| 19         | Z0070015151NA  | GROUND'S CONTAINER                          |          |                        |   |   |   |
| 20         | VIT0002401     | SCREW ST HEAD CAP M3.5X9.5                  |          |                        |   |   |   |
| 21         | Z0070015149    | GROUND'S BAG FIXING SPRING                  |          |                        |   |   |   |
| 22         | Z007B170229NA  | MIXER BOWL                                  |          |                        |   |   |   |
| 23         | VIT0009180     | HANDLE                                      |          |                        |   |   |   |
| 24/a       |                | See table PIPES MOVEMENT W/SUGAR MOVEMENT   |          |                        |   |   |   |
| 24/b       |                | See table PIPES MOVEMENT W/O SUGAR MOVEMENT |          |                        |   |   |   |
| 25         | VIT0000021     | SCREW HEAD TAP CAP M4X6                     |          |                        |   |   |   |
| 26         |                | See table SUGAR MOVEMENT                    |          |                        |   |   |   |
| 27         | VIT0000204     | SCREW HEX HEAD M4X8                         |          |                        |   |   |   |
| 28         | Z0010020028NA  | MIXER PLUG BLACK                            |          |                        |   |   |   |
| 29         | GUA0011010     | PLUG                                        |          |                        |   |   |   |
| 30         | Z0070014776    | TRAP PLUG                                   |          |                        |   |   |   |

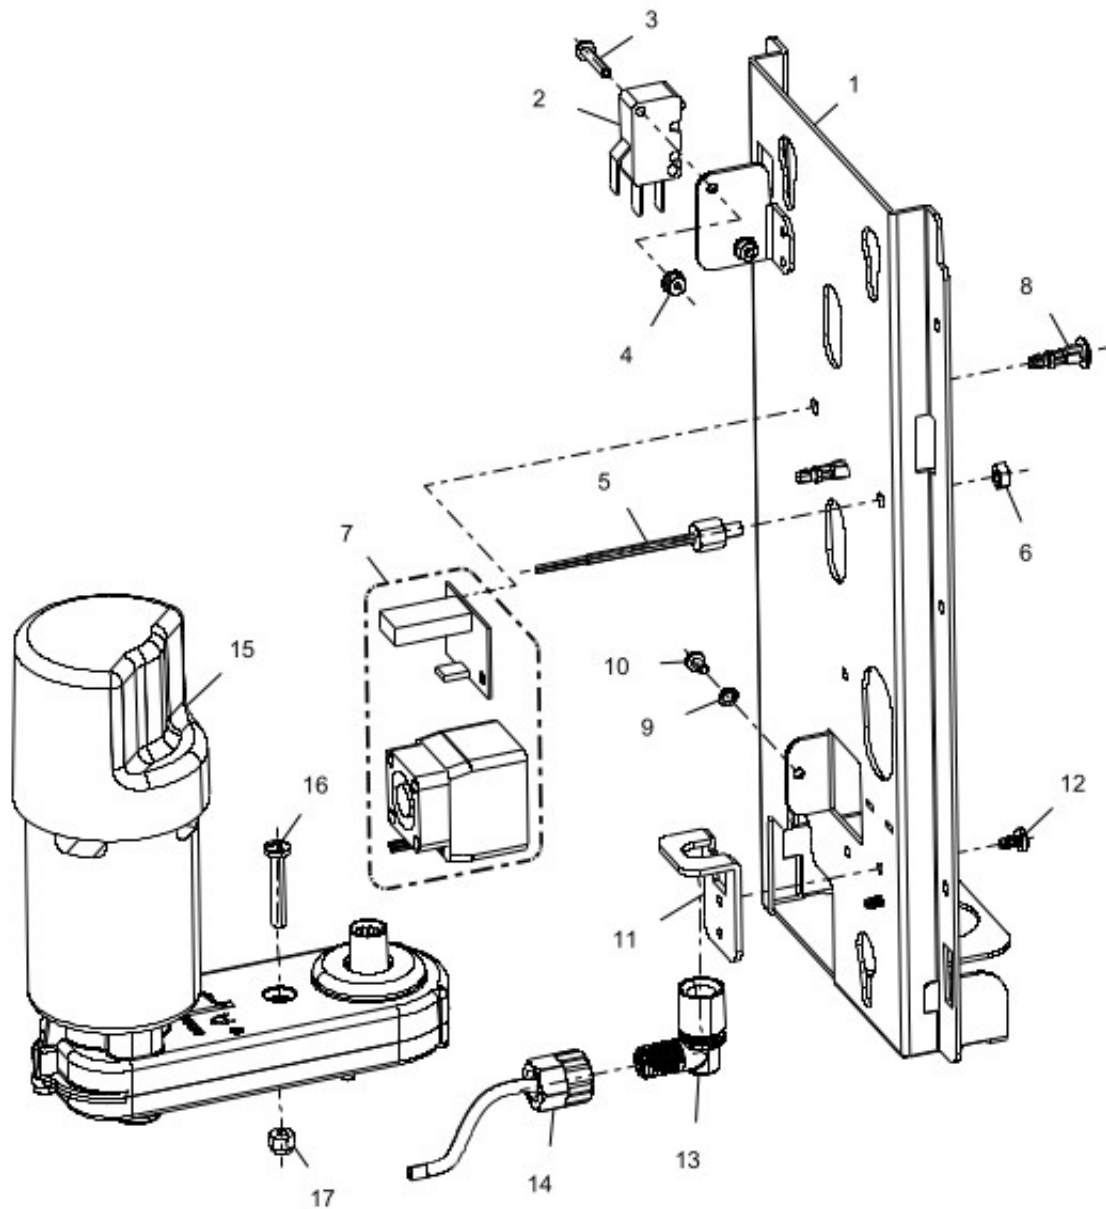


| PRO BREWER SUPPORT+MOTOR |                |                                |          |                        |   |    |   |
|--------------------------|----------------|--------------------------------|----------|------------------------|---|----|---|
|                          |                |                                |          | Preventive Maintenance |   |    |   |
| Pos.                     | Code           | Description                    | Critical | A                      | B | C  | D |
| 1                        | Z0260014042    | VARIFLEX BREWER SUPPORT        |          |                        |   |    |   |
| 2                        | ELE0001522     | MICROSWITCH                    | X        |                        |   |    |   |
| 3                        | VIT0000006     | SCREW HEAD TAP CAP M3X16       |          |                        |   |    |   |
| 4                        | VIT0004701     | NUT M3                         |          |                        |   |    |   |
| 5                        | ELE0000932     | PROBE                          | X        |                        |   |    |   |
| 6                        | VIT0004803     | NUT M4                         |          |                        |   |    |   |
| 7                        | ELE0000467-02  | FAN HEATER 24V DC + BOARD      | X        |                        |   |    |   |
| 8                        | ELE0062020     | BOARD SUPPORT                  |          |                        |   |    |   |
| 9                        | VIT0003102     | SPRING WASHER 3,2              |          |                        |   |    |   |
| 10                       | VIT0000002     | SCREW HEAD TAP CAP M3X6        |          |                        |   |    |   |
| 11                       | Z0260014009-01 | H2O CONNECTOR SUPPORT          |          |                        |   |    |   |
| 12                       | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5     |          |                        |   |    |   |
| 13                       | Z0250014084-02 | FEMALE CONNECTOR               |          |                        |   |    |   |
| 14                       | Z0250014086R8  | §WATER INLET TUBE 0,19 mt      |          |                        |   |    |   |
| 15                       | Z0090002250R   | § VARIFLEX BREW. GEARBOX MOTOR | X        |                        |   | CK | X |
| 16                       | VIT0000015     | SCREW HEAD TAP CAP M4X25       |          |                        |   |    |   |
| 17                       | VIT0004815     | NUT M4                         |          |                        |   |    |   |

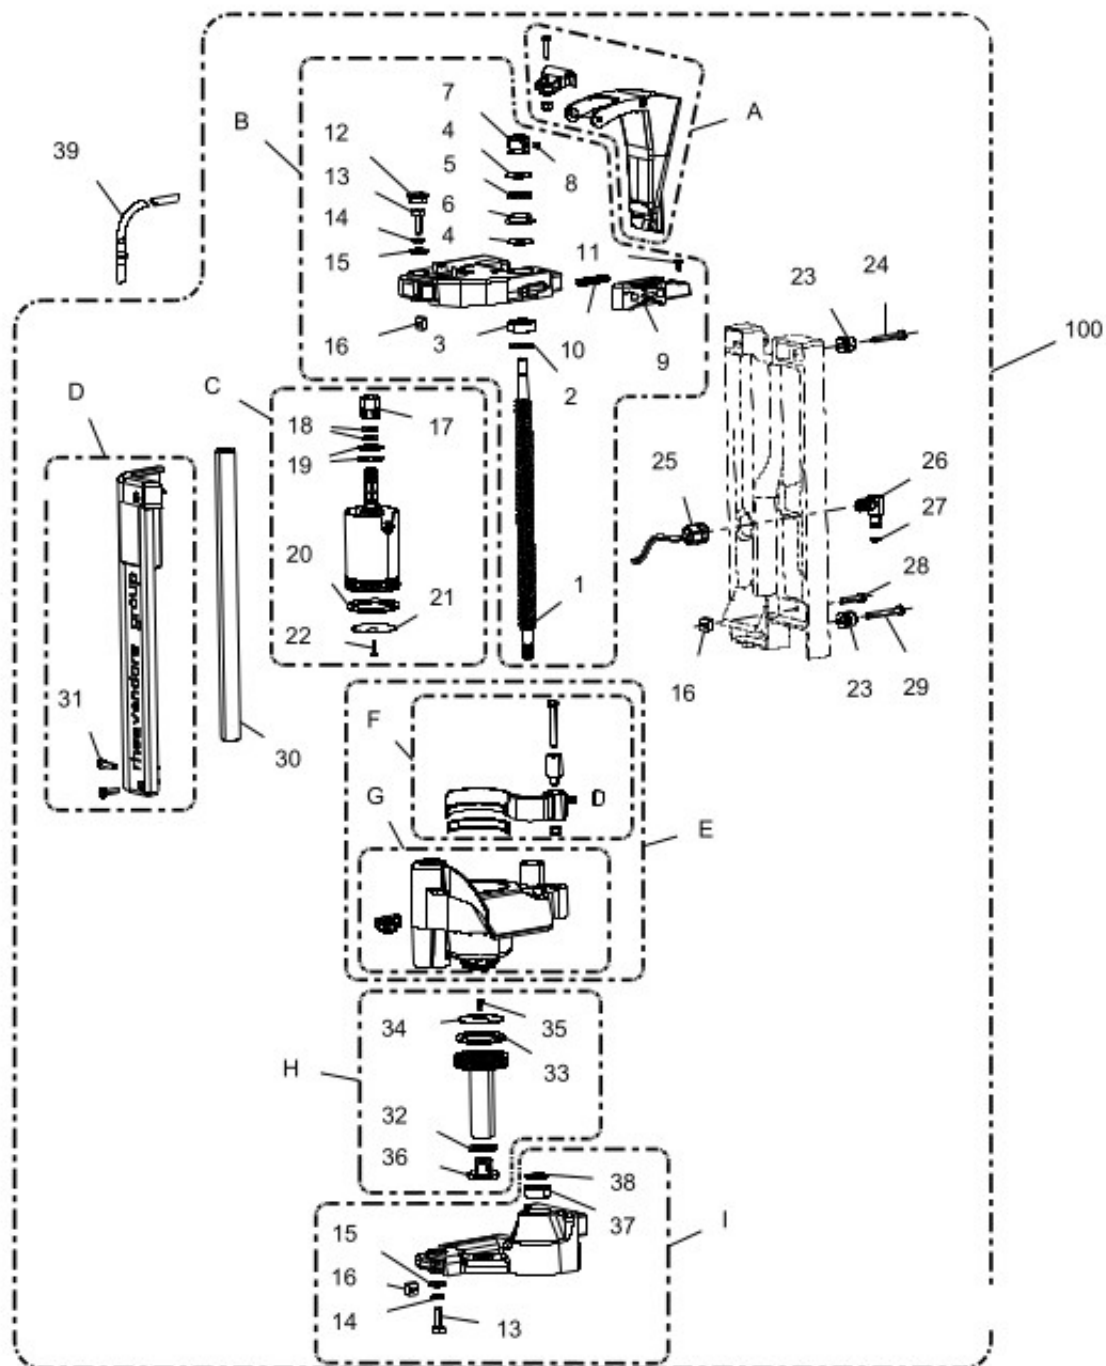

| PROFESSIONAL BREWER GROUP D.36 |                |                              |          |                        |    |    |    |
|--------------------------------|----------------|------------------------------|----------|------------------------|----|----|----|
|                                |                |                              |          | Preventive Maintenance |    |    |    |
| Pos.                           | Code           | Description                  | Critical | A                      | B  | C  | D  |
| A                              | Z0250014033R   | § CHUTE D. 36                | X        |                        |    |    |    |
| B                              | Z0250014005R2  | SUPPER SUPPORT WITHOUT CHUTE |          |                        |    |    |    |
| C                              | Z0250014040R   | § UPPER FILTER HOLDER D.36   | X        |                        |    |    |    |
| D                              | Z0250014019R   | § FRONTAL COVER              |          |                        |    |    |    |
| E                              | Z0250014030R   | § CHAMBER D.36               | X        |                        |    |    |    |
| F                              | Z0250014034R   | § BRUSH D.36                 | X        | X                      | X  | X  | X  |
| G                              | Z0250014032R   | § INFUSION CHAMBER D.36      | X        |                        |    |    |    |
| H                              | Z0250014038R   | § LOWER FILTER HOLDER D.36   | X        |                        |    |    |    |
| I                              | Z0250014012R   | § LOWER SUPPORT              |          |                        |    |    |    |
| 1                              | Z0250014016    | SCREW 14x4                   |          |                        |    |    |    |
| 2                              | Z0250014077    | SPACER                       |          |                        |    |    |    |
| 3                              | VIT0009320     | BEARING                      |          |                        |    |    |    |
| 4                              | VIT0009318     | SPACER WASHER                | X        |                        |    |    | CK |
| 5                              | VIT0009317     | BEARING                      | X        |                        |    |    | CK |
| 6                              | GUA0001007     | V RING GASKET VA16           | X        |                        |    |    | CK |
| 7                              | Z0250014071    | NUT M8                       |          |                        |    |    |    |
| 8                              | VIT0007011     | SET SCREW 4X4                |          |                        |    |    |    |
| 9                              | Z0250014082    | BREWER STOPPER BUTTON        |          |                        |    |    |    |
| 10                             | Z0250014081    | SPRING                       | X        |                        |    |    |    |
| 11                             | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5   |          |                        |    |    |    |
| 12                             | GUA0011022     | PLUG                         |          |                        |    |    |    |
| 13                             | VIT0000249     | SCREW HEX HEAD M6X16         |          |                        |    |    |    |
| 14                             | VIT0003113     | SPRING WASHER 6,4            |          |                        |    |    |    |
| 15                             | Z0250014079    | WASHER D.15 D.6,5 SP.1,5     |          |                        |    |    |    |
| 16                             | VIT0009112     | NUT M4                       |          |                        |    |    |    |
| 17                             | Z0250014086    | NUT                          |          |                        |    |    |    |
| 18                             | GUA0000045     | OR 108 VITON 80 BLACK        | X        | CK                     | Y* | Y* | Y* |
| 19                             | Z0250014048    | SPRING                       | X        | CK                     | X2 | X2 | X2 |
| 20                             | GUA0000080     | OR 4112 RED SILICONE LSR70   | X        | CK                     | Y* | Y* | Y* |
| 21                             | Z0250008099    | COFFEE FILTER 33,4           | X        | CK                     | Y  | Y  | Y  |
| 22                             | VIT0000129     | SCREW COUNT HEAD M3X12       |          |                        |    |    |    |
| 23                             | Z0250014072    | PIN                          |          |                        |    |    |    |
| 24                             | VIT0001006     | SCREW HEAD TAP CAP M4X30     |          |                        |    |    |    |
| 25                             | Z0250014086CL1 | §WATER INLET TUBE 0,119 mt   |          |                        |    |    |    |
| 26                             | Z0250014085    | MALE CONNECTOR               |          |                        |    |    |    |
| 27                             | GUA0000004     | OR 104 NBR AL 75 BLACK       | X        | CK                     | X  | X  | X  |
| 28                             | VIT0001011     | SCREW HEAD TAP CAP M4X20     |          |                        |    |    |    |
| 29                             | VIT0000033     | SCREW HEAD TAP CAP M4X35     |          |                        |    |    |    |
| 30                             | Z0250014013-04 | CYLINDRICAL GUIDE            |          |                        |    |    |    |
| 31                             | VIT0001009     | SCREW HEAD TAP CAP M4X16     |          |                        |    |    |    |
| 32                             | GUA0000103     | OR 3075 SILICON              | X        | CK                     | Y* | Y* | Y* |
| 33                             | GUA0000080     | OR 4112 RED SILICONE LSR70   | X        | CK                     | Y* | Y* | Y* |
| 34                             | Z0250008019    | COFFEE FILTER                | X        | CK                     | Y  | Y  | Y  |
| 35                             | VIT0000121     | SCREW COUNT FLAT HEAD M3X8   |          |                        |    |    |    |
| 36                             | Z0250014027    | LOWER PISTON LOCK            |          |                        |    |    |    |


| PROFESSIONAL BREWER GROUP D.36 |                |                               |   |  |  |  |    |
|--------------------------------|----------------|-------------------------------|---|--|--|--|----|
| 37                             | VIT0009320     | BEARING                       | X |  |  |  | CK |
| 38                             | Z0250014077    | SPACER                        |   |  |  |  |    |
| 39                             | Z0250008132CL1 | § COFFEE OUTLET PIPE RAL5012  |   |  |  |  |    |
| 100                            | Z0250014060CL  | § COFFEE BREWER VARIFLEX D.36 | X |  |  |  |    |
| 101                            | Z0250014082R   | § BUTTON EXTRACTION+SPRING    |   |  |  |  |    |

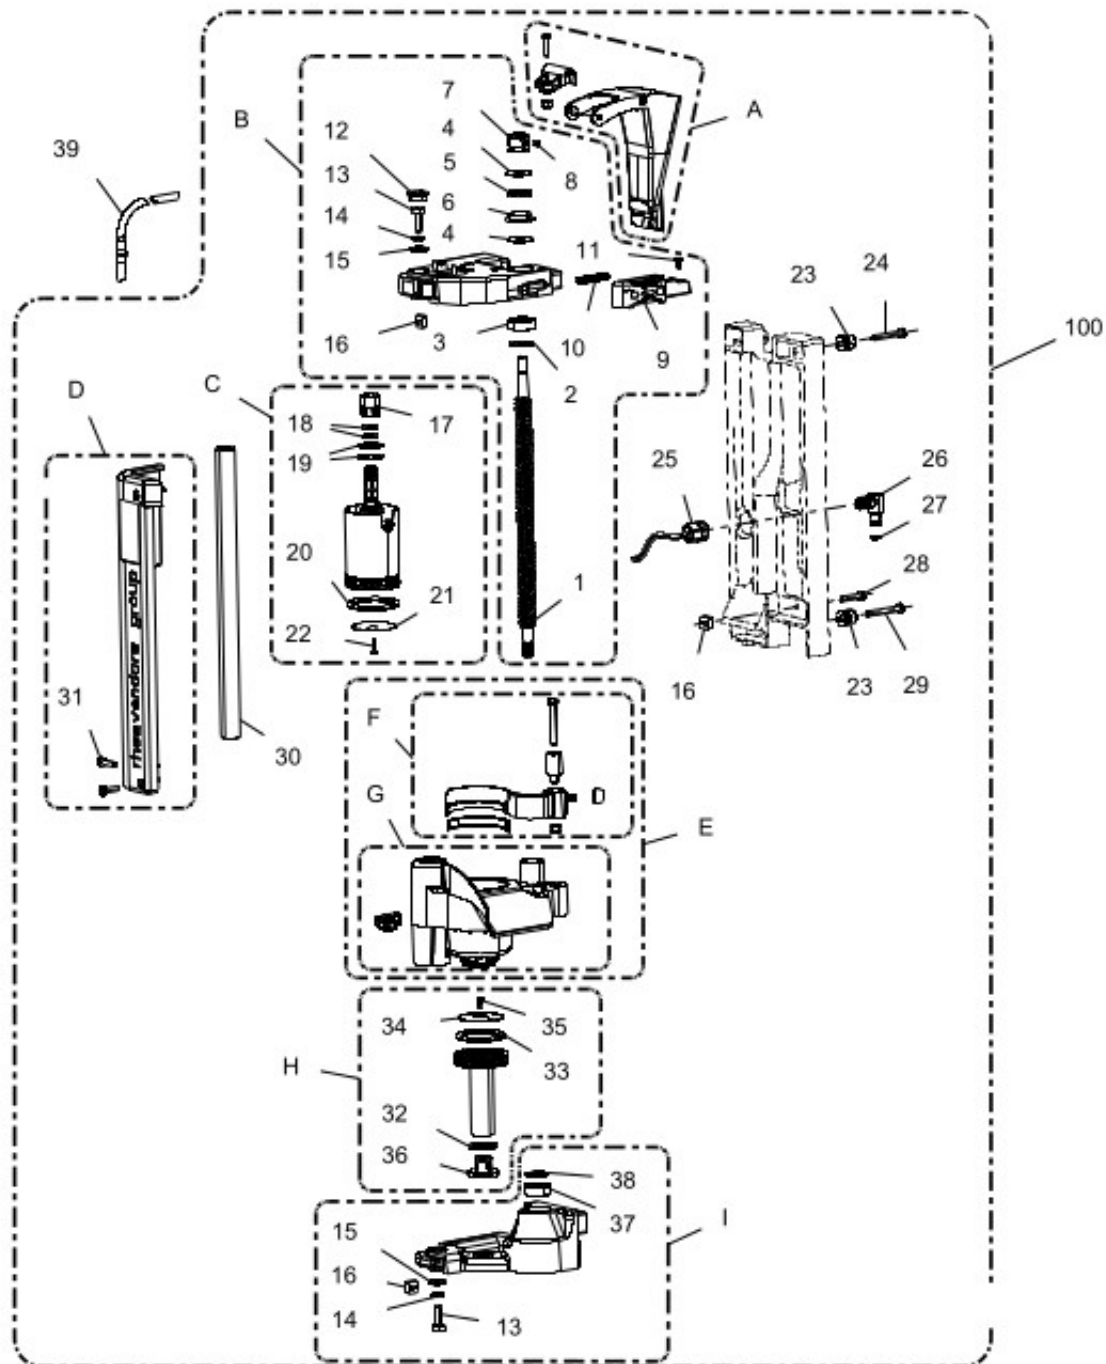

| PROFESSIONAL BREWER GROUP D.45 |                |                              |          |                        |    |    |    |
|--------------------------------|----------------|------------------------------|----------|------------------------|----|----|----|
|                                |                |                              |          | Preventive Maintenance |    |    |    |
| Pos.                           | Code           | Description                  | Critical | A                      | B  | C  | D  |
| A                              | Z0250014008R   | § CHUTE D. 45                | X        |                        |    |    |    |
| B                              | Z0250014005R2  | SUPPER SUPPORT WITHOUT CHUTE |          |                        |    |    |    |
| C                              | Z0250014045R   | § UPPER FILTER HOLDER D.45   | X        |                        |    |    |    |
| D                              | Z0250014019R   | § FRONTAL COVER              |          |                        |    |    |    |
| E                              | Z0250014020R   | § INFUSION CHAMBER D.45      | X        |                        |    |    |    |
| F                              | Z0250014024R   | § BRUSH D.45                 | X        | X                      | X  | X  | X  |
| G                              | Z0250014022R   | § INFUSION CHAMBER D.45      | X        |                        |    |    |    |
| H                              | Z0250014028R   | § LOWER FILTER HOLDER D.45   | X        |                        |    |    |    |
| I                              | Z0250014012R   | § LOWER SUPPORT              |          |                        |    |    |    |
| 1                              | Z0250014016    | SCREW 14x4                   |          |                        |    |    |    |
| 2                              | Z0250014077    | SPACER                       |          |                        |    |    |    |
| 3                              | VIT0009320     | BEARING                      |          |                        |    |    |    |
| 4                              | VIT0009318     | SPACER WASHER                | X        |                        |    |    | CK |
| 5                              | VIT0009317     | BEARING                      | X        |                        |    |    | CK |
| 6                              | GUA0001007     | V RING GASKET VA16           | X        |                        |    |    | CK |
| 7                              | Z0250014071    | NUT M8                       |          |                        |    |    |    |
| 8                              | VIT0007011     | SET SCREW 4X4                |          |                        |    |    |    |
| 9                              | Z0250014082    | BREWER STOPPER BUTTON        |          |                        |    |    |    |
| 10                             | Z0250014081    | SPRING                       | X        |                        |    |    |    |
| 11                             | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5   |          |                        |    |    |    |
| 12                             | GUA0011022     | PLUG                         |          |                        |    |    |    |
| 13                             | VIT0000249     | SCREW HEX HEAD M6X16         |          |                        |    |    |    |
| 14                             | VIT0003113     | SPRING WASHER 6,4            |          |                        |    |    |    |
| 15                             | Z0250014079    | WASHER D.15 D.6,5 SP.1,5     |          |                        |    |    |    |
| 16                             | VIT0009112     | NUT M4                       |          |                        |    |    |    |
| 17                             | Z0250014086    | NUT                          |          |                        |    |    |    |
| 18                             | GUA0000045     | OR 108 VITON 80 BLACK        | X        | CK                     | Y* | Y* | Y* |
| 19                             | Z0250014048    | SPRING                       | X        | CK                     | X2 | X2 | X2 |
| 20                             | GUA0000097     | OR 4131 RED SILICONE LSR70   | X        | CK                     | Y* | Y* | Y* |
| 21                             | Z0250008211    | COFFEE FILTER 37,3           | X        | CK                     | Y  | Y  | Y  |
| 22                             | VIT0000129     | SCREW COUNT HEAD M3X12       |          |                        |    |    |    |
| 23                             | Z0250014072    | PIN                          |          |                        |    |    |    |
| 24                             | VIT0001006     | SCREW HEAD TAP CAP M4X30     |          |                        |    |    |    |
| 25                             | Z0250014086CL1 | §WATER INLET TUBE 0,119 mt   |          |                        |    |    |    |
| 26                             | Z0250014085    | MALE CONNECTOR               |          |                        |    |    |    |
| 27                             | GUA0000004     | OR 104 NBR AL 75 BLACK       | X        | CK                     | X  | X  | X  |
| 28                             | VIT0001011     | SCREW HEAD TAP CAP M4X20     |          |                        |    |    |    |
| 29                             | VIT0000033     | SCREW HEAD TAP CAP M4X35     |          |                        |    |    |    |
| 30                             | Z0250014013-04 | CYLINDRICAL GUIDE            |          |                        |    |    |    |
| 31                             | VIT0001009     | SCREW HEAD TAP CAP M4X16     |          |                        |    |    |    |
| 32                             | GUA0000103     | OR 3075 SILICON              | X        | CK                     | Y* | Y* | Y* |
| 33                             | GUA0000097     | OR 4131 RED SILICONE LSR70   | X        | CK                     | Y* | Y* | Y* |
| 34                             | Z0250014029    | COFFEE FILTER DIAM. 37.3     | X        | CK                     | Y  | Y  | Y  |
| 35                             | VIT0000121     | SCREW COUNT FLAT HEAD M3X8   |          |                        |    |    |    |
| 36                             | Z0250014027    | LOWER PISTON LOCK            |          |                        |    |    |    |


| PROFESSIONAL BREWER GROUP D.45 |                |                              |   |  |  |  |    |
|--------------------------------|----------------|------------------------------|---|--|--|--|----|
| 37                             | VIT0009320     | BEARING                      | X |  |  |  | CK |
| 38                             | Z0250014077    | SPACER                       |   |  |  |  |    |
| 39                             | Z0250008132CL1 | § COFFEE OUTLET PIPE RAL5012 |   |  |  |  |    |
| 100                            | Z0250014000CL  | COFFEE BREWER VARIFLEX D 45  | X |  |  |  |    |
| 101                            | Z0250014082R   | § BUTTON EXTRACTION+SPRING   |   |  |  |  |    |

PIPES MOVEMENT W/SUGAR MOVEMENT

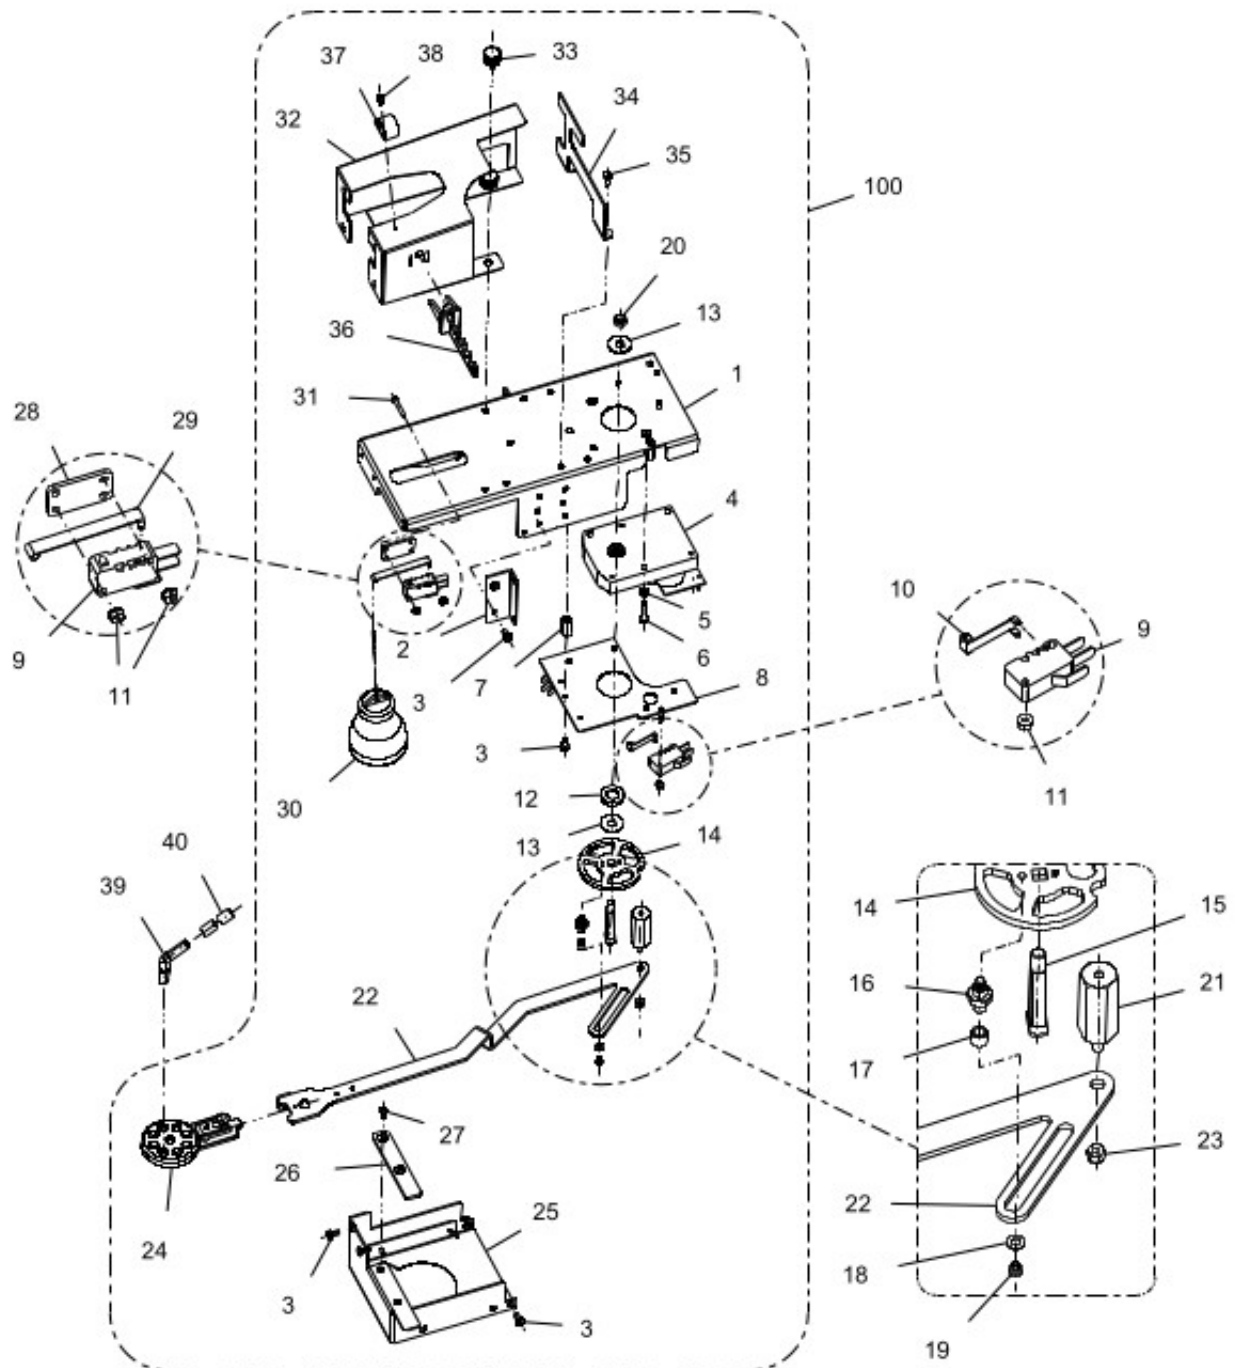


| PIPES MOVEMENT W/SUGAR MOVEMENT |                |                                |          |                        |   |   |      |
|---------------------------------|----------------|--------------------------------|----------|------------------------|---|---|------|
|                                 |                |                                |          | Preventive Maintenance |   |   |      |
| Pos.                            | Code           | Description                    | Critical | A                      | B | C | D    |
| 1                               | Z0382300042    | NOZZLE MOVEMENT SUPPORT PLATE  |          |                        |   |   |      |
| 2                               | Z0382300065    | MOUNTING BRACKET               |          |                        |   |   |      |
| 3                               | VIT0000011     | SCREW HEAD TAP CAP M4X8        |          |                        |   |   |      |
| 4                               | Z0090002114R   | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |   |   | X(1) |
| 5                               | VIT0003103     | SPRING WASHER 4,3              |          |                        |   |   |      |
| 6                               | VIT0000035     | SCREW HEAD TAP CAP M4X20       |          |                        |   |   |      |
| 7                               | Z038A158206    | TIE ROD                        |          |                        |   |   |      |
| 8                               | Z0382300061    | MICROSWITCH SUPPORT PLATE      |          |                        |   |   |      |
| 9                               | ELE0001528     | MICROSWITCH                    | X        |                        |   | X |      |
| 10                              | ELE0001906     | MICROSWITCH LEVER              |          |                        |   |   |      |
| 11                              | VIT0004701     | NUT M3                         |          |                        |   |   |      |
| 12                              | Z0380010831    | BUSH 20x4                      | X        |                        |   |   |      |
| 13                              | Z038A158110    | MOTOR WASHER                   |          |                        |   |   |      |
| 14                              | Z0382300005    | CAM                            |          |                        |   |   |      |
| 15                              | Z038A158203    | MOTOR SHAFT                    |          |                        |   |   |      |
| 16                              | Z0382400022    | CAM PIN STAINLESS STEEL        |          |                        |   |   |      |
| 17                              | Z0382400024    | SLIDING RING IN POM            |          |                        |   |   |      |
| 18                              | VIT0003003     | WASHER 4,3X8X0,8               |          |                        |   |   |      |
| 19                              | VIT0000040     | SCREW HEAD TAP CAP M3X4        |          |                        |   |   |      |
| 20                              | VIT0004821     | NUT M6                         |          |                        |   |   |      |
| 21                              | Z038A158214    | ARM PIN                        |          |                        |   |   |      |
| 22                              | Z0382400026    | STAINLESS STEEL PIPES MOVEMENT |          |                        |   |   |      |
| 23                              | VIT0004815     | NUT M4                         |          |                        |   |   |      |
| 24                              | Z038A158002NA  | NOZZLE SUPPORT                 |          |                        |   |   |      |
| 25                              | Z0382300063    | BOTTOM ENCLOSURE               |          |                        |   |   |      |
| 26                              | Z0382300013    | ARM SLIDE                      |          |                        |   |   |      |
| 27                              | VIT0000106     | SCREW COUNT FLAT HEAD M4X8     |          |                        |   |   |      |
| 28                              | 4600010014     | SPACER                         |          |                        |   |   |      |
| 29                              | NL201106265    | MICRO LEVER                    | X        |                        |   |   | X    |
| 30                              | Z0070020038CL3 | § WASTE FLOAT                  |          |                        |   |   |      |
| 31                              | VIT0000007     | SCREW HEAD TAP CAP M3X20       |          |                        |   |   |      |
| 32                              | Z0382300057    | DISPENSER COVER                |          |                        |   |   |      |
| 33                              | VIT0009168     | KNURLED HANDLE                 |          |                        |   |   |      |
| 34                              | Z0382300045    | FRONT COVER PLATE              |          |                        |   |   |      |
| 35                              | VIT0000205     | SCREW HEX HEAD M4X10           |          |                        |   |   |      |
| 36                              | Z0080200127    | MIXER TUBE SUPPORT             |          |                        |   |   |      |
| 37                              | FASC000557     | CLIP FOR CABLE D. 15,9         |          |                        |   |   |      |
| 38                              | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5     |          |                        |   |   |      |
| 39                              | Z038A158001NA  | 30° Ø6 DISPENSING NOZZLE       |          |                        |   |   |      |
| 40/a                            | TSIL06/09PG-10 | SILICON HOSE D6X9 R5012 MT.10  |          |                        |   |   |      |
| 40/b                            | TSIL06/09PG-50 | SILICON HOSE D6X9 R5012 MT.50  | X        |                        |   |   |      |
| 100                             | Z0382300064R   | § NOZZLE MOVEMENT W/FLOAT      |          |                        |   |   |      |

PIPES MOVEMENT W/O SUGAR MOVEMENT

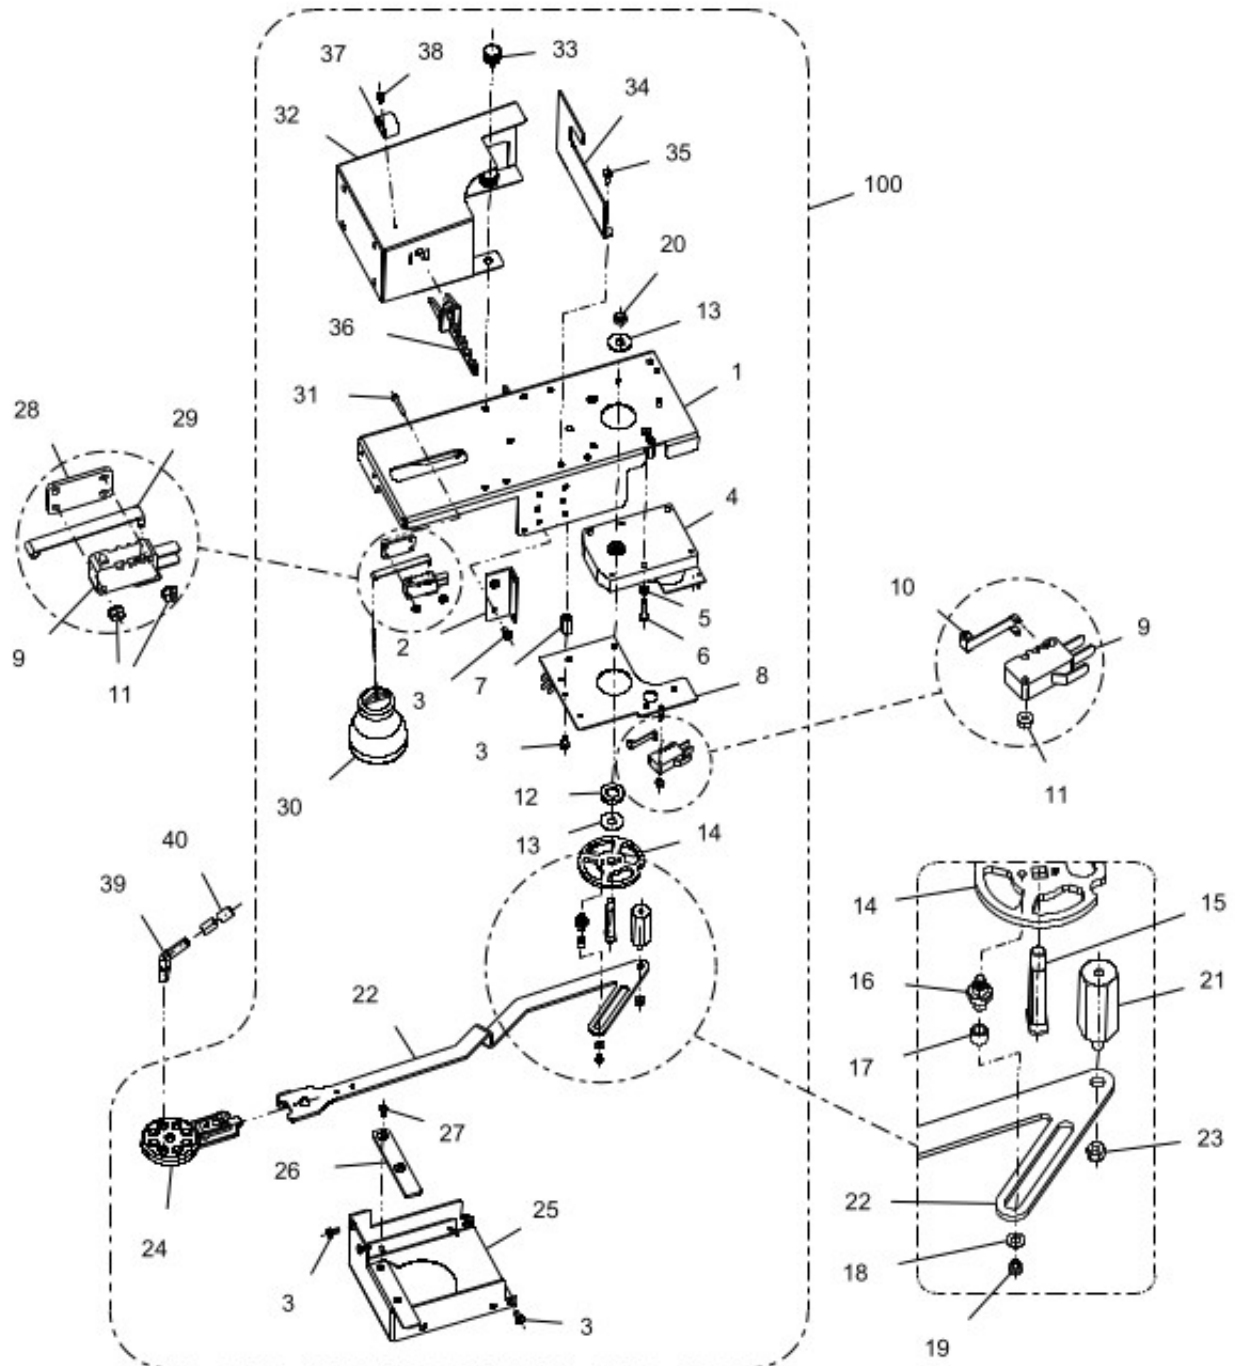


| PIPES MOVEMENT W/O SUGAR MOVEMENT |                |                                |          |                        |   |   |      |
|-----------------------------------|----------------|--------------------------------|----------|------------------------|---|---|------|
|                                   |                |                                |          | Preventive Maintenance |   |   |      |
| Pos.                              | Code           | Description                    | Critical | A                      | B | C | D    |
| 1                                 | Z0382300042    | NOZZLE MOVEMENT SUPPORT PLATE  |          |                        |   |   |      |
| 2                                 | Z0382300065    | MOUNTING BRACKET               |          |                        |   |   |      |
| 3                                 | VIT0000011     | SCREW HEAD TAP CAP M4X8        |          |                        |   |   |      |
| 4                                 | Z0090002114R   | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |   |   | X(1) |
| 5                                 | VIT0003103     | SPRING WASHER 4,3              |          |                        |   |   |      |
| 6                                 | VIT0000035     | SCREW HEAD TAP CAP M4X20       |          |                        |   |   |      |
| 7                                 | Z038A158206    | TIE ROD                        |          |                        |   |   |      |
| 8                                 | Z0382300061    | MICROSWITCH SUPPORT PLATE      |          |                        |   |   |      |
| 9                                 | ELE0001528     | MICROSWITCH                    | X        |                        |   | X |      |
| 10                                | ELE0001906     | MICROSWITCH LEVER              |          |                        |   |   |      |
| 11                                | VIT0004701     | NUT M3                         |          |                        |   |   |      |
| 12                                | Z0380010831    | BUSH 20x4                      | X        |                        |   |   |      |
| 13                                | Z038A158110    | MOTOR WASHER                   |          |                        |   |   |      |
| 14                                | Z0382300005    | CAM                            |          |                        |   |   |      |
| 15                                | Z038A158203    | MOTOR SHAFT                    |          |                        |   |   |      |
| 16                                | Z0382400022    | CAM PIN STAINLESS STEEL        |          |                        |   |   |      |
| 17                                | Z0382400024    | SLIDING RING IN POM            |          |                        |   |   |      |
| 18                                | VIT0003003     | WASHER 4,3X8X0,8               |          |                        |   |   |      |
| 19                                | VIT0000040     | SCREW HEAD TAP CAP M3X4        |          |                        |   |   |      |
| 20                                | VIT0004821     | NUT M6                         |          |                        |   |   |      |
| 21                                | Z038A158214    | ARM PIN                        |          |                        |   |   |      |
| 22                                | Z0382400026    | STAINLESS STEEL PIPES MOVEMENT |          |                        |   |   |      |
| 23                                | VIT0004815     | NUT M4                         |          |                        |   |   |      |
| 24                                | Z038A158002NA  | NOZZLE SUPPORT                 |          |                        |   |   |      |
| 25                                | Z0382300063    | BOTTOM ENCLOSURE               |          |                        |   |   |      |
| 26                                | Z0382300013    | ARM SLIDE                      |          |                        |   |   |      |
| 27                                | VIT0000106     | SCREW COUNT FLAT HEAD M4X8     |          |                        |   |   |      |
| 28                                | 4600010014     | SPACER                         |          |                        |   |   |      |
| 29                                | NL201106265    | MICRO LEVER                    | X        |                        |   |   | X    |
| 30                                | Z0070020038CL3 | § WASTE FLOAT                  |          |                        |   |   |      |
| 31                                | VIT0000007     | SCREW HEAD TAP CAP M3X20       |          |                        |   |   |      |
| 32                                | Z0382300059    | DISPENSER COVER                |          |                        |   |   |      |
| 33                                | VIT0009168     | KNURLED HANDLE                 |          |                        |   |   |      |
| 34                                | Z0382300044    | FRONT PLATE COVER              |          |                        |   |   |      |
| 35                                | VIT0000205     | SCREW HEX HEAD M4X10           |          |                        |   |   |      |
| 36                                | Z0080200127    | MIXER TUBE SUPPORT             |          |                        |   |   |      |
| 37                                | FASC000557     | CLIP FOR CABLE D. 15,9         |          |                        |   |   |      |
| 38                                | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5     |          |                        |   |   |      |
| 39                                | Z038A158001NA  | 30° Ø6 DISPENSING NOZZLE       |          |                        |   |   |      |
| 40/a                              | TSIL06/09PG-10 | SILICON HOSE D6X9 R5012 MT.10  |          |                        |   |   |      |
| 40/b                              | TSIL06/09PG-50 | SILICON HOSE D6X9 R5012 MT.50  | X        |                        |   |   |      |
| 100                               | Z0382300064R1  | § NOZZLE MOVEMENT W/FLOAT      |          |                        |   |   |      |

SUGAR MOVEMENT

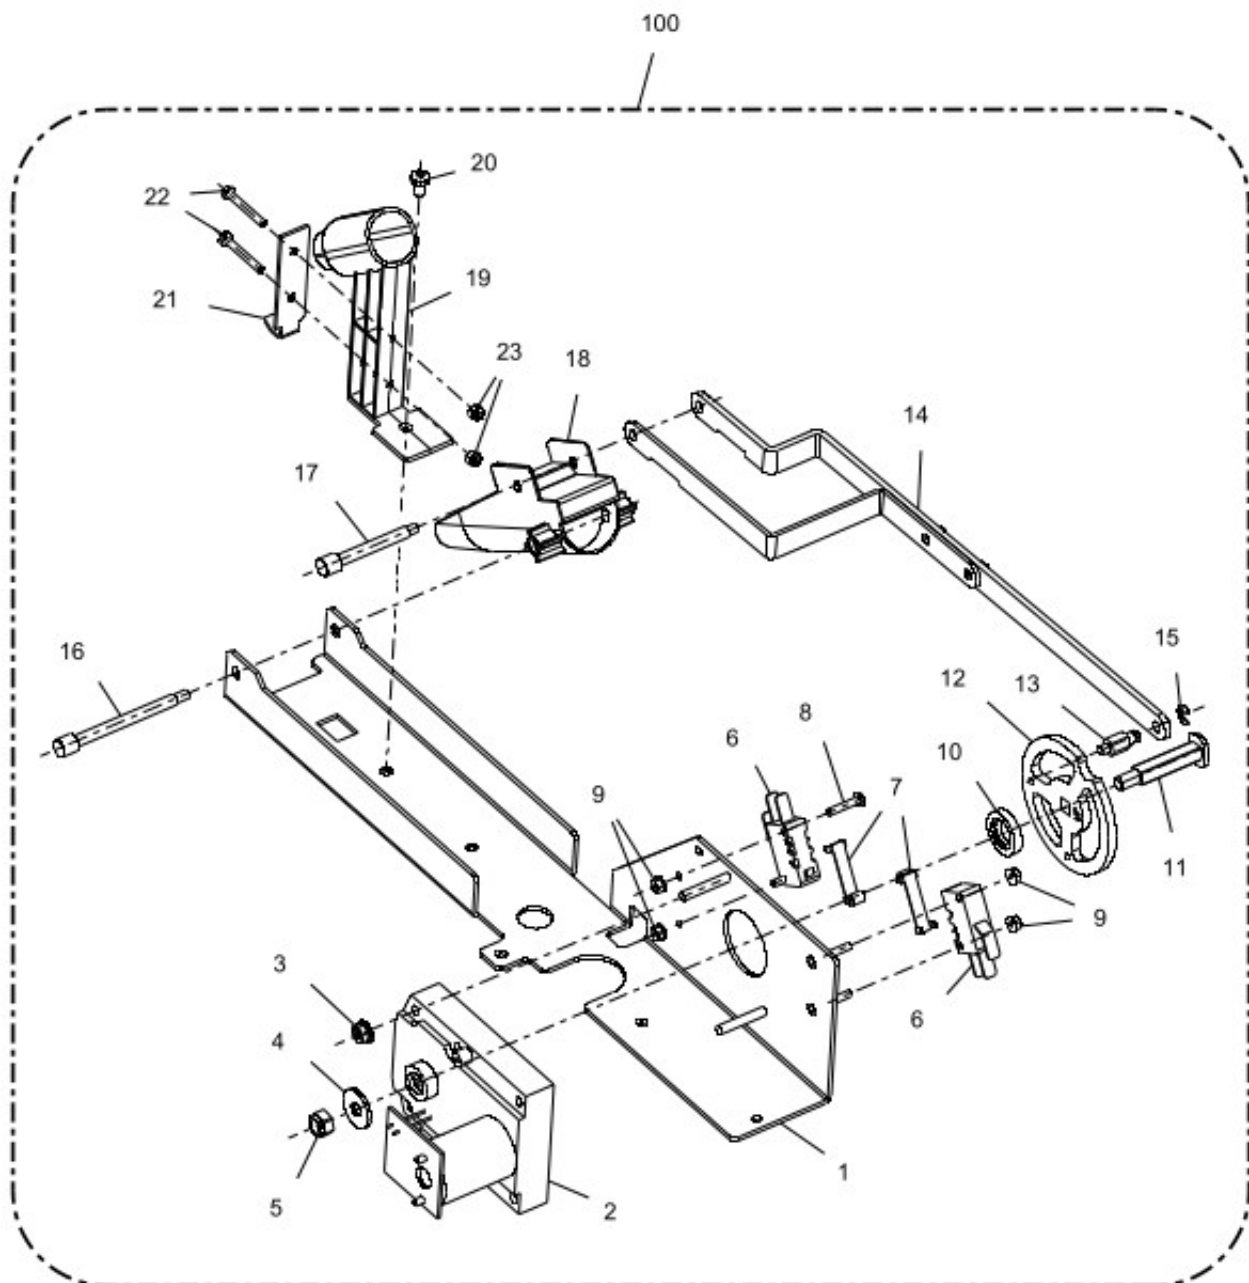


| SUGAR MOVEMENT |               |                              |          |                        |   |   |      |
|----------------|---------------|------------------------------|----------|------------------------|---|---|------|
|                |               |                              |          | Preventive Maintenance |   |   |      |
| Pos.           | Code          | Description                  | Critical | A                      | B | C | D    |
| 1              | Z0382300051   | SUGAR DISPENSER PLATE        |          |                        |   |   |      |
| 2              | Z0090002114R1 | § GEARBOX MOTOR 11RPM 24V DC | X        |                        |   |   | X(1) |
| 3              | DAM0000056    | NUT M4                       |          |                        |   |   |      |
| 4              | VIT0003311    | WASHER 6,6x18x1,5            |          |                        |   |   |      |
| 5              | VIT0004821    | NUT M6                       |          |                        |   |   |      |
| 6              | ELE0001528    | MICROSWITCH                  | X        |                        |   | X |      |
| 7              | ELE0001906    | MICROSWITCH LEVER            |          |                        |   |   |      |
| 8              | VIT0000006    | SCREW HEAD TAP CAP M3X16     |          |                        |   |   |      |
| 9              | VIT0004701    | NUT M3                       |          |                        |   |   |      |
| 10             | Z0380010831   | BUSH 20x4                    | X        |                        |   |   |      |
| 11             | Z038A158304   | MOTOR SHAFT                  |          |                        |   |   |      |
| 12             | Z0382300006   | MICROSWITCH CAM              |          |                        |   |   |      |
| 13             | Z0382300001   | MICROSWITCH CAM PIN          |          |                        |   |   |      |
| 14             | Z0382300055R  | § LEVEL ARM                  |          |                        |   |   |      |
| 15             | VIT0006503    | RING 4                       |          |                        |   |   |      |
| 16             | Z038A158305   | KNURLED PIN                  |          |                        |   |   |      |
| 17             | Z038A158310   | KNURLED PIN                  |          |                        |   |   |      |
| 18             | Z038A158003NA | TILTER                       |          |                        |   |   |      |
| 19             | Z038A158077NA | SUGAR HOSE CONNECTOR         |          |                        |   |   |      |
| 20             | VIT0000011    | SCREW HEAD TAP CAP M4X8      |          |                        |   |   |      |
| 21             | Z038A158075   | SUGAR HOSE REINFORCEMENT     |          |                        |   |   |      |
| 22             | VIT0000008    | M 3*25 TCB SCREW             |          |                        |   |   |      |
| 23             | VIT0004814    | NUT M3                       |          |                        |   |   |      |
| 100            | Z0382300069R  | § SUGAR MOVEMENT             |          |                        |   |   |      |

mixer

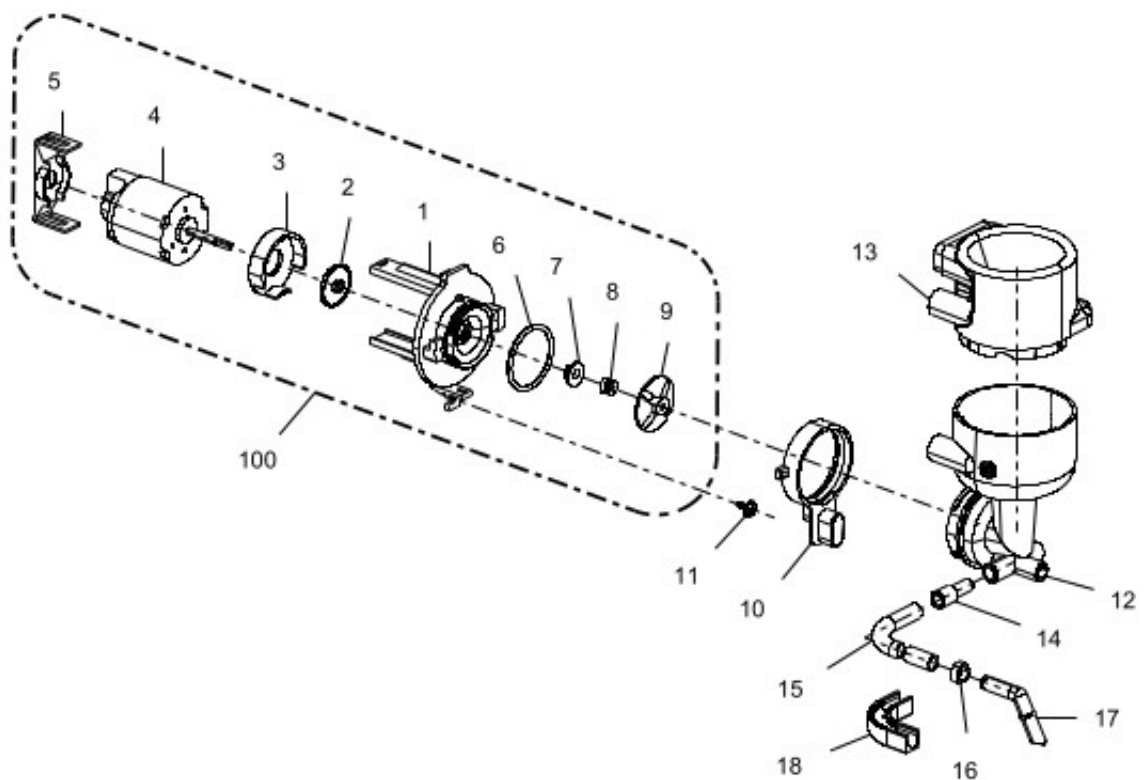


| mixer |                |                                |          |                        |   |   |   |
|-------|----------------|--------------------------------|----------|------------------------|---|---|---|
|       |                |                                |          | Preventive Maintenance |   |   |   |
| Pos.  | Code           | Description                    | Critical | A                      | B | C | D |
| 1     | Z0080100005    | MOTOR MIXER BASE               |          |                        |   |   |   |
| 2     | Z0080100024    | MIXER FAN                      |          |                        |   |   |   |
| 3     | Z0080100023IC  | MIXER COVER RAL2011            |          |                        |   |   |   |
| 4     | Z0090003023    | MIXER MOTOR 24V DC SHAFT D.4   | X        |                        |   |   | X |
| 5     | Z0080100009IC  | MIXER MOTOR SUPPORT RAL2011    | X        |                        |   |   |   |
| 6     | GUA0000084     | OR 3131 RED SILICONE A60       | X        | Y                      | Y | Y | Y |
| 7     | Z0080100015    | MIXER BUSH                     | X        |                        |   |   |   |
| 8     | Z0080100102    | MIXER SHAFT GASKET             | X        | CK                     | Y | Y | Y |
| 9     | Z0080100011    | MIXER FAN                      | X        | CK                     | Y | Y | Y |
| 10    | Z0080100006IC  | LOCK RING RAL2011              | X        |                        |   |   |   |
| 11    | VIT0002401     | SCREW ST HEAD CAP M3.5X9.5     |          |                        |   |   |   |
| 12/a  | Z0080200101LPG | BLUE LEFT MIX.BODY H2O W/BREAK | X        | Y                      | Y | Y | Y |
| 12/b  | Z0080200104LPG | BLUE L.MIX BODY H2O W/O BREAK  | X        |                        |   |   |   |
| 13    | Z0080100146CY  | MIXING BOWL BLANK              |          |                        |   |   |   |
| 14/a  | Z0080100095PG  | REDUCTION                      |          |                        |   |   |   |
| 14/b  | Z0080100096    | COFFEE OUTLET REDUCTION D.2    |          |                        |   |   |   |
| 15/a  | TSIL06/09PG-10 | SILICON HOSE D6X9 R5012 MT.10  |          |                        |   |   |   |
| 15/b  | TSIL06/09PG-50 | SILICON HOSE D6X9 R5012 MT.50  | X        |                        |   |   |   |
| 16/a  | Z0080100130    | HOSE RING BLUE D.9             |          |                        |   |   |   |
| 16/b  | Z0080100129    | HOSE RING GREEN D.9            |          |                        |   |   |   |
| 16/c  | Z0080100128    | HOSE RING ORANGE D.9           |          |                        |   |   |   |
| 16/d  | Z0080100126    | HOSE RING BLACK D.9            |          |                        |   |   |   |
| 16/e  | Z0080100127    | HOSE RING RED D.9              |          |                        |   |   |   |
| 17    | Z038A158001NA  | 30° Ø6 DISPENSING NOZZLE       |          |                        |   |   |   |
| 18    | FASC000605     | CLAMP                          |          |                        |   |   |   |
| 100   | Z0080100001R   | § MIXER BOWL BASE+MOTOR        | X        |                        |   |   |   |

SOLUBLES VALVES

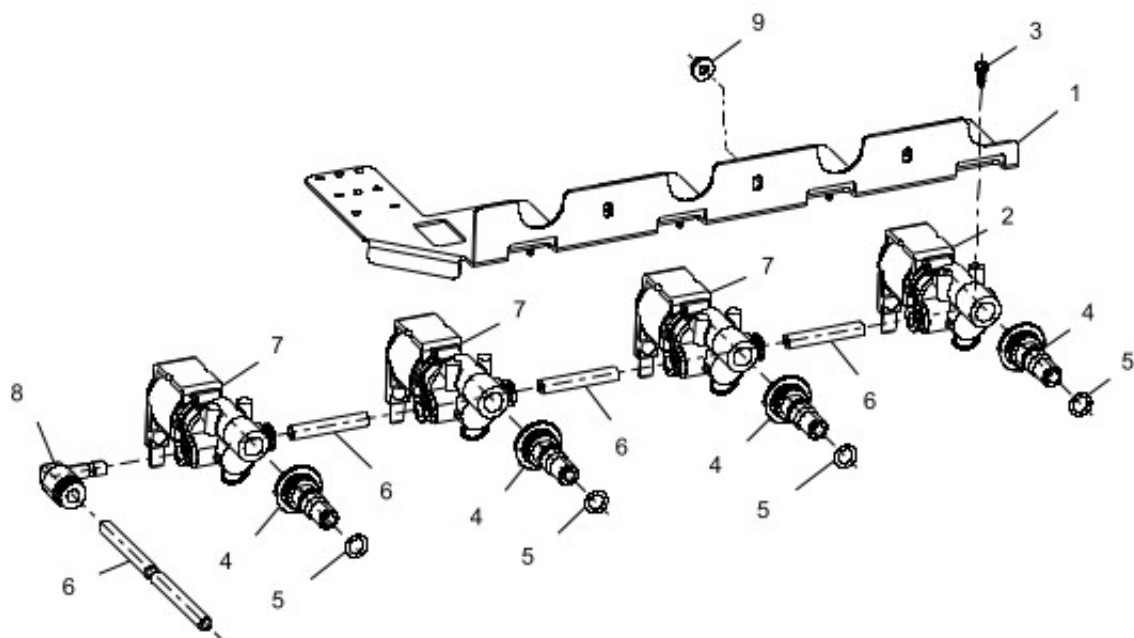


| SOLUBLES VALVES |               |                               |          |                        |    |    |    |
|-----------------|---------------|-------------------------------|----------|------------------------|----|----|----|
|                 |               |                               |          | Preventive Maintenance |    |    |    |
| Pos.            | Code          | Description                   | Critical | A                      | B  | C  | D  |
| 1/a             | Z007B170160   | EV IND. SUPPORT 3 - 4 valves  |          |                        |    |    |    |
| 1/b             | Z0072300048   | SOLENOIDS SUPPORT 5 valves    |          |                        |    |    |    |
| 2               | Z0110001141   | EV 2Vx2 DN2 G1/8 F A.R. 24VDC | X        |                        |    | X  |    |
| 3               | VIT0002011    | SCREW ST HEAD CAP M2.9X9.5    |          |                        |    |    |    |
| 4/a             | Z008B185013PL | EV MIXER THR.NOZZLE Ø5 BLUE   | X        |                        |    |    |    |
| 4/b             | Z008B185013MD | EV MIXER THR.NOZZLE Ø5 GREEN  | X        |                        |    |    |    |
| 4/c             | Z008B185013IC | EV MIXER THR.NOZZLE Ø5 ORANGE |          |                        |    |    |    |
| 4/d             | Z008B185013NA | EV MIXER THR.NOZZLE Ø5 BLACK  | X        |                        |    |    |    |
| 4/e             | Z008B185013KA | EV MIXER THR.NOZZLE Ø5 RED    | X        |                        |    |    |    |
| 4/f             | Z0082300011PL | EV MIXER THR.NOZZLE Ø2 BLUE   |          |                        |    |    |    |
| 4/g             | Z0082300011MD | EV MIXER THR.NOZZLE Ø2 GREEN  |          |                        |    |    |    |
| 4/h             | Z0082300011IC | EV MIXER THR.NOZZLE Ø2 ORANGE |          |                        |    |    |    |
| 4/i             | Z0082300011NA | EV MIXER THR.NOZZLE Ø2 BLACK  |          |                        |    |    |    |
| 4/l             | Z0082300011KA | EV MIXER THR.NOZZLE Ø2 RED    |          |                        |    |    |    |
| 5               | GUA0000085    | OR 106 RED SILICONE A70       | X        | Y*                     | Y* | Y* | Y* |
| 6               | TTEF04/06T    | PTFE PIPE 4X6                 | X        | Y                      | Y  | Y  | Y  |
| 7               | Z0110001134   | VALVE BLOCK 3V 2W 24V DC      | X        |                        |    | X  |    |
| 8               | Z0100001156   | FITTING ELBOW D6-D6           | X        |                        |    |    |    |
| 9               | DAM0000056    | NUT M4                        |          |                        |    |    |    |
| 11              | Z0100001150   | STRAIGHT CONNECTOR M G1/8 D6  |          |                        |    |    |    |
| 12              | VIT0002009    | SCREW ST HEAD CAP M3.5X6.5    |          |                        |    |    |    |
| 13              | DAM0000056    | NUT M4                        |          |                        |    |    |    |

SOLUBLES VALVES W/HOT WATER

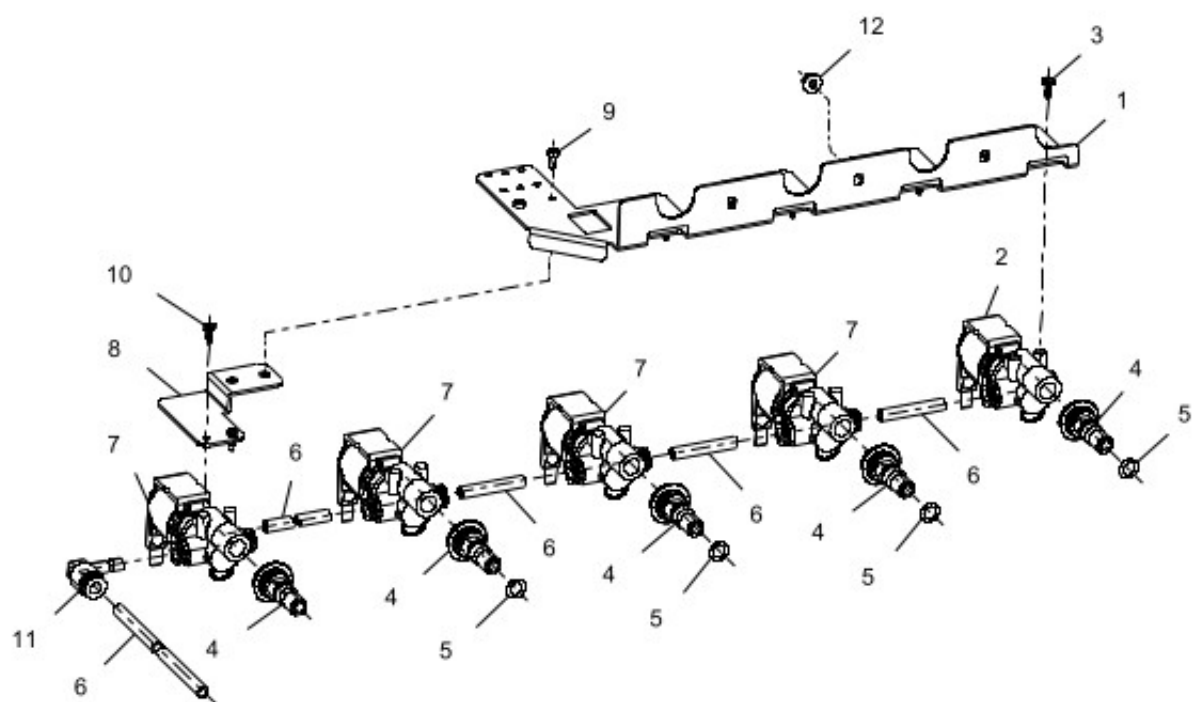


| SOLUBLES VALVES W/HOT WATER |               |                               |          |                        |    |    |    |
|-----------------------------|---------------|-------------------------------|----------|------------------------|----|----|----|
|                             |               |                               |          | Preventive Maintenance |    |    |    |
| Pos.                        | Code          | Description                   | Critical | A                      | B  | C  | D  |
| 1/a                         | Z007B170160   | EV IND. SUPPORT 3 - 4 valves  |          |                        |    |    |    |
| 1/b                         | Z0072300048   | SOLENOIDS SUPPORT 5 valves    |          |                        |    |    |    |
| 2                           | Z0110001141   | EV 2Vx2 DN2 G1/8 F A.R. 24VDC | X        |                        |    | X  |    |
| 3                           | VIT0002011    | SCREW ST HEAD CAP M2.9X9.5    |          |                        |    |    |    |
| 4/a                         | Z008B185013PL | EV MIXER THR.NOZZLE Ø5 BLUE   | X        |                        |    |    |    |
| 4/b                         | Z008B185013MD | EV MIXER THR.NOZZLE Ø5 GREEN  | X        |                        |    |    |    |
| 4/c                         | Z008B185013IC | EV MIXER THR.NOZZLE Ø5 ORANGE |          |                        |    |    |    |
| 4/d                         | Z008B185013NA | EV MIXER THR.NOZZLE Ø5 BLACK  | X        |                        |    |    |    |
| 4/e                         | Z008B185013KA | EV MIXER THR.NOZZLE Ø5 RED    | X        |                        |    |    |    |
| 4/f                         | Z0082300011PL | EV MIXER THR.NOZZLE Ø2 BLUE   |          |                        |    |    |    |
| 4/g                         | Z0082300011MD | EV MIXER THR.NOZZLE Ø2 GREEN  |          |                        |    |    |    |
| 4/h                         | Z0082300011IC | EV MIXER THR.NOZZLE Ø2 ORANGE |          |                        |    |    |    |
| 4/i                         | Z0082300011NA | EV MIXER THR.NOZZLE Ø2 BLACK  |          |                        |    |    |    |
| 4/l                         | Z0082300011KA | EV MIXER THR.NOZZLE Ø2 RED    |          |                        |    |    |    |
| 5                           | GUA0000085    | OR 106 RED SILICONE A70       | X        | Y*                     | Y* | Y* | Y* |
| 6                           | TTEF04/06T    | PTFE PIPE 4X6                 | X        | Y                      | Y  | Y  | Y  |
| 7                           | Z0110001134   | VALVE BLOCK 3V 2W 24V DC      | X        |                        |    | X  |    |
| 8                           | Z007B170153   | EXTRA EV SUPPORT              |          |                        |    |    |    |
| 9                           | VIT0000003    | SCREW HEAD TAP CAP M3X8       |          |                        |    |    |    |
| 10                          | VIT0002011    | SCREW ST HEAD CAP M2.9X9.5    |          |                        |    |    |    |
| 11                          | Z0100001156   | FITTING ELBOW D6-D6           | X        |                        |    |    |    |
| 12                          | DAM0000056    | NUT M4                        |          |                        |    |    |    |
| 13                          | DAM0000056    | NUT M4                        |          |                        |    |    |    |
| 14                          | Z007B170153   | EXTRA EV SUPPORT              |          |                        |    |    |    |
| 15                          | VIT0000003    | SCREW HEAD TAP CAP M3X8       |          |                        |    |    |    |

VIBRATION PUMP HYDRIC CIRCUIT

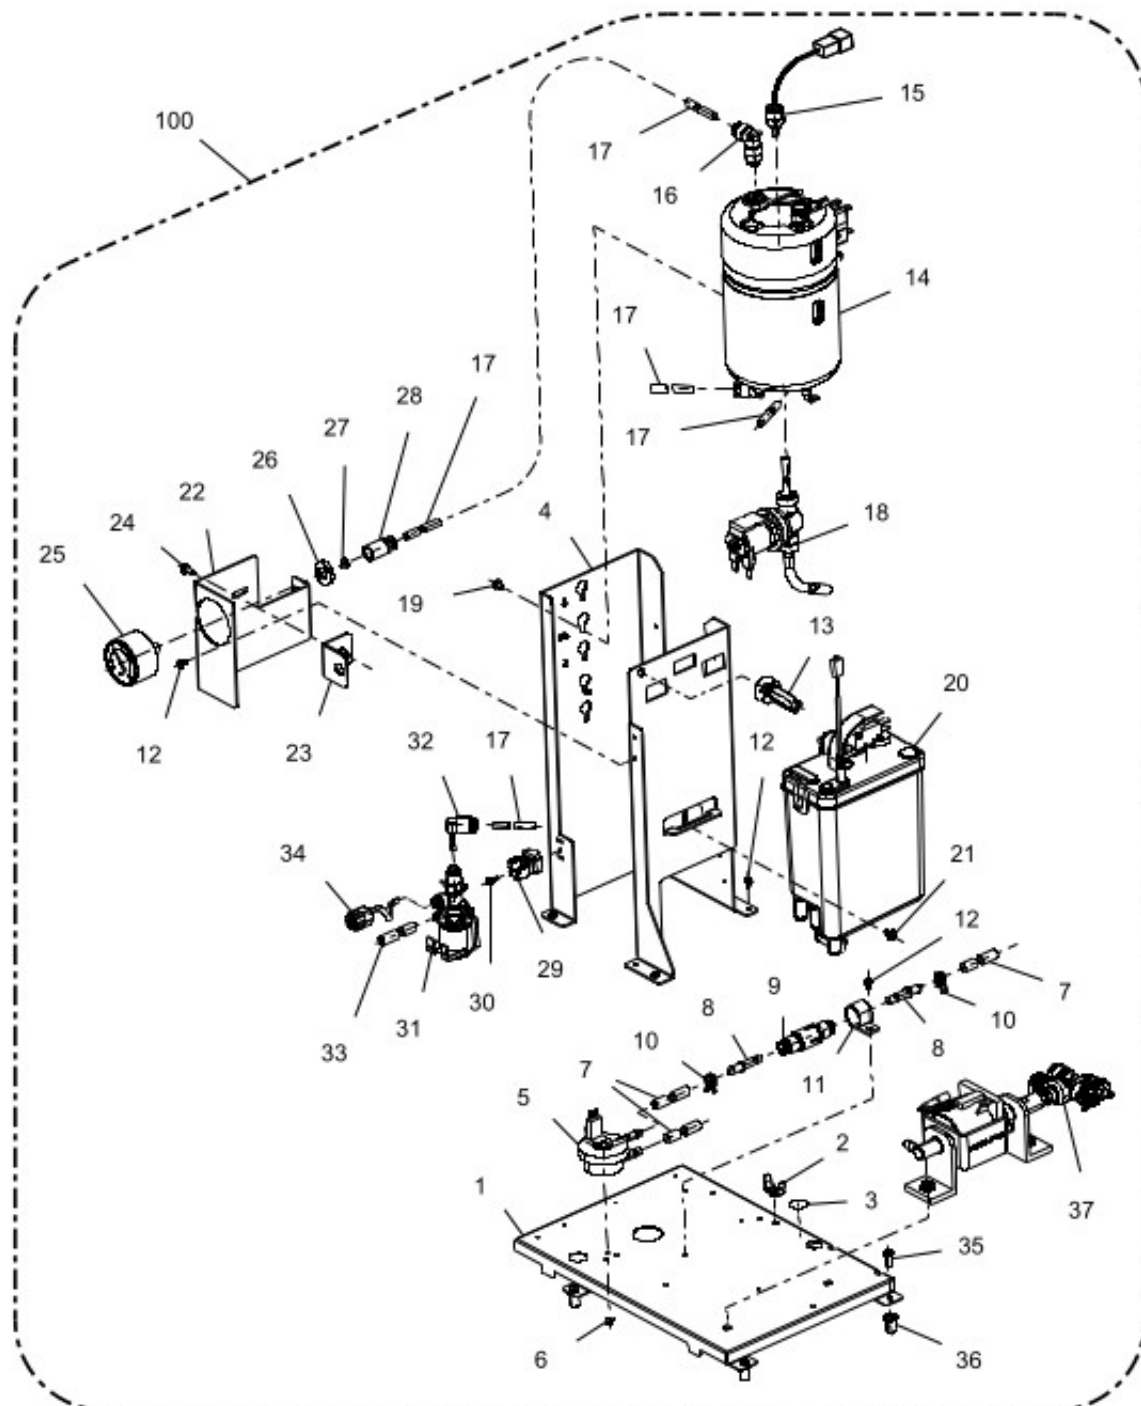

| VIBRATION PUMP HYDRIC CIRCUIT |                 |                                  |          |                        |    |    |    |
|-------------------------------|-----------------|----------------------------------|----------|------------------------|----|----|----|
|                               |                 |                                  |          | Preventive Maintenance |    |    |    |
| Pos.                          | Code            | Description                      | Critical | A                      | B  | C  | D  |
| 1                             | Z0072400236     | HYDRAULICS SUPPORT               |          |                        |    |    |    |
| 2                             | ELE0060520      | GROUND PIN                       |          |                        |    |    |    |
| 3                             | 1010100111      | GROUND WIRING LABEL              |          |                        |    |    |    |
| 4                             | Z007A158016     | BOILER/AIR BREAK SUPPORT         |          |                        |    |    |    |
| 5                             | Z0110007003     | VOLUMETRIC COUNTER               | X        | CK                     | CK | CK | X  |
| 6                             | GUA0010551      | ELECTRICAL GROMMET               |          |                        |    |    |    |
| 7/a                           | TSIL05/08T-10   | SILICON HOSE 5X8 MT.10           | X        | Y                      | Y  | Y  | Y  |
| 7/b                           | TSIL05/08T-50   | SILICON HOSE 5X8 MT.50           |          |                        |    |    |    |
| 8                             | Z0100001237     | STRAIGHT STEM CONNECTOR          |          |                        |    |    |    |
| 9                             | Z0112500019     | NO RETURN VALVE 16 BAR           | X        |                        |    |    |    |
| 10                            | FASC000105      | CLAMP                            |          |                        |    |    |    |
| 11                            | FASC000557      | CLIP FOR CABLE D. 15,9           |          |                        |    |    |    |
| 12                            | VIT0002009      | SCREW ST HEAD CAP M3.5X6.5       |          |                        |    |    |    |
| 13                            | FASC000219      | PIPE CLIP 1 WAY                  |          |                        |    |    |    |
| 14                            | Z0600019851-01  | § BOILER L. 0,65 1800W 230V      |          |                        |    |    |    |
| 15                            | ELE0000991      | TEMPERATURE PROBE                | X        | CK                     | CK | CK | CK |
| 16                            | Q081A017323     | CONNECTION 90° 6-1/8             |          |                        |    |    |    |
| 17                            | TTEF04/06T      | PTFE PIPE 4X6                    | X        | Y                      | Y  | Y  | Y  |
| 18                            |                 | See table BOILER DISCHARGE VALVE |          |                        |    |    |    |
| 19                            | VIT0000021      | SCREW HEAD TAP CAP M4X6          |          |                        |    |    |    |
| 20                            |                 | See table water inlet panel      |          |                        |    |    |    |
| 21                            | VIT0002401      | SCREW ST HEAD CAP M3.5X9.5       |          |                        |    |    |    |
| 22                            | Z007B170245     | PRESSURE GAUGE SUPPORT           |          |                        |    |    |    |
| 23                            | Z007A158211     | MANOMETER GUIDE                  |          |                        |    |    |    |
| 24                            | VIT0000012      | SCREW HEAD TAP CAP M4X10         |          |                        |    |    |    |
| 25                            | Z0110006003     | MANOMETER                        |          |                        |    |    |    |
| 26                            | Z0380010831     | BUSH 20x4                        | X        |                        |    |    |    |
| 27                            | Z0100003002     | COPPER GASKET SO5-5-1/8          |          |                        |    |    |    |
| 28                            | Z0100001139     | STRAIGHT CONNECTOR               |          |                        |    |    |    |
| 29                            | Z060B185111NA   | 3 WAYS SUPPORT                   | X        |                        |    |    |    |
| 30                            | VIT0002011      | SCREW ST HEAD CAP M2.9X9.5       |          |                        |    |    |    |
| 31                            | Z011B185023     | VALVE 3/2 24V+BOARD PWM          | X        |                        | CK | X  |    |
| 32                            | Z0100001238     | ELBOW CONNECTOR                  | X        |                        |    |    |    |
| 33/a                          | TSIL05/08T-10   | SILICON HOSE 5X8 MT.10           | X        | Y                      | Y  | Y  | Y  |
| 33/b                          | TSIL05/08T-50   | SILICON HOSE 5X8 MT.50           |          |                        |    |    |    |
| 34                            | Z0250014086R8   | §WATER INLET TUBE 0,19 mt        |          |                        |    |    |    |
| 35                            | VIT0000013      | SCREW HEAD TAP CAP M4X12         |          |                        |    |    |    |
| 36                            | Z0320001628     | NO-VIBRATION BUSH                |          |                        |    |    |    |
| 37                            |                 | See table COFFEE PUMP            |          |                        |    |    |    |
| 100/a                         | Z007B170100CL5R | § ESPRESSO BOILER SUPP. + MAN    |          |                        |    |    |    |
| 100/b                         | Z007B170100CLR  | § ESPRESSO BOILER SUPPORT        |          |                        |    |    |    |


ROTATIVE PUMP HYDRIC CIRCUIT

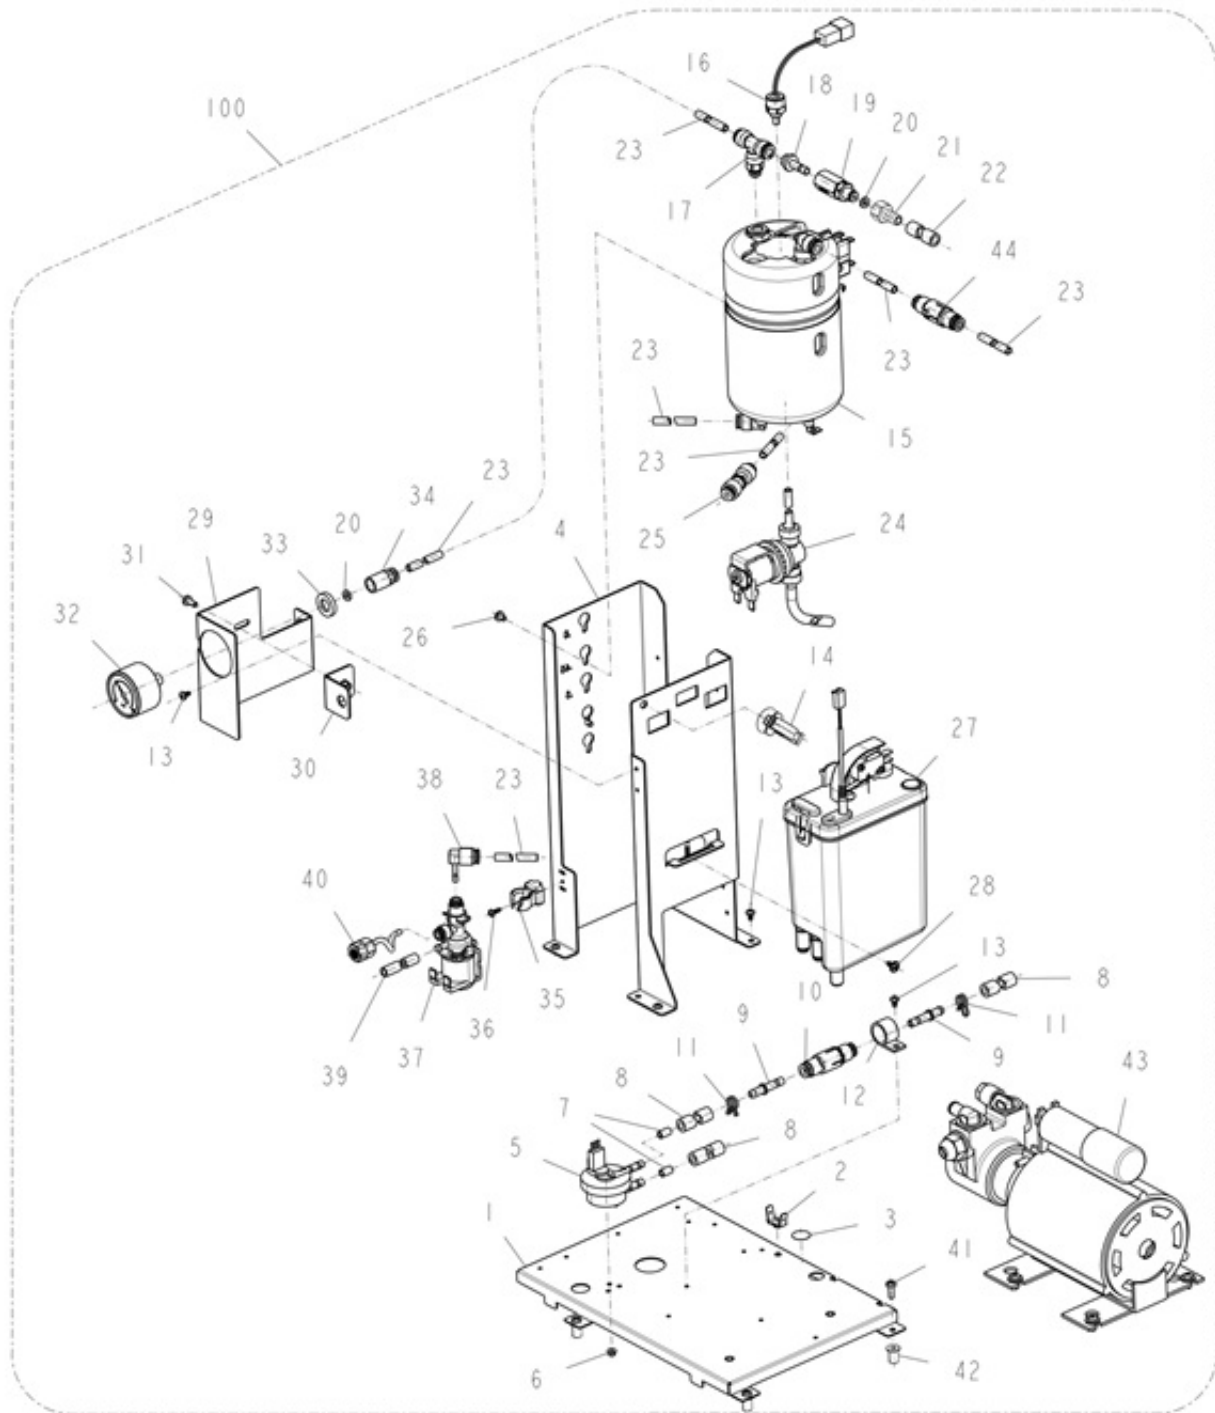

| ROTATIVE PUMP HYDRIC CIRCUIT |                |                                  |          |                        |    |    |    |
|------------------------------|----------------|----------------------------------|----------|------------------------|----|----|----|
|                              |                |                                  |          | Preventive Maintenance |    |    |    |
| Pos.                         | Code           | Description                      | Critical | A                      | B  | C  | D  |
| 1                            | Z0072400236    | HYDRAULICS SUPPORT               |          |                        |    |    |    |
| 2                            | ELE0060520     | GROUND PIN                       |          |                        |    |    |    |
| 3                            | 1010100111     | GROUND WIRING LABEL              |          |                        |    |    |    |
| 4                            | Z007A158016    | BOILER/AIR BREAK SUPPORT         |          |                        |    |    |    |
| 5                            | Z0110007003    | VOLUMETRIC COUNTER               | X        | CK                     | CK | CK | X  |
| 6                            | VIT0004701     | NUT M3                           |          |                        |    |    |    |
| 7/a                          | TSIL04/06T-10  | SILICON HOSE 4X6 MT.10           | X        | Y                      | Y  | Y  | Y  |
| 7/b                          | TSIL04/06T-50  | SILICON HOSE 4X6 MT.50           |          |                        |    |    |    |
| 8/a                          | TSIL06/11T-10  | SILICON HOSE 6X11 MT.10          | X        | Y                      | Y  | Y  | Y  |
| 8/b                          | TSIL06/11T-50  | SILICON HOSE 6X11 MT.50          |          |                        |    |    |    |
| 9                            | Z0100001237    | STRAIGHT STEM CONNECTOR          |          |                        |    |    |    |
| 10                           | Z0112500019    | NO RETURN VALVE 16 BAR           | X        |                        |    |    |    |
| 11                           | FASC000105     | CLAMP                            |          |                        |    |    |    |
| 12                           | FASC000557     | CLIP FOR CABLE D. 15,9           |          |                        |    |    |    |
| 13                           | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5       |          |                        |    |    |    |
| 14                           | FASC000219     | PIPE CLIP 1 WAY                  |          |                        |    |    |    |
| 15                           | Z0600019851-01 | § BOILER L. 0,65 1800W 230V      |          |                        |    |    |    |
| 16                           | ELE0000991     | TEMPERATURE PROBE                | X        | CK                     | CK | CK | CK |
| 17                           | Z0102500002    | T-CONNECTOR ADJUSTABLE M 6 1/8   |          |                        |    |    |    |
| 18                           | Q081A017313    | STRAIGHT ADAPTOR 1/8 - 6 INOX    |          |                        |    |    |    |
| 19                           | Z0110002028    | SAFETY VALVE 12BAR F-M 1/8"G     |          |                        |    |    |    |
| 20                           | Z0100003002    | COPPER GASKET SO5-5-1/8          |          |                        |    |    |    |
| 21                           | Z010A003002    | RUBBER HOLDER CONN. D.9-1/8" F   |          |                        |    |    |    |
| 22/a                         | TSIL07/11T-10  | SILICON HOSE 7X11 MT.10          | X        | Y                      | Y  | Y  | Y  |
| 22/b                         | TSIL07/11T-50  | SILICON HOSE 7X11 MT.50          |          |                        |    |    |    |
| 23                           | TTEF04/06T     | PTFE PIPE 4X6                    | X        | Y                      | Y  | Y  | Y  |
| 24                           |                | See table BOILER DISCHARGE VALVE |          |                        |    |    |    |
| 25                           | Q081A017101    | NON-RETURN VALVE 6-6             |          |                        |    |    |    |
| 26                           | VIT0000021     | SCREW HEAD TAP CAP M4X6          |          |                        |    |    |    |
| 27                           |                | See table water inlet panel      |          |                        |    |    |    |
| 28                           | VIT0002401     | SCREW ST HEAD CAP M3.5X9.5       |          |                        |    |    |    |
| 29                           | Z007B170245    | PRESSURE GAUGE SUPPORT           |          |                        |    |    |    |
| 30                           | Z007A158211    | MANOMETER GUIDE                  |          |                        |    |    |    |
| 31                           | VIT0000012     | SCREW HEAD TAP CAP M4X10         |          |                        |    |    |    |
| 32                           | Z0110006003    | MANOMETER                        |          |                        |    |    |    |
| 33                           | Z0380010831    | BUSH 20x4                        | X        |                        |    |    |    |
| 34                           | Z0100001139    | STRAIGHT CONNECTOR               |          |                        |    |    |    |
| 35                           | Z060B185111NA  | 3 WAYS SUPPORT                   | X        |                        |    |    |    |
| 36                           | VIT0002011     | SCREW ST HEAD CAP M2.9X9.5       |          |                        |    |    |    |
| 37                           | Z011B185023    | VALVE 3/2 24V+BOARD PWM          | X        |                        | CK | X  |    |
| 38                           | Z0100001238    | ELBOW CONNECTOR                  | X        |                        |    |    |    |
| 39/a                         | TSIL05/08T-10  | SILICON HOSE 5X8 MT.10           | X        | Y                      | Y  | Y  | Y  |
| 39/b                         | TSIL05/08T-50  | SILICON HOSE 5X8 MT.50           |          |                        |    |    |    |
| 40                           | Z0250014086R8  | §WATER INLET TUBE 0,19 mt        |          |                        |    |    |    |
| 41                           | VIT0000013     | SCREW HEAD TAP CAP M4X12         |          |                        |    |    |    |


| ROTATIVE PUMP HYDRIC CIRCUIT |                 |                                |  |  |  |  |  |
|------------------------------|-----------------|--------------------------------|--|--|--|--|--|
| 42                           | Z0320001628     | NO-VIBRATION BUSH              |  |  |  |  |  |
| 43                           |                 | See table ROTATIVE PUMP        |  |  |  |  |  |
| 44                           | Z0112500023     | FLOW REDUCER D1m               |  |  |  |  |  |
| 100/a                        | Z007B170100CL3R | § SUPP.BOILER E ROTAT.PUMP+MAN |  |  |  |  |  |
| 100/b                        | Z007B170100CL4R | § SUPP.BOILER E ROTAT.PUMP     |  |  |  |  |  |

BOILER DISCHARGE VALVE

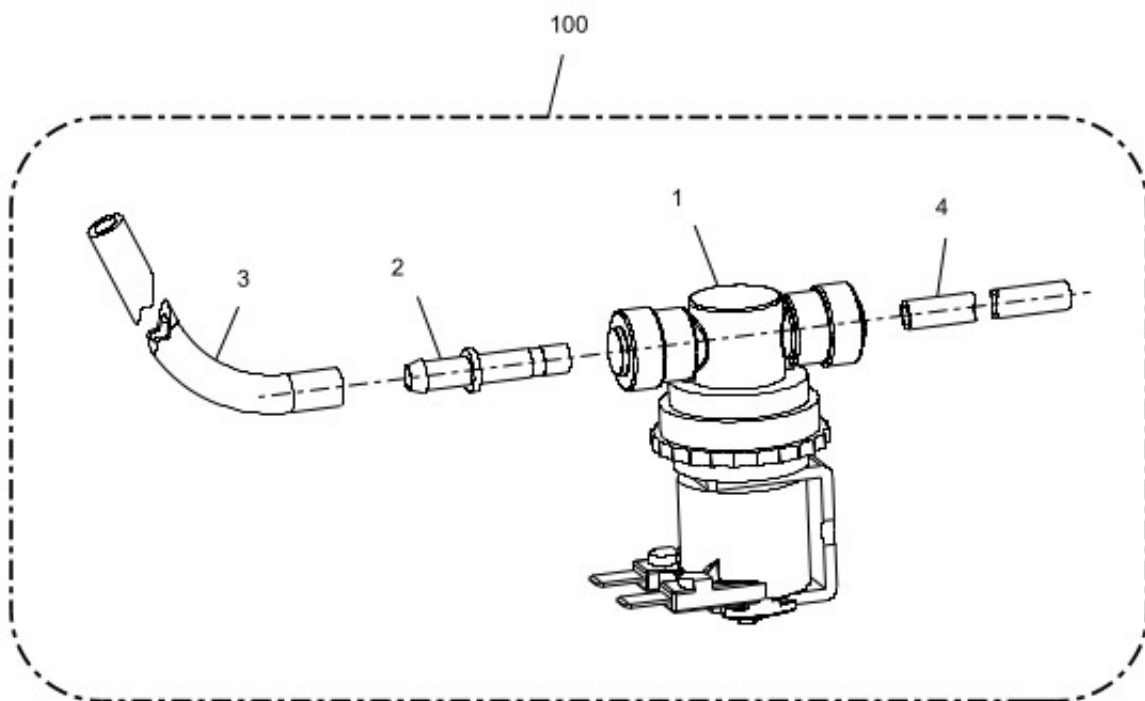


| BOILER DISCHARGE VALVE |               |                         |          |                        |   |   |   |
|------------------------|---------------|-------------------------|----------|------------------------|---|---|---|
|                        |               |                         |          | Preventive Maintenance |   |   |   |
| Pos.                   | Code          | Description             | Critical | A                      | B | C | D |
| 1                      | Z011B185022   | VALVE 2 WAY 24DC        | X        |                        |   |   |   |
| 2                      | Z0100001237   | STRAIGHT STEM CONNECTOR |          |                        |   |   |   |
| 3/a                    | TSIL05/08T-10 | SILICON HOSE 5X8 MT.10  | X        | Y                      | Y | Y | Y |
| 3/b                    | TSIL05/08T-50 | SILICON HOSE 5X8 MT.50  |          |                        |   |   |   |
| 4                      | TTEF04/06T    | PTFE PIPE 4X6           | X        | Y                      | Y | Y | Y |
| 100                    | Z011B185022R  | S VALVE 2 WAY 24DC      |          |                        |   |   |   |

COFFEE PUMP

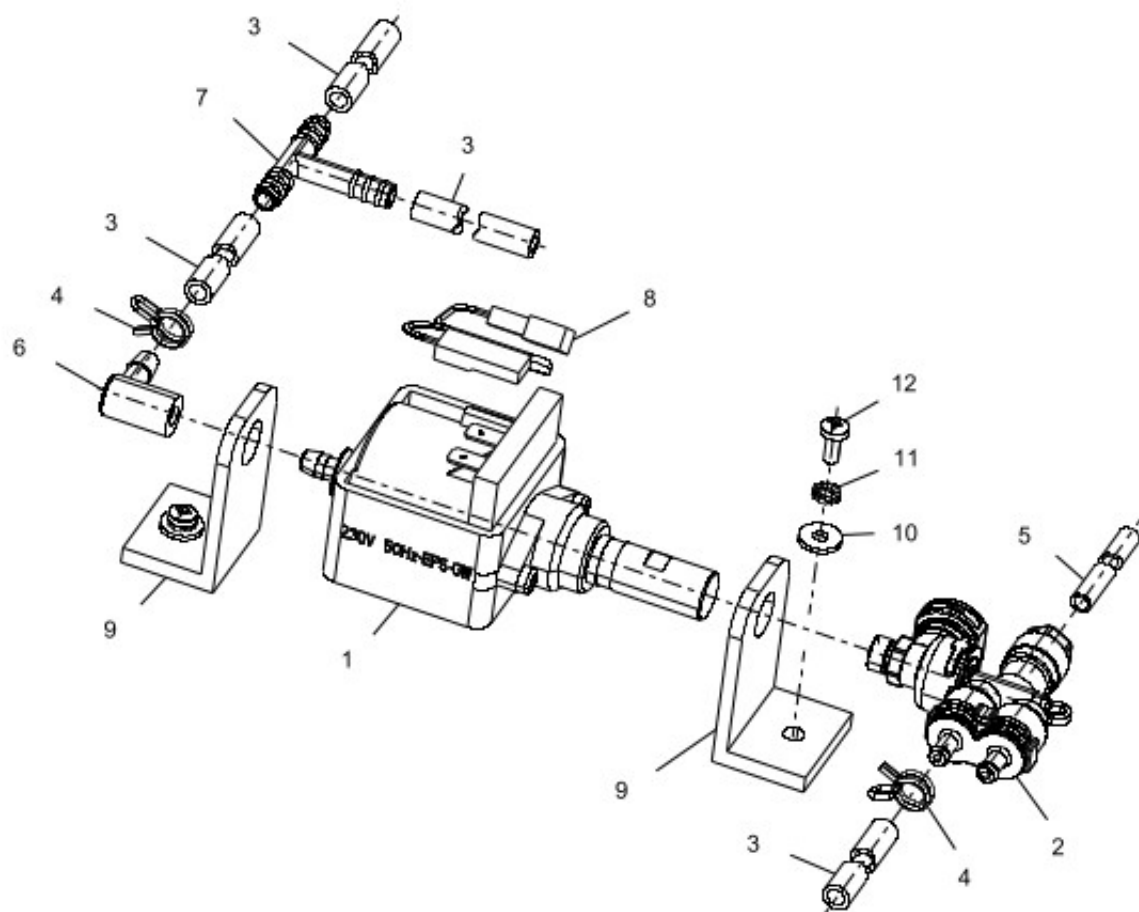


| COFFEE PUMP |               |                          |          |                        |    |    |   |
|-------------|---------------|--------------------------|----------|------------------------|----|----|---|
|             |               |                          |          | Preventive Maintenance |    |    |   |
| Pos.        | Code          | Description              | Critical | A                      | B  | C  | D |
| 1           | Z0110004065   | PUMP PLUS PGØ7 230V-50HZ | X        |                        | CK | X  |   |
| 2           | Z0110001151R  | VALVE 3W W/BY-PASS 11BAR | X        |                        | CK | X* |   |
| 3/a         | TSIL05/08T-10 | SILICON HOSE 5X8 MT.10   | X        | Y                      | Y  | Y  | Y |
| 3/b         | TSIL05/08T-50 | SILICON HOSE 5X8 MT.50   |          |                        |    |    |   |
| 4           | FASC000105    | CLAMP                    |          |                        |    |    |   |
| 5           | TTEF04/06T    | PTFE PIPE 4X6            | X        | Y                      | Y  | Y  | Y |
| 6           | Z0110004023   | CONNECTOR                | X        |                        |    |    |   |
| 7           | Z0100003022   | T CONNECTOR 461 TS UL    | X        |                        |    |    |   |
| 8           | ELE0000915    | PUMP THERMOPROTECTOR     | X        |                        |    |    |   |
| 9           | Z0110004022   | SUPPORT                  |          |                        |    |    |   |
| 10          | VIT0003301    | WASHER 4,3X12X1,5        |          |                        |    |    |   |
| 11          | VIT0003103    | SPRING WASHER 4,3        |          |                        |    |    |   |
| 12          | VIT0000013    | SCREW HEAD TAP CAP M4X12 |          |                        |    |    |   |

ROTATIVE PUMP

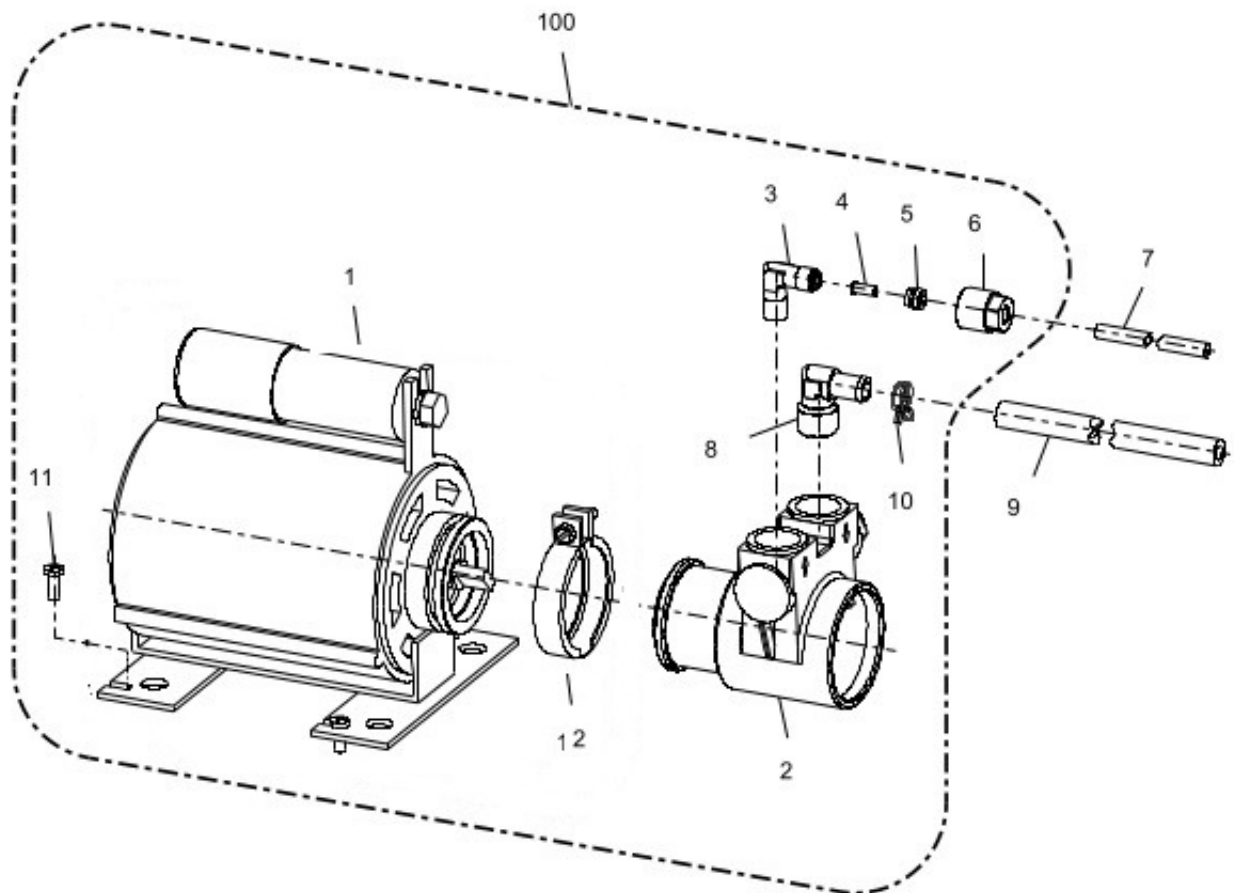


| ROTATIVE PUMP |               |                                            |          |                        |    |   |   |
|---------------|---------------|--------------------------------------------|----------|------------------------|----|---|---|
|               |               |                                            |          | Preventive Maintenance |    |   |   |
| Pos.          | Code          | Description                                | Critical | A                      | B  | C | D |
| 1             | Z0099003002   | MOTOR 120W 230V 50 HZ 4P                   |          |                        |    |   |   |
| 2             | Z0110004033   | PROCON PUMP MOD.13BB015F116A               | X        |                        |    |   |   |
| 3             | Z0100001022   | ELBOW CONNECTOR 8-3/8-1/4                  | X        | CK                     | CK | X |   |
| 4             | Z0100002005   | NUT D.4                                    |          |                        |    |   |   |
| 5             | Z0100002002   | LOCKING RING SO1-6                         |          |                        |    |   |   |
| 6             | Z0100001003   | TAP CONNECTOR SO20-6-1/4                   |          |                        |    |   |   |
| 7             | TTEF04/06T    | PTFE PIPE 4X6                              | X        | Y                      | Y  | Y | Y |
| 8             | Z0100003013   | ELBOW CONNECTOR                            |          |                        |    |   |   |
| 9/a           | TSIL06/11T-10 | SILICON HOSE 6X11 MT.10                    | X        | Y                      | Y  | Y | Y |
| 9/b           | TSIL06/11T-50 | SILICON HOSE 6X11 MT.50                    |          |                        |    |   |   |
| 10            | FASC000101    | CLAMP                                      |          |                        |    |   |   |
| 11            | VIT00000013   | SCREW HEAD TAP CAP M4X12                   |          |                        |    |   |   |
| 12            | Z0110004033/1 | V BAND CLAMP SLOTTED HEAD                  |          |                        |    |   |   |
| 100           | Z0110004033R2 | §ROTARY PUMP + ENGINE                      |          |                        |    |   |   |
| 200           | Z0110004033/0 | PROCON PUMP MOD.CB1521PX+CLAMP Pos. 12 + 2 | X        |                        |    |   |   |

water inlet panel

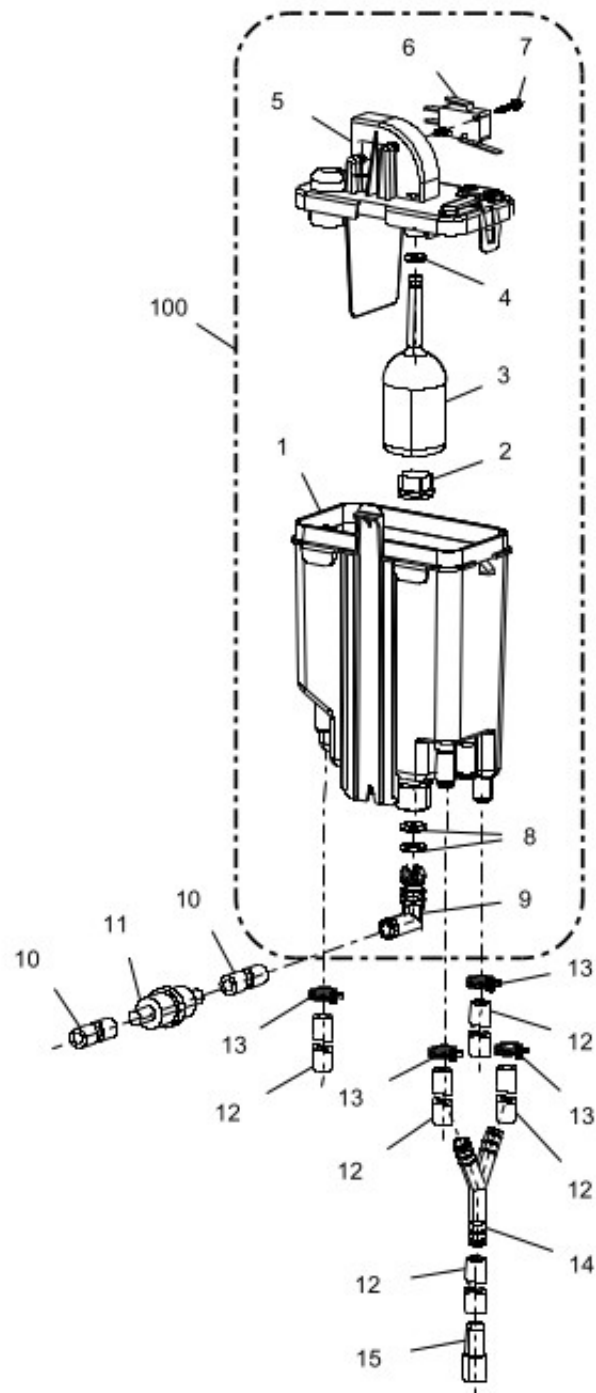


| water inlet panel |               |                           |          |                        |    |    |    |
|-------------------|---------------|---------------------------|----------|------------------------|----|----|----|
|                   |               |                           |          | Preventive Maintenance |    |    |    |
| Pos.              | Code          | Description               | Critical | A                      | B  | C  | D  |
| 1                 | Z0800013041   | AIR BREAK TANK            |          |                        |    |    |    |
| 2                 | Z0110020007   | PLASTIC FILTER DIAM. 20   | X        |                        |    | X  |    |
| 3                 | Z0800013046   | AIR BREAK WASTE FLOAT     | X        |                        |    |    |    |
| 4                 | GUA0000082    | SILICON GASKET D.6        | X        |                        | CK |    | CK |
| 5                 | Z0800013043   | AIR BREAK COVER           |          |                        |    |    |    |
| 6                 | ELE0001514    | MICROSWITCH 3A 125-250VA  | X        |                        |    | CK | X  |
| 7                 | VIT0002013    | SCREW ST HEAD CAP M2.9X19 |          |                        |    |    |    |
| 8                 | GUA0000043    | OR 109 NBR AL 75 BLACK    | X        |                        |    |    | X  |
| 9                 | Z0800009211   | ELBOW CONNECTOR           | X        |                        |    |    | X  |
| 10/a              | TSIL06/11T-10 | SILICON HOSE 6X11 MT.10   | X        | Y                      | Y  | Y  | Y  |
| 10/b              | TSIL06/11T-50 | SILICON HOSE 6X11 MT.50   |          |                        |    |    |    |
| 11                | Z0109002002   | H2O FILTER                | X        |                        | CK | CK | CK |
| 12/a              | TSIL07/11T-10 | SILICON HOSE 7X11 MT.10   | X        | Y                      | Y  | Y  | Y  |
| 12/b              | TSIL07/11T-50 | SILICON HOSE 7X11 MT.50   |          |                        |    |    |    |
| 13                | FASC000109    | CLAMP                     |          |                        |    |    |    |
| 14                | Z0100001065   | CONNECTOR "Y"             |          |                        |    |    |    |
| 15                | 650001057     | DRAINER PLUG              |          |                        |    |    |    |
| 100               | Z0800014001R  | § AIR BREAK FS            |          |                        |    |    |    |

GRINDER SUPPORT

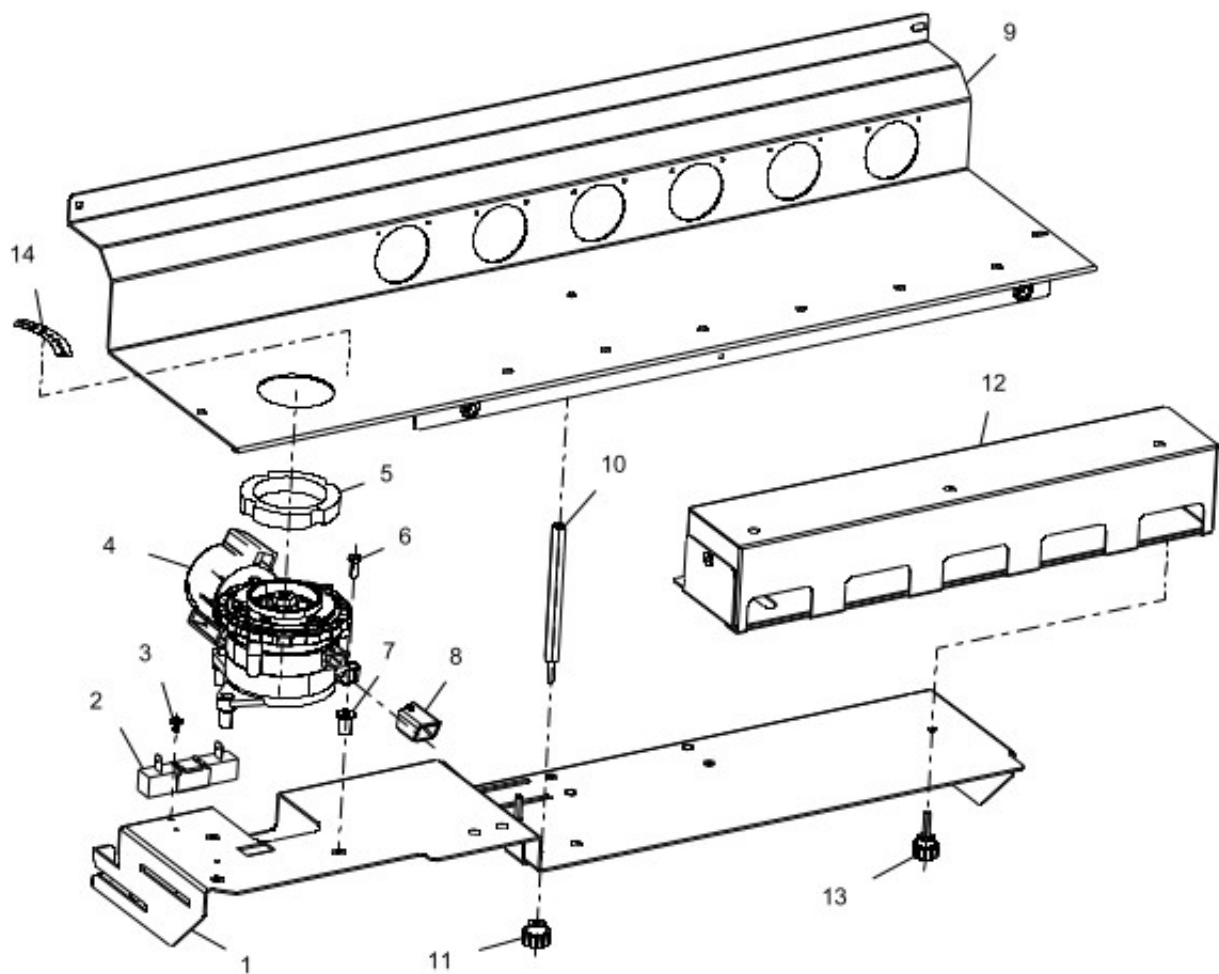


| GRINDER SUPPORT |               |                            |          |                        |   |   |   |
|-----------------|---------------|----------------------------|----------|------------------------|---|---|---|
|                 |               |                            |          | Preventive Maintenance |   |   |   |
| Pos.            | Code          | Description                | Critical | A                      | B | C | D |
| 1               | Z0072300348   | GRINDER PLATE FS1          |          |                        |   |   |   |
| 2               | ELT0002321    | WIRE RESISTOR              |          |                        |   |   |   |
| 3               | VIT0002009    | SCREW ST HEAD CAP M3.5X6.5 |          |                        |   |   |   |
| 4               |               | See table GRINDER          |          |                        |   |   |   |
| 5               | Z0320004519   | GRINDER GASKET H10         |          |                        |   |   |   |
| 6               | VIT0000013    | SCREW HEAD TAP CAP M4X12   |          |                        |   |   |   |
| 7               | Z0320001628   | NO-VIBRATION BUSH          |          |                        |   |   |   |
| 8               | Z007A158141NA | STRAIGHT GRINDER NOZZLE    |          |                        |   |   |   |
| 9/a             | Z007B170090   | CANISTER PLAN E7           |          |                        |   |   |   |
| 9/b             | Z007B170271   | E8 CANISTER SUPPORT        |          |                        |   |   |   |
| 10              | Z007B170240   | GRINDER REINFORCEMENT      |          |                        |   |   |   |
| 11              | VIT0009159    | HANDLE                     |          |                        |   |   |   |
| 12/a            | Z007B170258R  | § AIRBOX 4                 |          |                        |   |   |   |
| 12/b            | Z007B170225R  | § AIRBOX 5                 |          |                        |   |   |   |
| 13              | VIT0009180    | HANDLE                     |          |                        |   |   |   |
| 14              | Z0320004729   | GRINDER REGULATION LABEL   |          |                        |   |   |   |

GRINDER

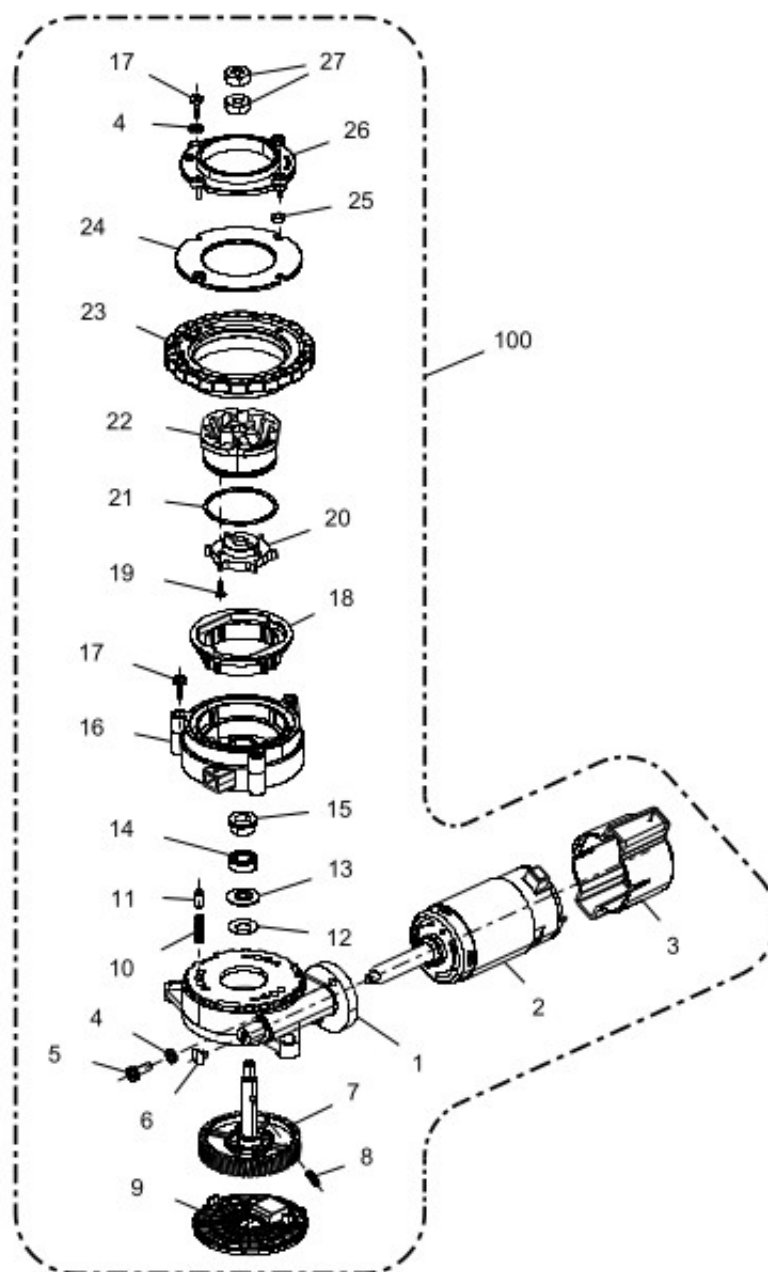


| GRINDER |                  |                                |          |                        |    |    |    |
|---------|------------------|--------------------------------|----------|------------------------|----|----|----|
|         |                  |                                |          | Preventive Maintenance |    |    |    |
| Pos.    | Code             | Description                    | Critical | A                      | B  | C  | D  |
| 1       | Z0320001639NA    | MOTOR SUPPORT (BLACK)          |          |                        |    |    |    |
| 2       | Z0090003047      | GRINDER MOTOR 230V DC          | X        |                        |    |    | CK |
| 3       | Z0320001615NA    | GRINDER SENSOR COVER BLACK     |          |                        |    |    |    |
| 4       | VIT0003103       | SPRING WASHER 4,3              |          |                        |    |    |    |
| 5       | VIT0000013       | SCREW HEAD TAP CAP M4X12       |          |                        |    |    |    |
| 6       | GUA0011023       | PLUG (BLACK)                   |          |                        |    |    |    |
| 7       | Z0320001608R     | TRANSMISSION WHEEL             | X        |                        |    |    | CK |
| 8       | Z0320001704      | GRINDER ROTATION PIN REINFORCE | X        |                        | CK | CK | CK |
| 9       | Z0320001604NA    | PLUG BLACK                     |          |                        |    |    |    |
| 10      | Z0320001643      | SPRING D.4X15X0,6              |          |                        |    |    |    |
| 11      | Z0320001624      | REGULATION PIN                 |          |                        |    |    |    |
| 12      | Z0320001629      | CUP SPRING 16x8,2 SP. 0,4      |          |                        |    |    |    |
| 13      | Z0320001625      | BUSH                           |          |                        |    |    |    |
| 14      | VIT0009325       | BEARING                        | X        |                        |    |    | CK |
| 15      | Z0320001641      | BUSHING                        |          |                        |    |    |    |
| 16      | Z0320001602NAR   | GRINDER BLADES SUPPORT         |          |                        |    |    |    |
| 17      | VIT0002469       | SCREW HEAD TAP M3.5X10         |          |                        |    |    |    |
| 18      | Z0320001635-03NA | GRINDER SUPPORT BLACK          |          |                        |    |    |    |
| 19      | VIT0000121       | SCREW COUNT FLAT HEAD M3X8     |          |                        |    |    |    |
| 20      | Z0320001636      | EJECTOR                        | X        |                        |    | CK |    |
| 21      | GUA0000124       | SILICONE OR 2137               | X        |                        | X  |    |    |
| 22      | Z0320001680      | CONIC BLADES PLUS              | X        |                        | CK |    | X  |
| 23      | Z0320001605NAR   | § REGULATION RING NUT BLACK    |          |                        |    |    |    |
| 24      | Z0320001622      | UPPER GRINDER FIXING           |          |                        |    |    |    |
| 25      | Z0320001666      | SPACER D.4x7x2                 |          |                        |    |    |    |
| 26      | Z0320001607NA    | DUCT BLACK                     |          |                        |    |    |    |
| 27      | Z0320001642      | LOWER GRINDER FIXING NUT       |          |                        |    |    |    |
| 100/a   | Z0320001600CL1   | § GRINDER PLUS -VARIFLEX BREWE |          |                        |    |    |    |
| 100/b   | Z0320001600CL1C  | GRINDER PLUS PREGRINDED        |          |                        |    |    |    |

ASPIRATION FAN

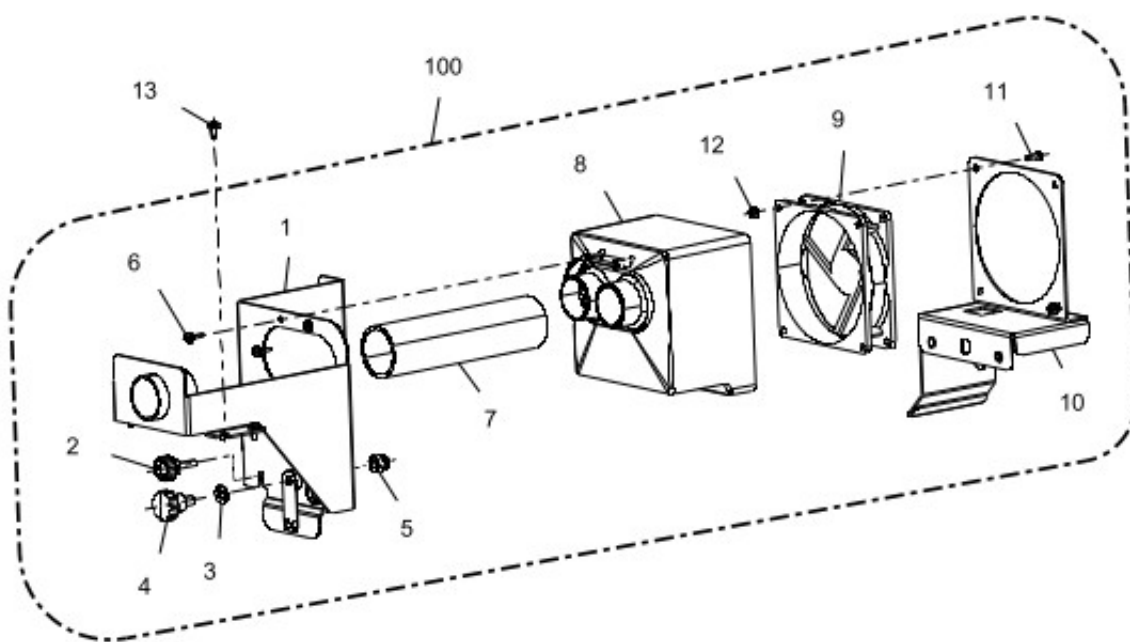


| ASPIRATION FAN |                |                              |          |                        |   |   |   |
|----------------|----------------|------------------------------|----------|------------------------|---|---|---|
|                |                |                              |          | Preventive Maintenance |   |   |   |
| Pos.           | Code           | Description                  | Critical | A                      | B | C | D |
| 1              | Z007B170139NAR | § FAN AND PIPE SUPPORT       |          |                        |   |   |   |
| 2              | VIT0009180     | HANDLE                       |          |                        |   |   |   |
| 3              | VIT0003005     | WASHER 6,4X12X1,6            |          |                        |   |   |   |
| 4              | VIT0009167     | HANDLE                       |          |                        |   |   |   |
| 5              | VIT0004903     | BLACK NUT M6 WITH CAPSULE    |          |                        |   |   |   |
| 6              | VIT0002469     | SCREW HEAD TAP M3.5X10       |          |                        |   |   |   |
| 7              | TEOL000002     | EXTRACTOR TUBE D.30          | X        |                        |   |   | X |
| 8              | Z0070020017CY  | EXTRACTOR FUNNEL RAL9018     |          |                        |   |   |   |
| 9              | ELE0000468R    | § FAN 24V DC-HIGH SPEED-D.92 | X        |                        |   | X |   |
| 10             | Z007B170137    | FAN SUPPORT                  |          |                        |   |   |   |
| 11             | VIT0000004     | SCREW HEAD TAP CAP M3X10     |          |                        |   |   |   |
| 12             | VIT0004701     | NUT M3                       |          |                        |   |   |   |
| 13             | VIT0000011     | SCREW HEAD TAP CAP M4X8      |          |                        |   |   |   |
| 100            | Z007B170139CL  | § FAN SUPPORT                |          |                        |   |   |   |

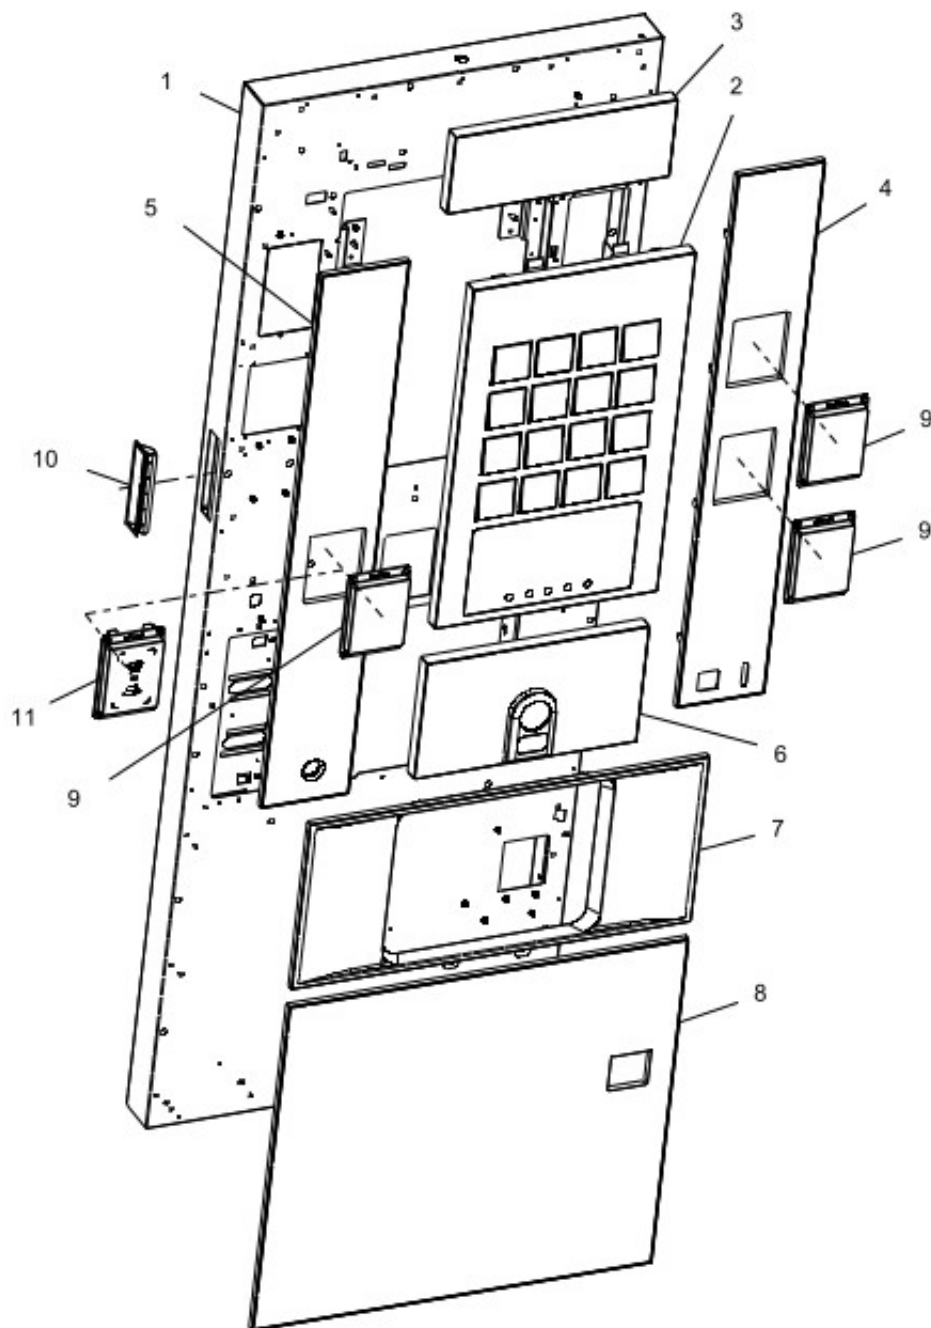


| external door |               |                            |          |                        |   |   |   |
|---------------|---------------|----------------------------|----------|------------------------|---|---|---|
|               |               |                            |          | Preventive Maintenance |   |   |   |
| Pos.          | Code          | Description                | Critical | A                      | B | C | D |
| 1             | Z002B170301NA | DOOR FRAME                 |          |                        |   |   |   |
| 2             |               | See table SELECTION KEYPAD |          |                        |   |   |   |
| 3             | Z002B170004NA | TOP SCREEN PANEL           |          |                        |   |   |   |
| 4             | Z002B170030NA | RIGHT PANEL                |          |                        |   |   |   |
| 5             | Z002B170003NA | LEFT PANEL                 |          |                        |   |   |   |
| 6             |               | See table LOGO PANEL       |          |                        |   |   |   |
| 7             | Z002B170034CQ | SUPP. CUP SCREEN PANEL     |          |                        |   |   |   |
| 8             | Z002B170001NA | BOTTOM PANEL               |          |                        |   |   |   |
| 9             | Z002B175033NA | PAYMENT SYSTEM PLUG        |          |                        |   |   |   |
| 10            | Z0020034823   | HANDLE                     |          |                        |   |   |   |
| 11            |               | See table RFID CARD READER |          |                        |   |   |   |

**internal door**

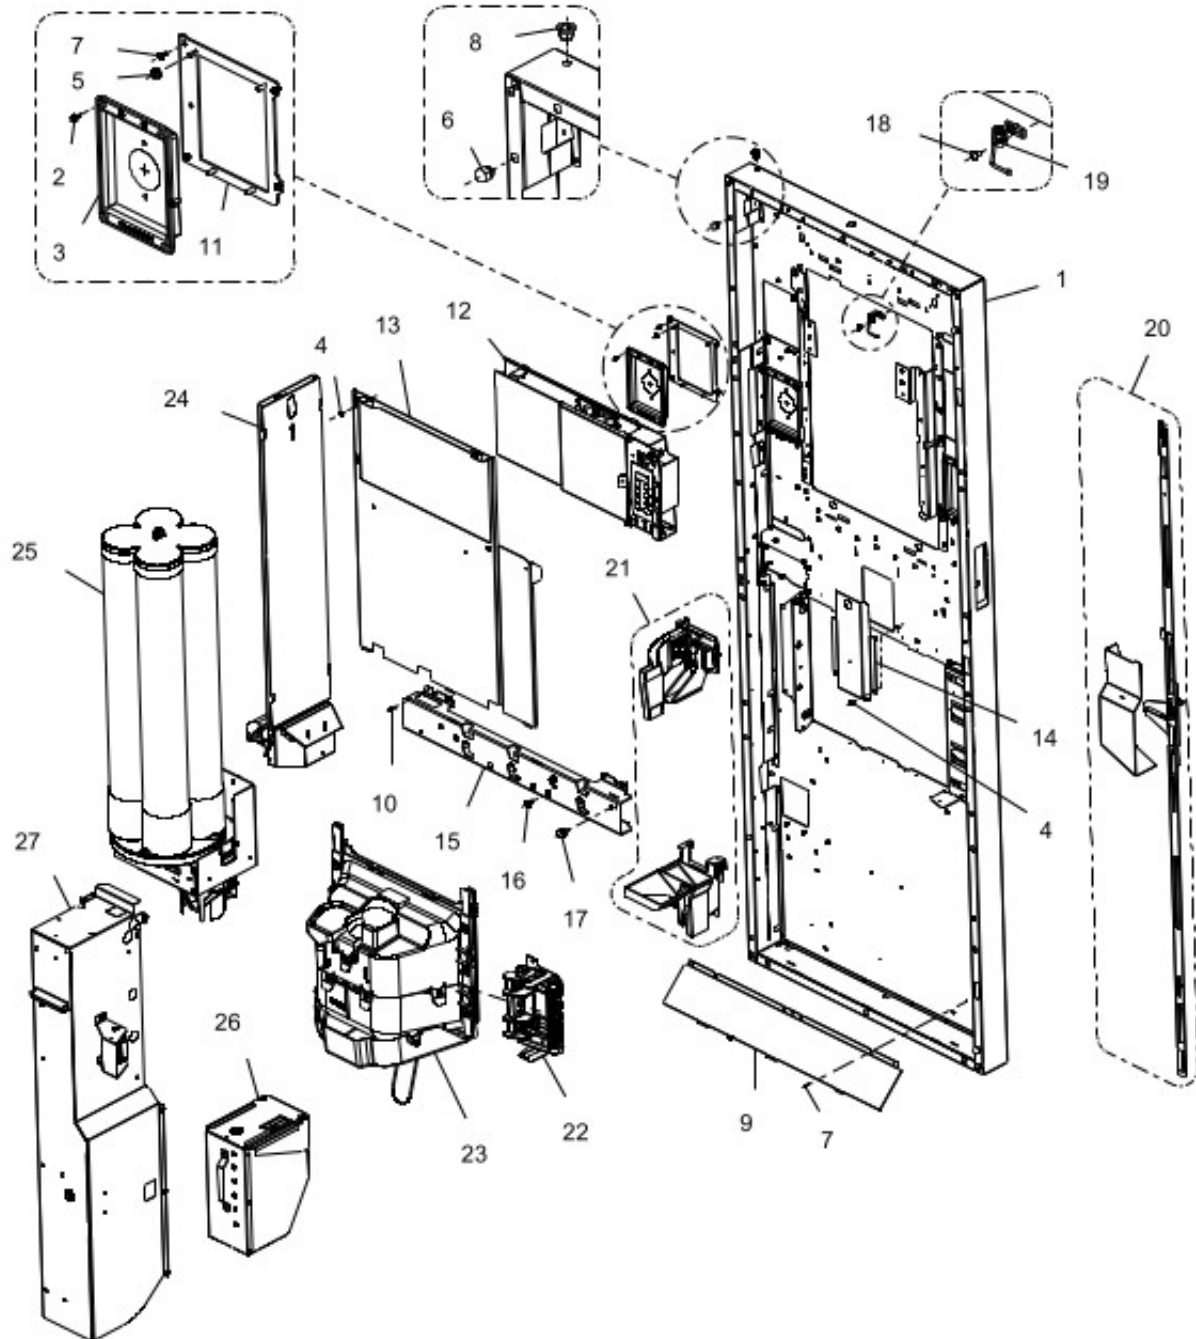


| internal door |               |                                        |          |                        |   |   |   |
|---------------|---------------|----------------------------------------|----------|------------------------|---|---|---|
|               |               |                                        |          | Preventive Maintenance |   |   |   |
| Pos.          | Code          | Description                            | Critical | A                      | B | C | D |
| 1             | Z002B170301NA | DOOR FRAME                             |          |                        |   |   |   |
| 2             | VIT0002487    | SCREW 3,5X6                            |          |                        |   |   |   |
| 3             | Z002B175033NA | PAYMENT SYSTEM PLUG                    |          |                        |   |   |   |
| 4             | VIT0000011    | SCREW HEAD TAP CAP M4X8                |          |                        |   |   |   |
| 5             | DAM0000056    | NUT M4                                 |          |                        |   |   |   |
| 6             | GUA0011030    | FOOT PUSH ON BLACK                     |          |                        |   |   |   |
| 7             | VIT0002009    | SCREW ST HEAD CAP M3.5X6.5             |          |                        |   |   |   |
| 8             | Z0020034156   | DOOR HINGE BUSH                        |          |                        |   |   |   |
| 9             | Z002B170334NA | LOWER DOOR SLIDE                       |          |                        |   |   |   |
| 10            | VIT0000012    | SCREW HEAD TAP CAP M4X10               |          |                        |   |   |   |
| 11            | Z002B170330NA | PAY SUPPORT                            |          |                        |   |   |   |
| 12            |               | See table DOOR CONTROL PANEL           |          |                        |   |   |   |
| 13            | Z002B170364NA | HMI COVER                              |          |                        |   |   |   |
| 14            | Z002B170341NA | LOGO COVER                             |          |                        |   |   |   |
| 15            | Z002B170319   | CROSS FRAME DOOR                       |          |                        |   |   |   |
| 16            | VIT0000236    | SCREW HEX HEAD M6X11                   |          |                        |   |   |   |
| 17            | VIT0009168    | KNURLED HANDLE                         |          |                        |   |   |   |
| 18            | DAM0000061    | TAPPING SCEW TC 3,9x9,5 T.             |          |                        |   |   |   |
| 19            | H502100043    | SAFETY SWITCH SPRING                   |          |                        |   |   |   |
| 20            |               | See table DOOR CLOSURE                 |          |                        |   |   |   |
| 21            |               | See table INTRODUCTION/RETURN OF COINS |          |                        |   |   |   |
| 22            |               | See table CUP STATION HANDLE           |          |                        |   |   |   |
| 23            |               | See table 1 turret cups station        |          |                        |   |   |   |
| 24            |               | See table stirrer dispenser            |          |                        |   |   |   |
| 25            |               | See table cups loader (1 turret)       |          |                        |   |   |   |
| 26            |               | See table COIN BOX                     |          |                        |   |   |   |
| 27            |               | See table COIN BOX COVER               |          |                        |   |   |   |

DOOR CLOSURE

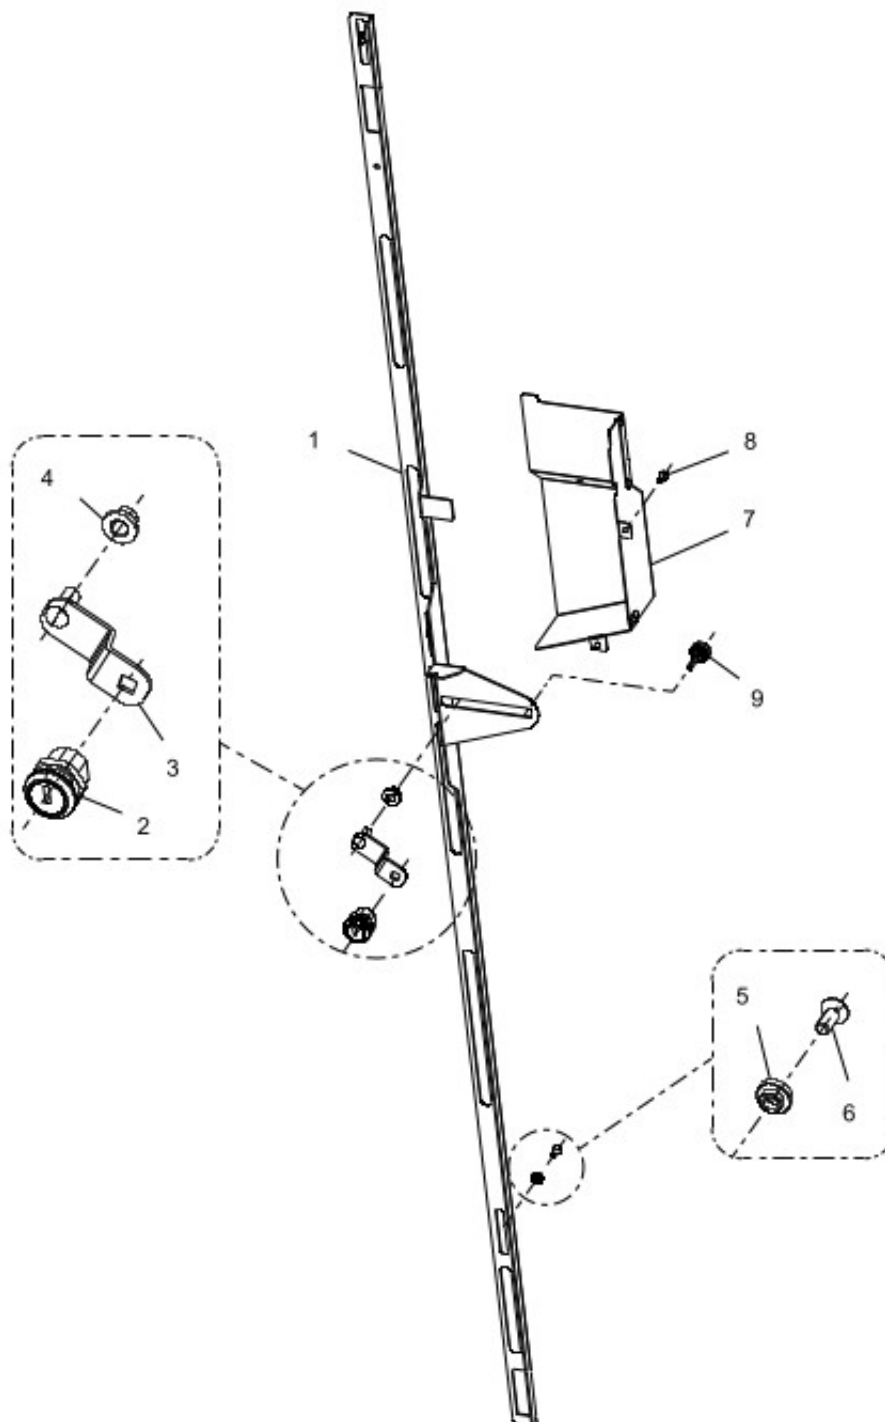


| DOOR CLOSURE |             |                             |          |                        |   |   |   |
|--------------|-------------|-----------------------------|----------|------------------------|---|---|---|
|              |             |                             |          | Preventive Maintenance |   |   |   |
| Pos.         | Code        | Description                 | Critical | A                      | B | C | D |
| 1            | Z0022400160 | LEVER HANDLE DOOR           |          |                        |   |   |   |
| 2/a          | SER0000028  | LOCK MM20 + KEY 3480        | X        |                        |   |   |   |
| 2/b          | SER0000023  | LOCK RIELDA                 | X        |                        |   |   |   |
| 3            | Z002B170130 | DOOR LOCK PLATE             |          |                        |   |   |   |
| 4            | Z002A003017 | LOCK ROD BUSHING            |          |                        |   |   |   |
| 5            | H66100008   | SPACER                      |          |                        |   |   |   |
| 6            | VIT0000107  | SCREW COUNT FLAT HEAD M4X10 |          |                        |   |   |   |
| 7            | Z002B170332 | DOOR LOCK COVER             |          |                        |   |   |   |
| 8            | VIT0000011  | SCREW HEAD TAP CAP M4X8     |          |                        |   |   |   |
| 9            | VIT0009180  | HANDLE                      |          |                        |   |   |   |

RFID CARD READER

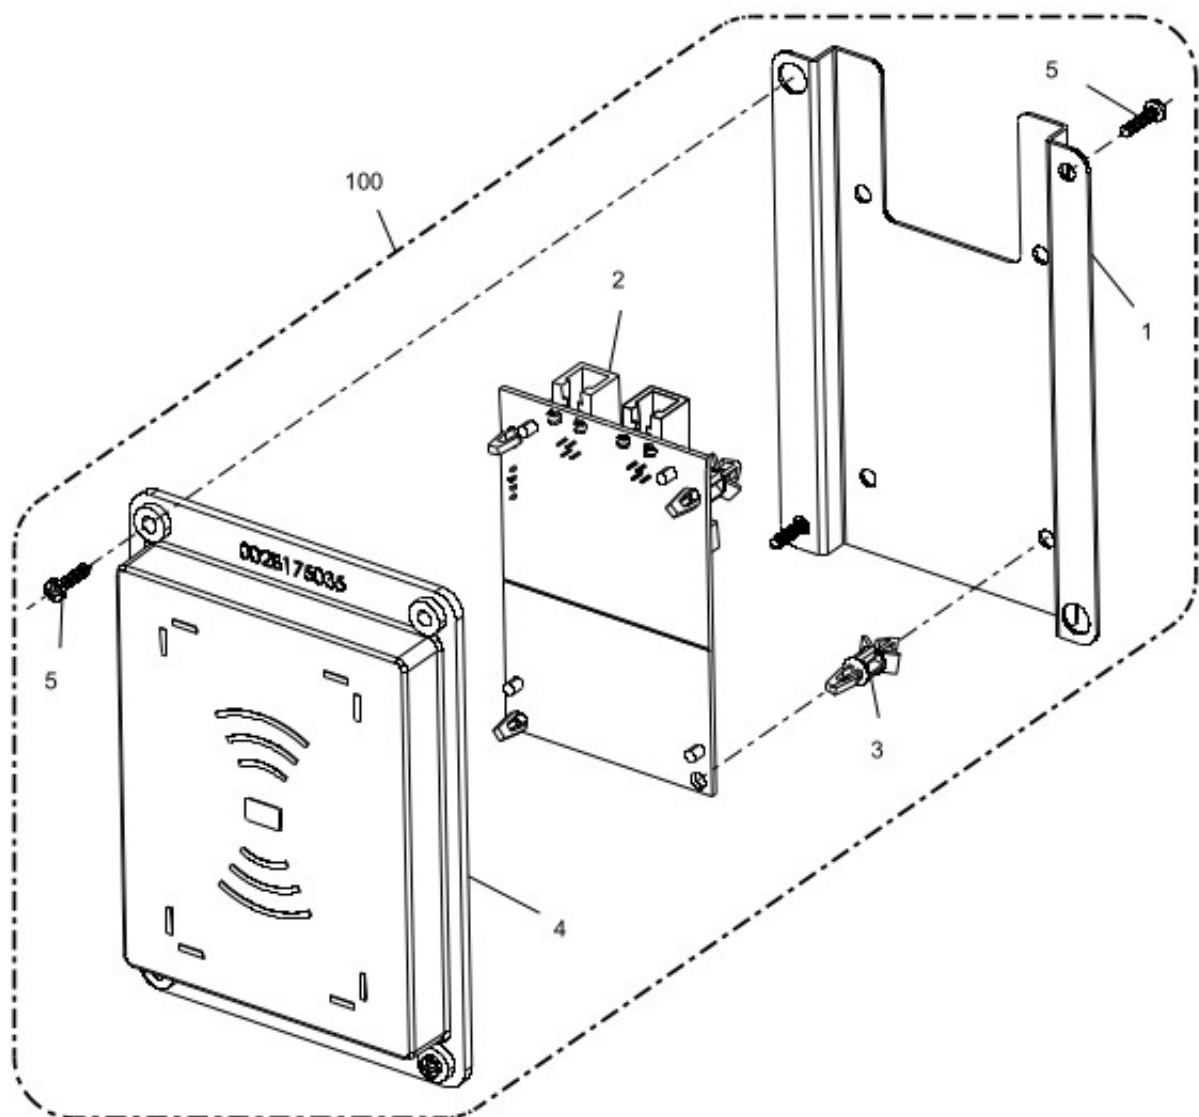


| RFID CARD READER |               |                           |          |                        |   |   |   |
|------------------|---------------|---------------------------|----------|------------------------|---|---|---|
|                  |               |                           |          | Preventive Maintenance |   |   |   |
| Pos.             | Code          | Description               | Critical | A                      | B | C | D |
| 1                | Z002B170346   | RFID SUPPORT              |          |                        |   |   |   |
| 2                | SCH0006261    | RFID CARD READER_1        | X        |                        |   |   |   |
| 3                | ELE0062003    | BOARD SUPPORT             |          |                        |   |   |   |
| 4                | Z002B175035NA | PAYMENT SYSTEMS PLUG RFID |          |                        |   |   |   |
| 5                | VIT0002014    | SCREW ST HEAD CAP M2.9X13 |          |                        |   |   |   |
| 100              | Z002B170346R  | § RFID                    |          |                        |   |   |   |

DOOR CONTROL PANEL

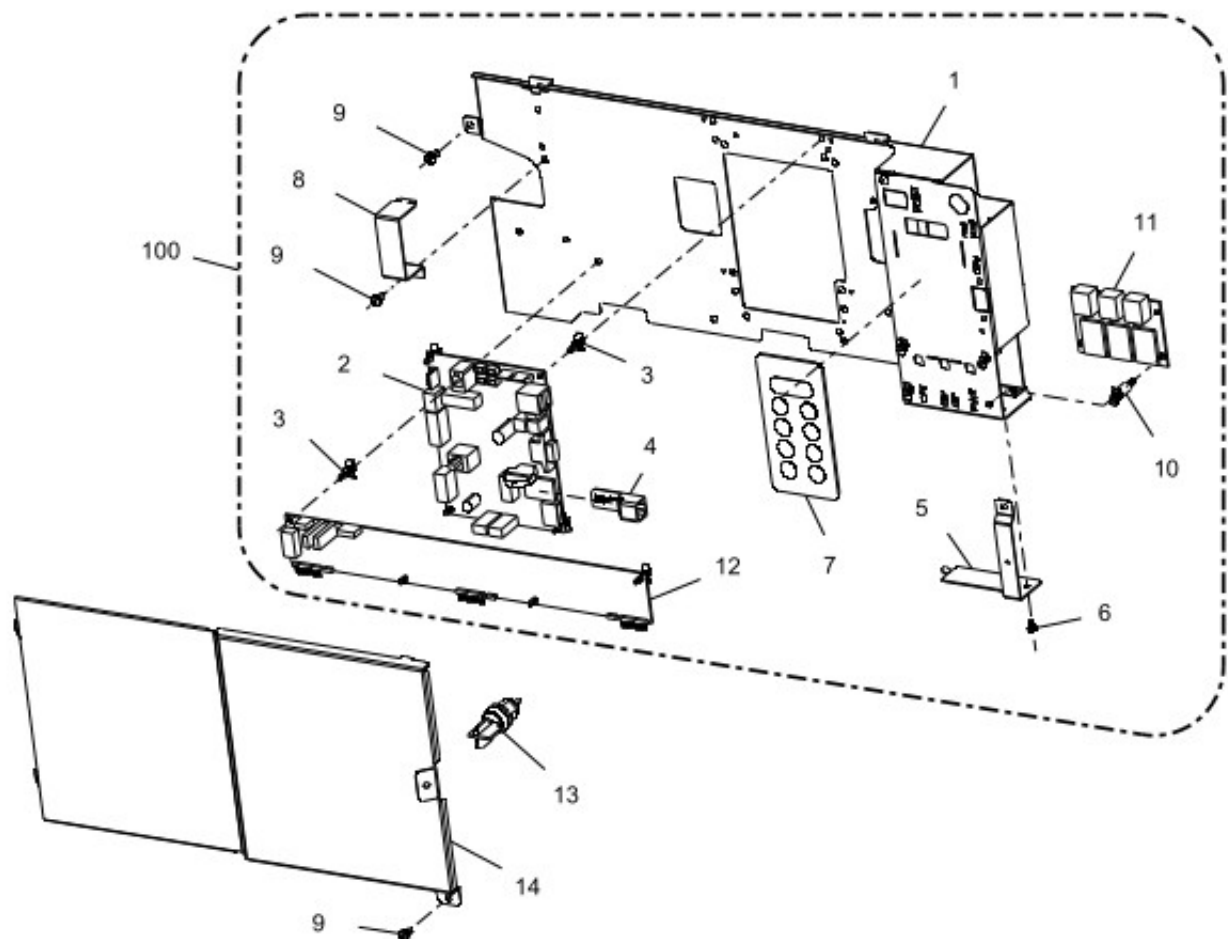


| DOOR CONTROL PANEL |                |                                |          |                        |   |   |   |
|--------------------|----------------|--------------------------------|----------|------------------------|---|---|---|
|                    |                |                                |          | Preventive Maintenance |   |   |   |
| Pos.               | Code           | Description                    | Critical | A                      | B | C | D |
| 1                  | Z0022300078NA  | FS1 DOOR BOARD PANEL           |          |                        |   |   |   |
| 2                  | SCH0007904     | CPU BOARD (2017)               | X        |                        |   |   |   |
| 3                  | ELE0062036     | SPACER                         |          |                        |   |   |   |
| 4                  | SCHA158002     | CONNECTION BOARD RHEAFLASH OUT |          |                        |   |   |   |
| 5                  | Z002B170363NA  | FLASH CARD COVER               |          |                        |   |   |   |
| 6                  | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5     |          |                        |   |   |   |
| 7                  | ELTB170001     | PROGRAM. KEYPAD                | X        |                        |   |   |   |
| 8                  | Z002B170353    | CLAM                           |          |                        |   |   |   |
| 9                  | VIT0000011     | SCREW HEAD TAP CAP M4X8        |          |                        |   |   |   |
| 10                 | ELE0062039     | SPACER SR2706 LCBS-10-01       |          |                        |   |   |   |
| 11                 | BRD07004A-00   | CONNECTION BOARD RHEAFLASH IN  | X        |                        |   |   |   |
| 12                 | SCH0008421     | KEYPAD BOARD                   |          |                        |   |   |   |
| 13                 | KITXS00131     | FREE VEND KEY KIT              |          |                        |   |   |   |
| 14                 | Z002B170312NA  | BOARD COVER PANEL              |          |                        |   |   |   |
| 100                | Z014B170001CL4 | § DOOR ELECTRIC PANEL          |          |                        |   |   |   |

LOGO PANEL

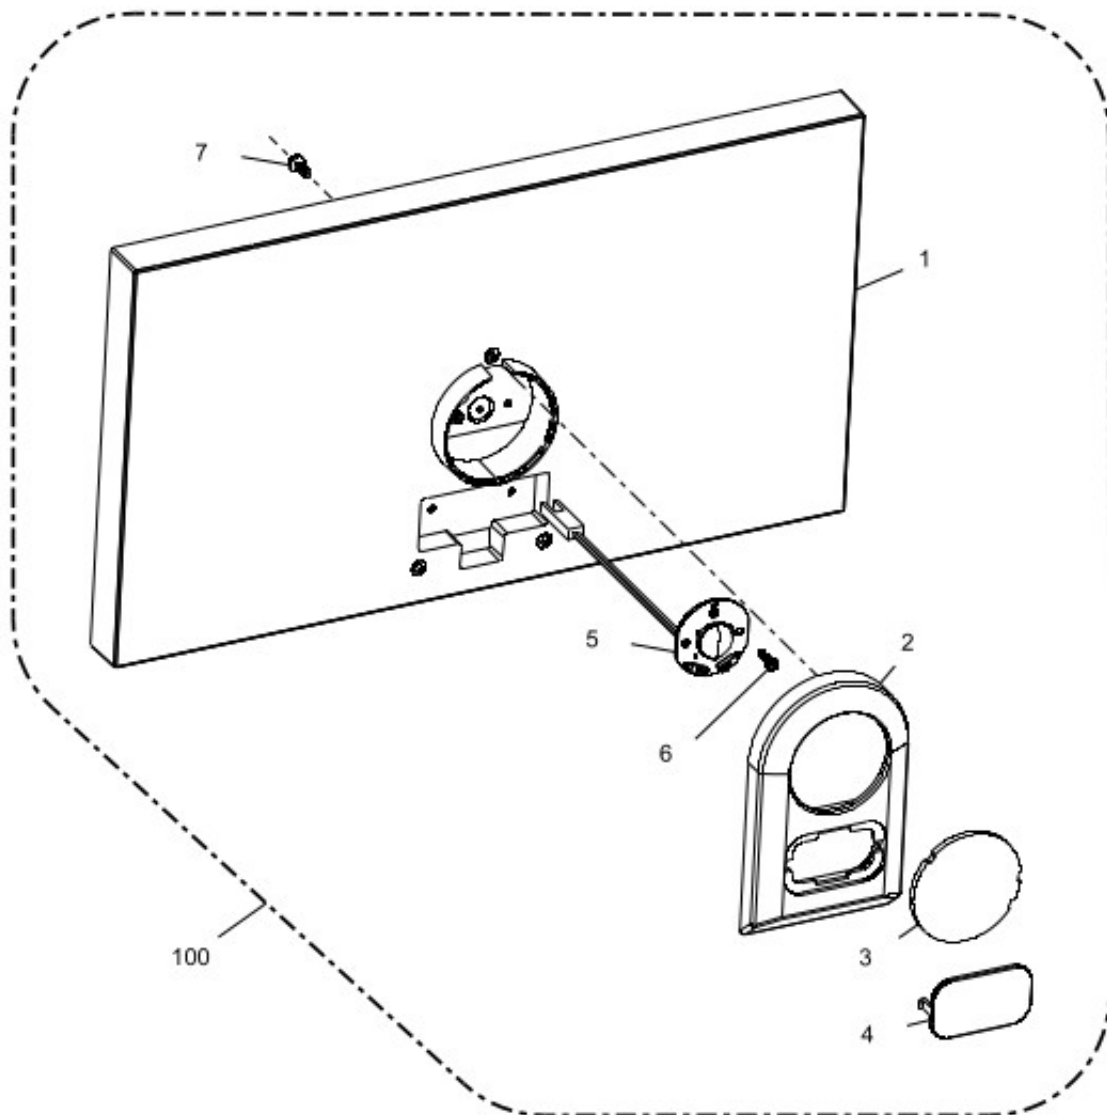


| LOGO PANEL |                 |                          |          |                        |   |   |   |
|------------|-----------------|--------------------------|----------|------------------------|---|---|---|
|            |                 |                          |          | Preventive Maintenance |   |   |   |
| Pos.       | Code            | Description              | Critical | A                      | B | C | D |
| 1          | Z002B170038NA   | BOTTOM SCREEN PANEL      |          |                        |   |   |   |
| 2          | Z002A158224NA   | RHEA LOGO BEZEL          |          |                        |   |   |   |
| 3          | 103A158001      | LOGO "laRhea"            |          |                        |   |   |   |
| 4          | Z0020042251NE   | SMOKED PLEXIGLASS SENSOR |          |                        |   |   |   |
| 5          | Z002A158227     | LOGO BACKLIGHTING BOARD  |          |                        |   |   |   |
| 6          | VIT0002485      | SCREW ST HEAD CAP 3X10   |          |                        |   |   |   |
| 7          | VIT0002469      | SCREW HEAD TAP M3.5X10   |          |                        |   |   |   |
| 100        | Z002B170038NACL | § LOGO PANEL             |          |                        |   |   |   |

SELECTION KEYPAD

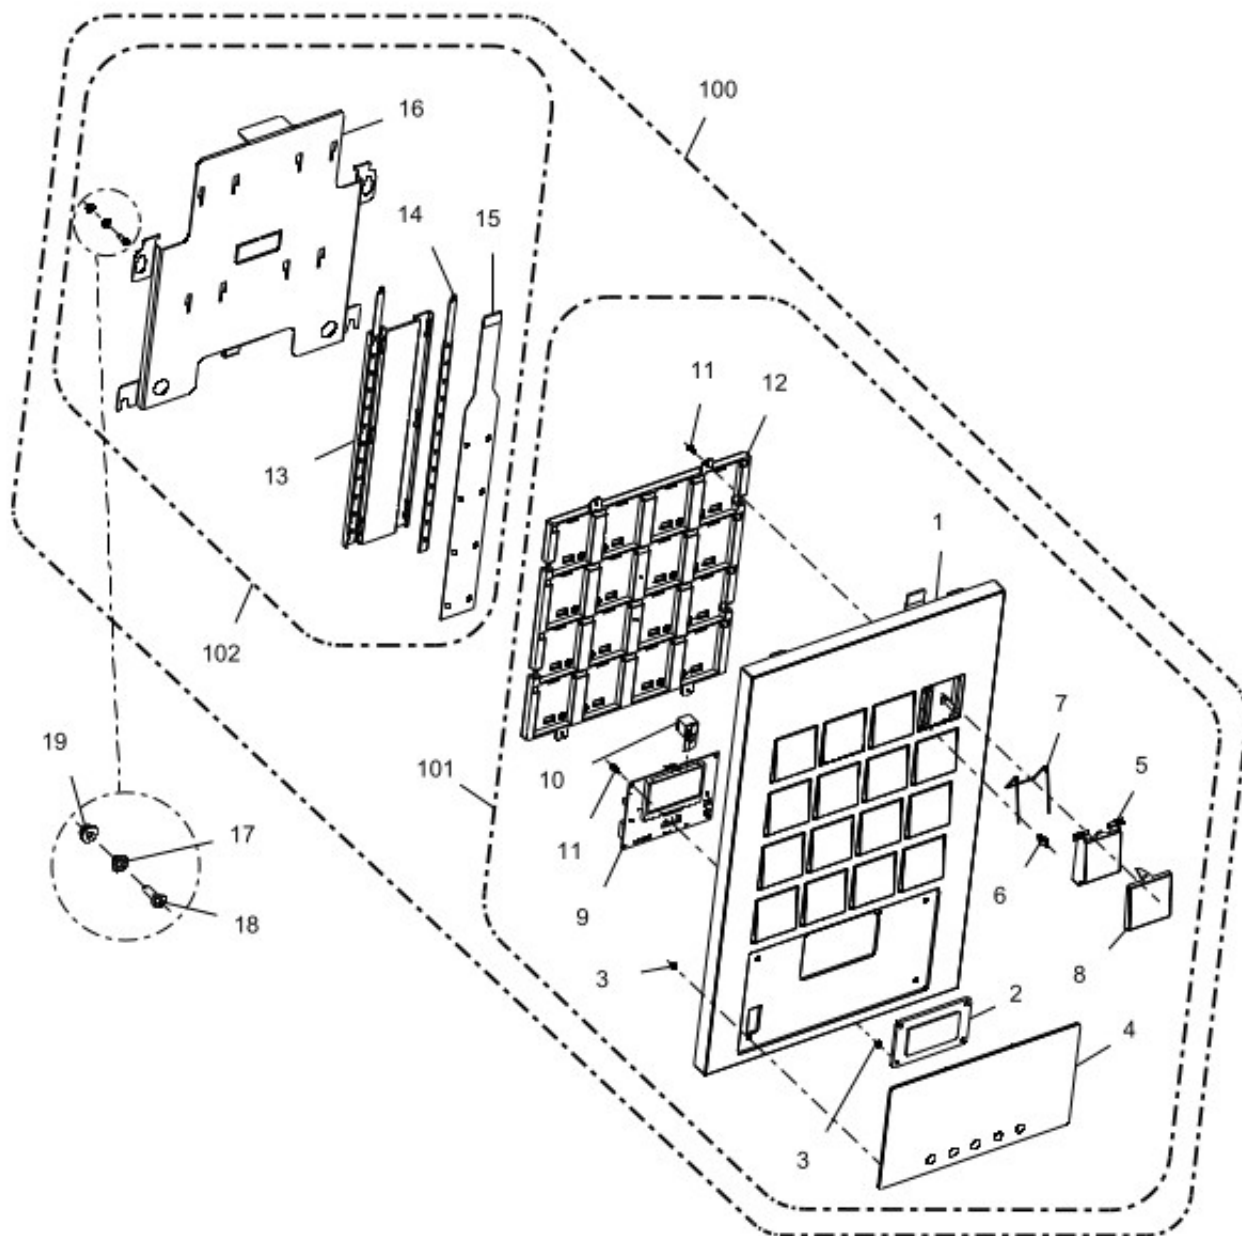


| SELECTION KEYPAD |                   |                             |          |                        |   |   |   |
|------------------|-------------------|-----------------------------|----------|------------------------|---|---|---|
|                  |                   |                             |          | Preventive Maintenance |   |   |   |
| Pos.             | Code              | Description                 | Critical | A                      | B | C | D |
| 1                | Z002B170111NA     | KEYBOARD FRONT COVER        |          |                        |   |   |   |
| 2                | Z002B170107       | SCREEN SPACER               |          |                        |   |   |   |
| 3                | VIT0004503        | NUT M4                      |          |                        |   |   |   |
| 4                | Z002B170105NA     | MEMBRANE KEYBORD            |          |                        |   |   |   |
| 5                | Z0020042027TR     | SELECTION BUTTON            |          |                        |   |   |   |
| 6                | Z0020042023       | SELECTION BUTTON PLUG       |          |                        |   |   |   |
| 7                | Z0020042012       | SELECTION BUTTON SPRING     |          |                        |   |   |   |
| 8                | Z0020042028       | TRANSPARENT BUTTON LID      |          |                        |   |   |   |
| 9                | SCH0008441        | DISPLAY RS232               |          |                        |   |   |   |
| 10               | SCHA158003        | CONNECTION BOARD OUT 90     |          |                        |   |   |   |
| 11               | VIT0002469        | SCREW HEAD TAP M3.5X10      |          |                        |   |   |   |
| 12               | Z002B170112       | REAR KEYBOARD COVER         |          |                        |   |   |   |
| 13               | Z0020042236       | KEYPAD SUPPORT              |          |                        |   |   |   |
| 14               | Z0020042234       | 12 ADHESIVE LED STRIP       |          |                        |   |   |   |
| 15               | Z0020042024       | KEYPAD 8 BUTTON             |          |                        |   |   |   |
| 16               | Z0022300081       | FS1 BUTTON LED SUPPORT      |          |                        |   |   |   |
| 17               | H66100008         | SPACER                      |          |                        |   |   |   |
| 18               | VIT0000013        | SCREW HEAD TAP CAP M4X12    |          |                        |   |   |   |
| 19               | DAM0000056        | NUT M4                      |          |                        |   |   |   |
| 100              | Z002B170111NAR100 | § SELECT KEYPAD 16S+SUPPORT |          |                        |   |   |   |
| 101              | Z002B170111NAR2   | § SELECT KEYPAD 16 BUTTON   |          |                        |   |   |   |
| 102              | Z0022300081R      | § KEYPAD SUPPORT W/LED      |          |                        |   |   |   |

1 turret cups station

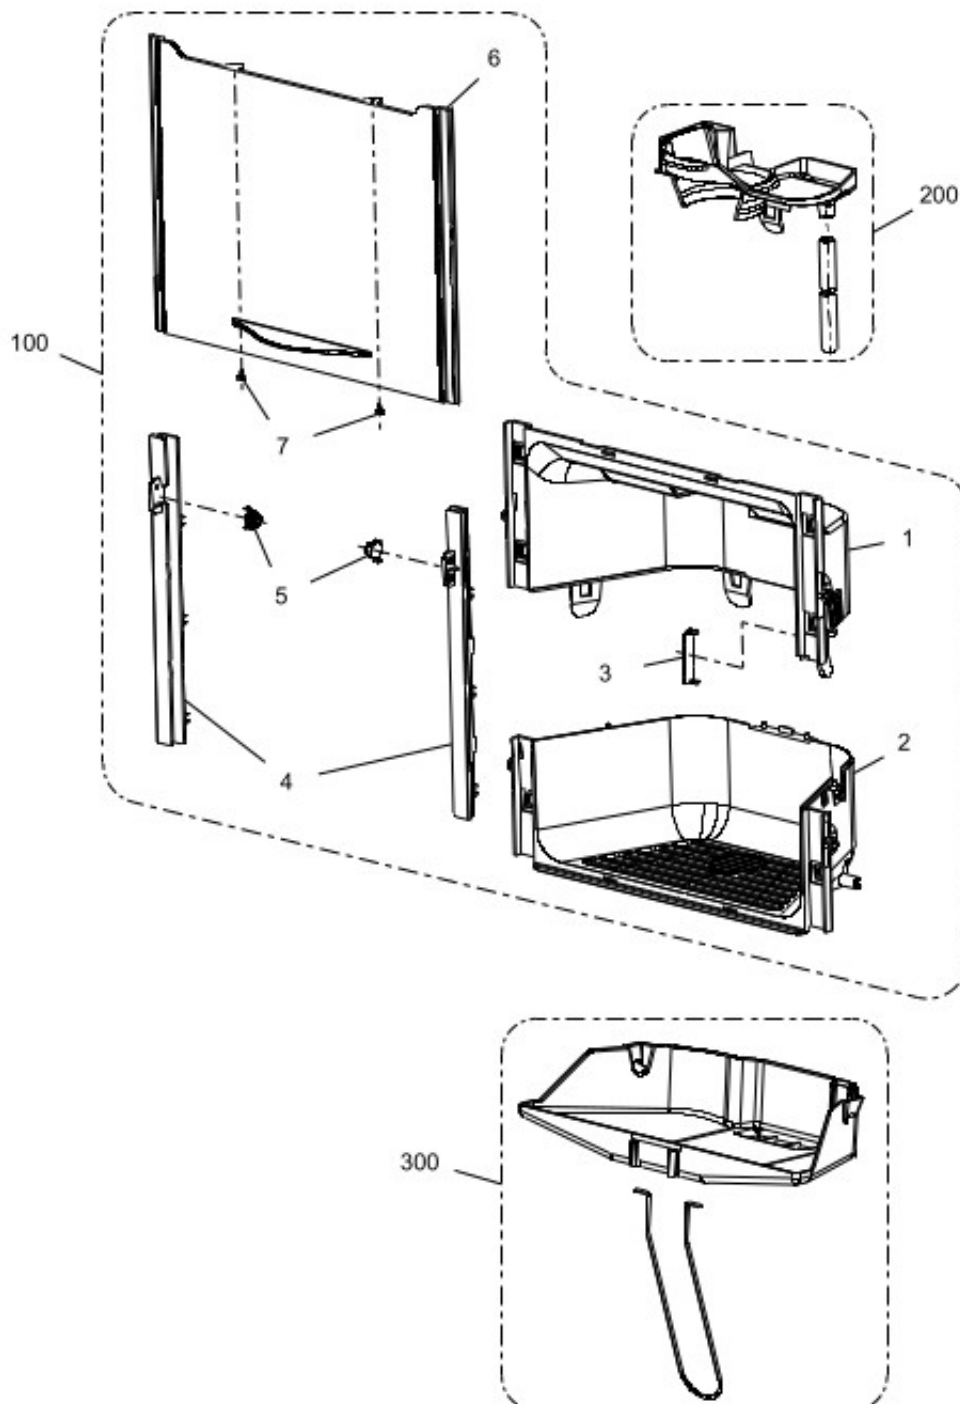


| 1 turret cups station |                 |                                                                        |          |                        |   |   |   |
|-----------------------|-----------------|------------------------------------------------------------------------|----------|------------------------|---|---|---|
|                       |                 |                                                                        |          | Preventive Maintenance |   |   |   |
| Pos.                  | Code            | Description                                                            | Critical | A                      | B | C | D |
| 1                     | Z040B170002NA   | CUP STATION UPPER FRAME                                                |          |                        |   |   |   |
| 2                     | Z040B170003NA   | CUP STATION LOWER FRAME                                                |          |                        |   |   |   |
| 3                     | Z0020042251     | TRANSPARENT PLEXIGLASS SENSOR                                          | X        |                        |   |   |   |
| 4                     | Z0400009851CWR  | § DOOR GUIDE LH+RH RAL 7043                                            |          |                        |   |   |   |
| 5                     | Z0400009096     | FLAP RETARDER                                                          |          |                        |   |   |   |
| 6                     | Z040B170006TR   | GLASS DOOR                                                             |          |                        |   |   |   |
| 7                     | GUA0011017      | MACHINE FOOT D.7,9                                                     |          |                        |   |   |   |
| 100                   | Z040B170001NACL | § CUP STATION                                                          |          |                        |   |   |   |
| 200                   | Z040B170005NACL | § CUP SUPPORT 1T For version with cups Ø80 - Ø70 W/O stirrer dispenser |          |                        |   |   |   |
| 200/a                 | Z0402400002NACL | § CUP SUPPORT 1T For version with cups Ø70 With stirrer dispenser      |          |                        |   |   |   |
| 300                   | Z040B170004NACL | § DRIP TRY                                                             |          |                        |   |   |   |

cups loader (1 turret)

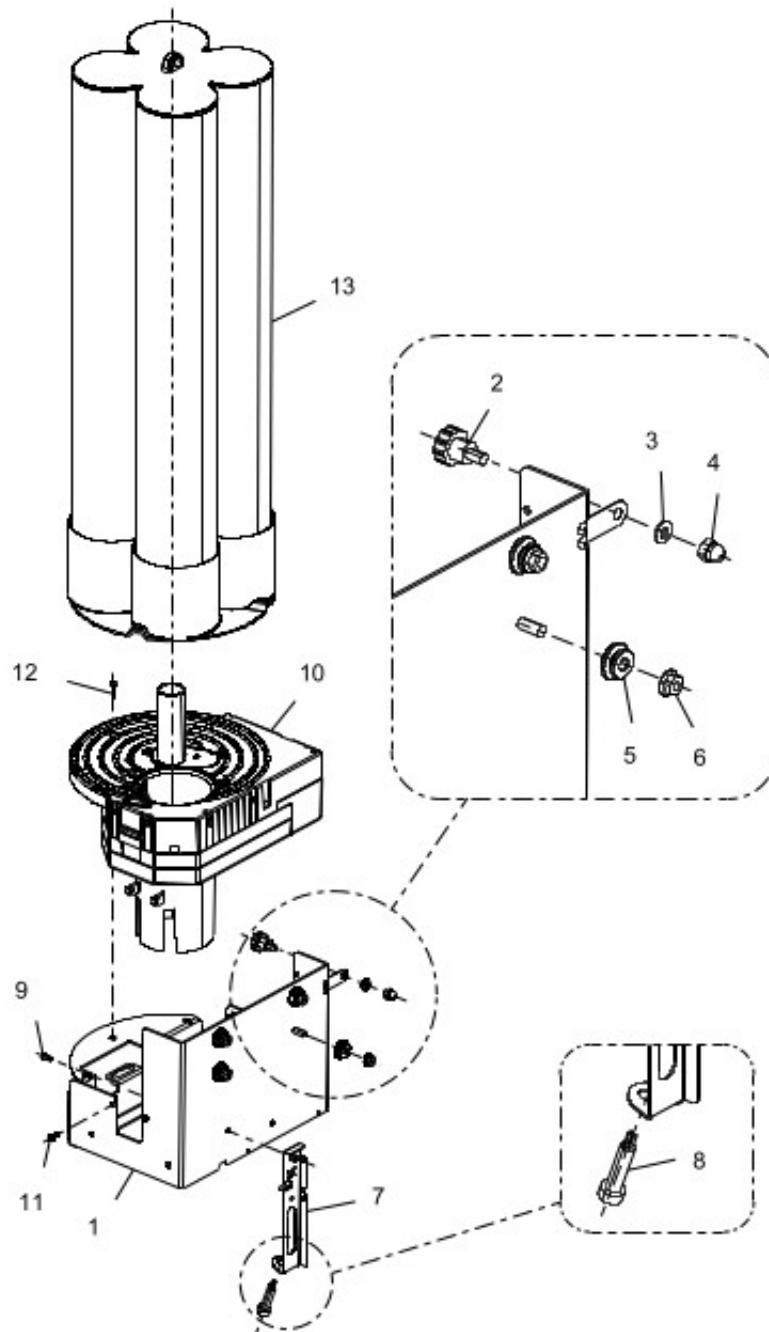

| cups loader (1 turret) |               |                                 |          |                        |   |   |   |
|------------------------|---------------|---------------------------------|----------|------------------------|---|---|---|
|                        |               |                                 |          | Preventive Maintenance |   |   |   |
| Pos.                   | Code          | Description                     | Critical | A                      | B | C | D |
| 1                      | Z002B170349NA | DB SUPPORT 1T ø 70              |          |                        |   |   |   |
| 2                      | VIT0009167    | HANDLE                          |          |                        |   |   |   |
| 3                      | VIT0003005    | WASHER 6,4X12X1,6               |          |                        |   |   |   |
| 4                      | VIT0004903    | BLACK NUT M6 WITH CAPSULE       |          |                        |   |   |   |
| 5                      | Z0022300111   | DB SUPPORT PIN                  |          |                        |   |   |   |
| 6                      | VIT0004830    | NUT M6                          |          |                        |   |   |   |
| 7                      | Z002B170351   | SPOT SUPPORT                    |          |                        |   |   |   |
| 8                      | ELT0006781    | CUPS STATION LED 24V            |          |                        |   |   |   |
| 9                      | VIT0000011    | SCREW HEAD TAP CAP M4X8         |          |                        |   |   |   |
| 10                     |               | See table CUP DISPENSER 1 TURET |          |                        |   |   |   |
| 11                     | VIT0002469    | SCREW HEAD TAP M3.5X10          |          |                        |   |   |   |
| 12                     | VIT0000014    | SCREW HEAD TAP CAP M4X16        |          |                        |   |   |   |
| 13                     |               | See table cups turret           |          |                        |   |   |   |



CUP DISPENSER 1 TURET

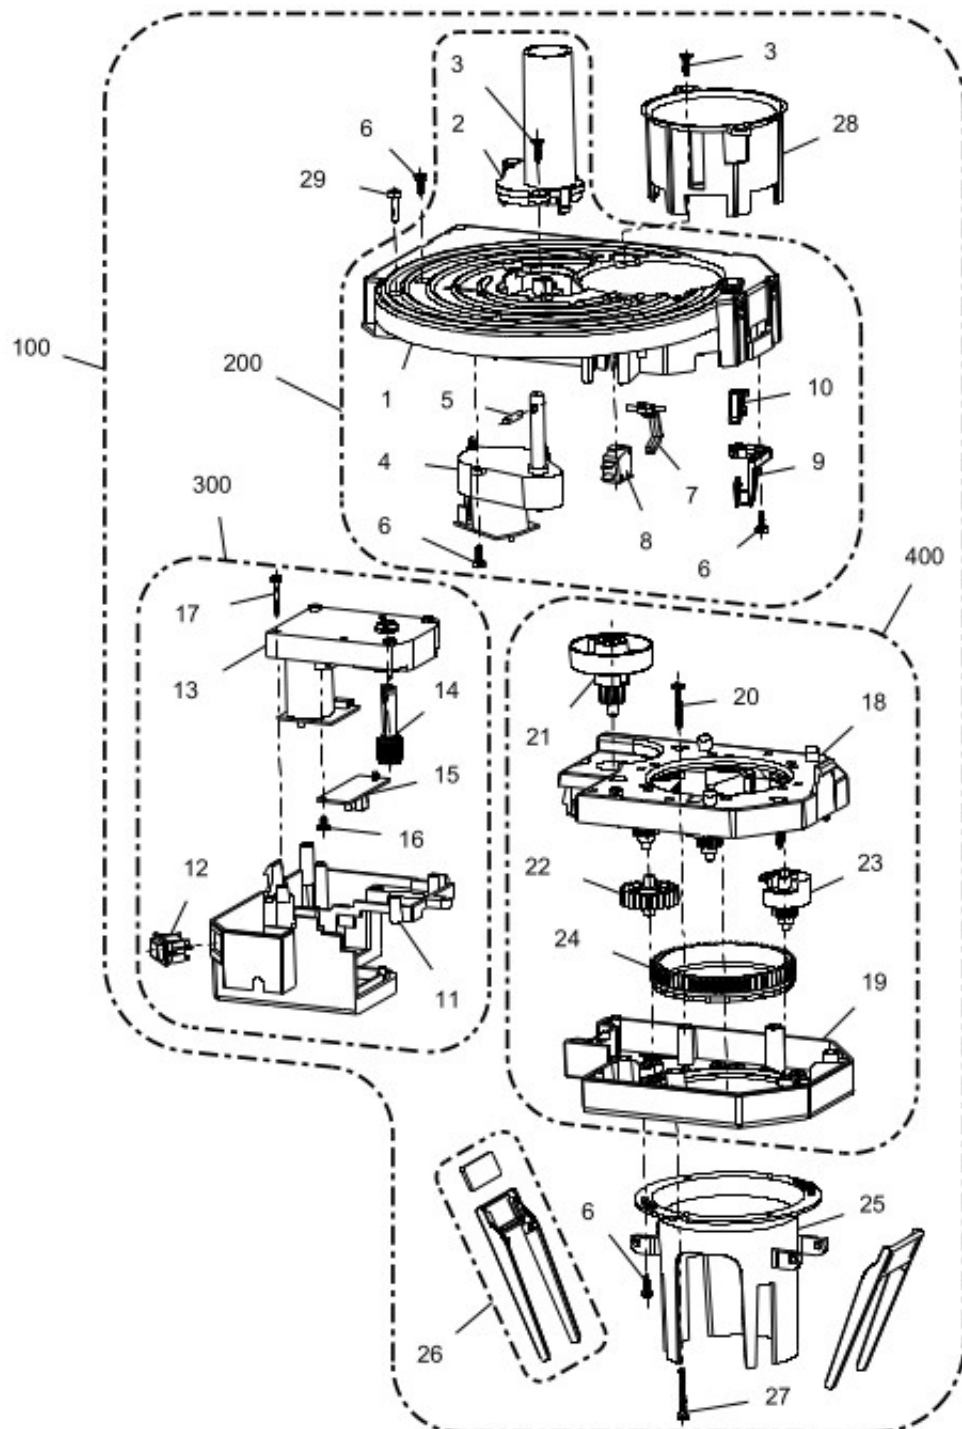

| CUP DISPENSER 1 TURET |                  |                                |          |                        |   |   |      |
|-----------------------|------------------|--------------------------------|----------|------------------------|---|---|------|
|                       |                  |                                |          | Preventive Maintenance |   |   |      |
| Pos.                  | Code             | Description                    | Critical | A                      | B | C | D    |
| 1                     | Z0190006581CI    | TURRET SUPPORT RAL 7042        |          |                        |   |   |      |
| 2/a                   | Z0190006537CY    | TURRET CUP CONNEC. 4C. RAL9018 | X        |                        |   |   |      |
| 2/b                   | Z0190006547CF    | TURRET CUP CONNEC. 5C. RAL7016 |          |                        |   |   |      |
| 3                     | VIT0002101       | SCREW COUNT FLAT HEAD M3.5X13  |          |                        |   |   |      |
| 4                     | Z0090002043R     | § MOTOR GEAR+BOARD             |          |                        |   |   |      |
| 5                     | VIT0005223       | PIN 4X18 DIN 1475              | X        |                        |   |   | X(1) |
| 6                     | VIT0002469       | SCREW HEAD TAP M3.5X10         |          |                        |   |   |      |
| 7/a                   | Z0190006543-01   | MICROSWITCH LEVER WHITE        | X        |                        |   |   |      |
| 7/b                   | Z0190006556KA    | MICROSWITCH LEVER RAL3020      | X        |                        |   |   |      |
| 8                     | ELE0001530       | MICROSWITCH 3A 125-250VA       | X        |                        |   | X |      |
| 9                     | Z019A111002CI    | MICRO SUPPORT                  |          |                        |   |   |      |
| 10                    | Z019A111001CI    | MICRO SWITCH ACT. 0° DEGREES   |          |                        |   |   |      |
| 11                    | Z0190006522CY    | MOTOR SUPPORT RAL9018          |          |                        |   |   |      |
| 12                    | ELE0002258       | PUSH BUTTON RED                |          |                        |   |   |      |
| 13                    | Z0090002114R2    | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |   |   | X*   |
| 14                    | Z0190006518      | TOOTHED SHAFT Z18 WHITE        | X        |                        |   |   | X*   |
| 15                    | SCH0007000       | SPLIT UP SENSOR                | X        |                        |   |   | X*   |
| 16                    | VIT0002002       | SCREW ST HEAD CAP M3.5X6.5     |          |                        |   |   |      |
| 17                    | VIT0002025       | SCREW ST HEAD CAP M3.5X22      |          |                        |   |   |      |
| 18                    | Z0190006521CYR   | LOWER/UPPER CUP DROP MECH.     |          |                        |   |   |      |
| 19                    | Z0190006521CYR   | LOWER/UPPER CUP DROP MECH.     |          |                        |   |   |      |
| 20                    | VIT0002456       | SCREW HEAD TAP M3.5X25         |          |                        |   |   |      |
| 21                    | Z0190006511NA    | CUPS TURRET SPINDLE BLACK      | X        |                        |   |   | X*   |
| 22                    | Z0190006528      | Z26 WHEEL WHITE                | X        |                        |   |   | X*   |
| 23/a                  | Z0190006551GJ    | SPLIT UP D.70/78-YELLOW PP     |          |                        |   |   |      |
| 23/b                  | Z0190006506IC    | SPLIT UP D.70/78-ORANGE PL     |          |                        |   |   |      |
| 23/c                  | Z0190006502      | CUP SPLITTER D.73/80 PP WHITE  |          |                        |   |   |      |
| 23/d                  | Z0190006509PL    | SPLIT UP D.80 MULTISTEP BLU    |          |                        |   |   |      |
| 24/a                  | Z0190006523      | TOOTHED RING NUT D.70/73       | X        |                        |   |   | X*   |
| 24/b                  | Z0190006507      | TOOTHED RING NUT D.78/80 WHITE | X        |                        |   |   | X*   |
| 25                    | Z002A158432NA    | CUPS CHUTE D.70                |          |                        |   |   |      |
| 26                    | Z0400009027NAR   | CUP SLOW MOTION R9005+1 WEIGHT | X        |                        |   |   |      |
| 27                    | VIT0002468       | SCREW HEAD TAP M3.5X30         |          |                        |   |   |      |
| 28/a                  | Z0190006538CF    | CUPS REDUCER D.70 RAL7016      |          |                        |   |   |      |
| 28/b                  | Z0190006539CY    | CUPS REDUCER D.73 RAL9018      |          |                        |   |   |      |
| 29                    | VIT0000014       | SCREW HEAD TAP CAP M4X16       |          |                        |   |   |      |
| 100/a                 | Z0190006500CL28R | § CUP DISP. 4C D.70PAPER PD DS |          |                        |   |   |      |
| 100/b                 | Z0190006500CL29R | § CUP DISP. 4C D.70PLAST PD DS |          |                        |   |   |      |
| 100/c                 | Z0190006501CL14R | § CUP DISP. 5C D.70PAPER PD DS |          |                        |   |   |      |
| 100/d                 | Z0190006501CL15R | § CUP DISP. 5C D.70PLAST PD DS |          |                        |   |   |      |
| 100/e                 | Z0190006500CL24  | § CUP DISP.4C D.80 PAPER PD DS |          |                        |   |   |      |
| 100/f                 | Z0190006500CL20  | § CUP DISP.4C D.80C PD DS BLUE |          |                        |   |   |      |
| 200/a                 | Z0190006534CL13R | §TURRET SUPP. 4C D.70/73 PD DS |          |                        |   |   |      |
| 200/b                 | Z0190006534CL15R | §TURRET SUPPORT 5C             |          |                        |   |   |      |
| 200/c                 | Z0190006534CL14R | § TURRET SUPP. 4C D.80 PD DS   |          |                        |   |   |      |


| CUP DISPENSER 1 TURET |                  |                               |  |  |  |  |  |
|-----------------------|------------------|-------------------------------|--|--|--|--|--|
| 300                   | Z0190006522CL1R  | § GEARS DB TURRET SUPPORT     |  |  |  |  |  |
| 400/a                 | Z0190006521CL21R | § CUP DROP MECH. D.70-C       |  |  |  |  |  |
| 400/b                 | Z0190006521CL9R  | § CUP DROP MECH. D.70-P       |  |  |  |  |  |
| 400/c                 | Z0190006521CL5R  | § CUP DROP MECH. D.80-PP      |  |  |  |  |  |
| 400/d                 | Z0190006521CL12R | § CUP DROP MECH. D.80-PP BLUE |  |  |  |  |  |
| 400/e                 | Z0190006521CL18R | § CUP DROP MECH.D.73-C        |  |  |  |  |  |

cups turret

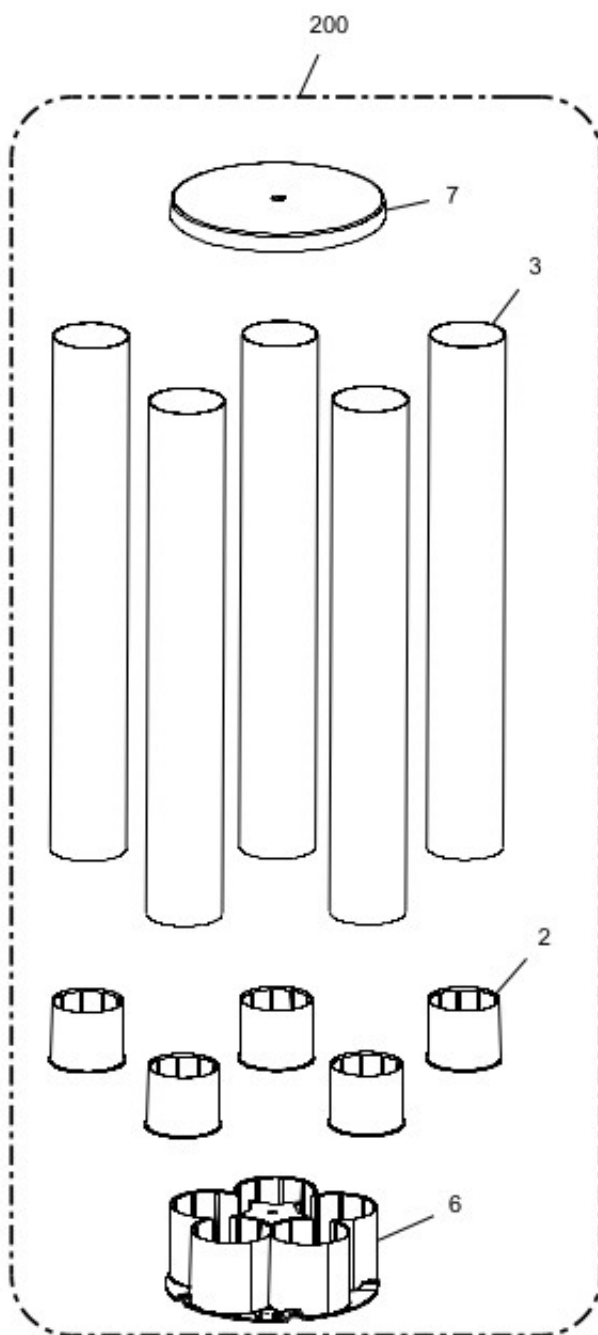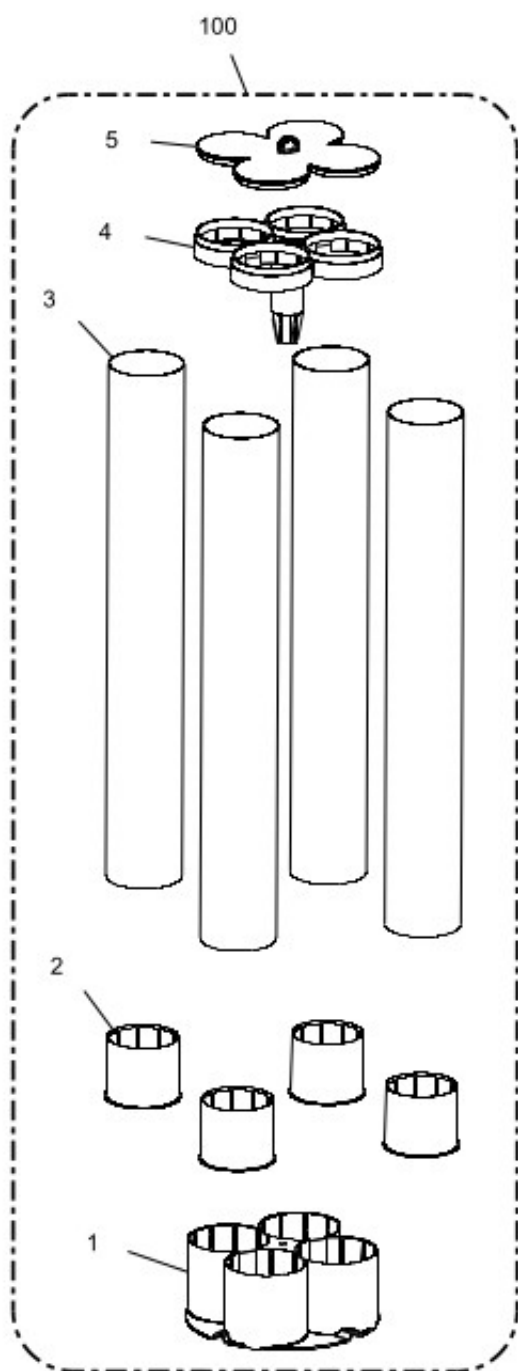


| cups turret |                  |                                |          |                        |   |   |   |
|-------------|------------------|--------------------------------|----------|------------------------|---|---|---|
|             |                  |                                |          | Preventive Maintenance |   |   |   |
| Pos.        | Code             | Description                    | Critical | A                      | B | C | D |
| 1/a         | Z018A111013CY    | CUP TURRET SPINDLE 4C D70 9018 |          |                        |   |   |   |
| 1/b         | Z018A111012CY    | CUP TURRET SPINDLE 4C D80 9018 |          |                        |   |   |   |
| 2           | Z0180013113      | D.70 COLUMN REDUCTION (WHITE)  |          |                        |   |   |   |
| 3/a         | Z0180013106      | CUP HOLDER 2T D.84/81MM L600MM |          |                        |   |   |   |
| 3/b         | Z0180013127      | CUP HOLDER 2T D.87/84MM L550MM |          |                        |   |   |   |
| 4/a         | Z0180013105-02CY | CUP TURRET SPINDLE 4C RAL9018  |          |                        |   |   |   |
| 4/b         | Z0180013122CY-04 | CUP TURRET SPINDLE 4C RAL9018  |          |                        |   |   |   |
| 5           | Z0180013313CY    | TURRET COVER 4C                |          |                        |   |   |   |
| 6           | Z018A111011CY    | CUP TURRET SPINDLE 5C D70 9018 |          |                        |   |   |   |
| 7           | Z0180013309CY    | 5 TURRETS LID (RAL9018)        |          |                        |   |   |   |
| 100/a       | Z0180013100CL14R | § CUPS TURRET 4COL D70/73 PDDS |          |                        |   |   |   |
| 100/b       | Z0180013100CL13R | § TURRET 4C D.80 PD DS         |          |                        |   |   |   |
| 200         | Z0180013101CL9R  | § CUPS TURRET 5COLUMNS D.70/73 |          |                        |   |   |   |

stirrer dispenser

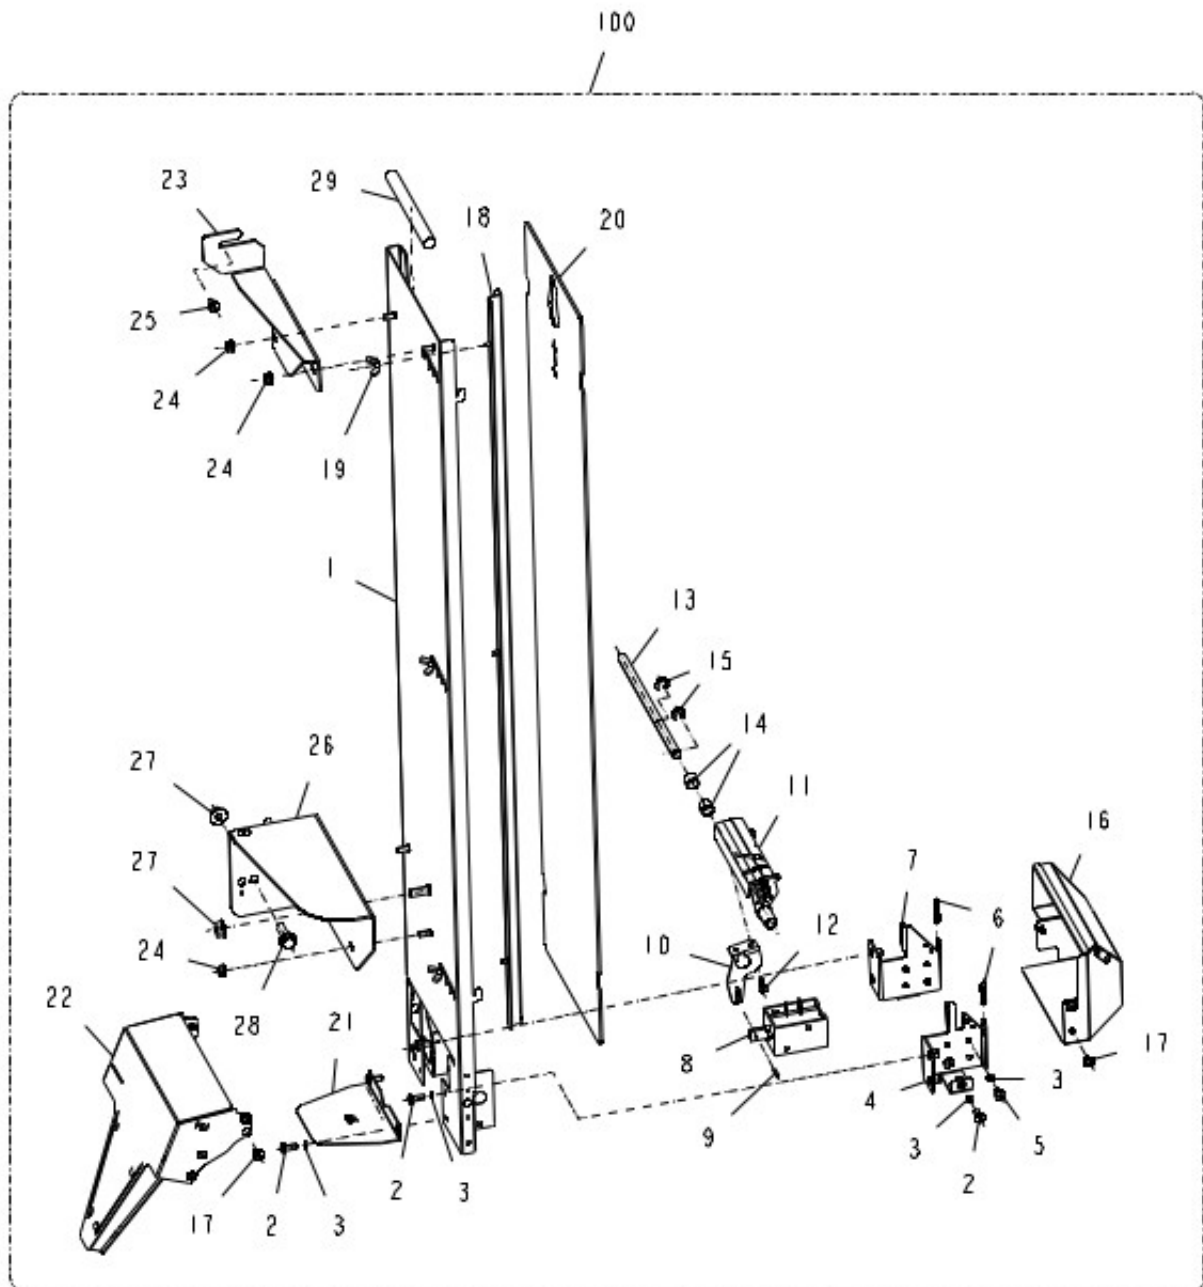


| stirrer dispenser |               |                                |          |                        |   |   |      |
|-------------------|---------------|--------------------------------|----------|------------------------|---|---|------|
|                   |               |                                |          | Preventive Maintenance |   |   |      |
| Pos.              | Code          | Description                    | Critical | A                      | B | C | D    |
| 1                 | Z045B170301   | STIRRER DISPENSER SUPPORT      |          |                        |   |   |      |
| 2                 | VIT0000012    | SCREW HEAD TAP CAP M4X10       |          |                        |   |   |      |
| 3                 | VIT0003405    | SPRING WASHER 4,3              |          |                        |   |   |      |
| 4                 | Z045A158123   | E.M. LEFT SUPPORT              |          |                        |   |   |      |
| 5                 | VIT0000021    | SCREW HEAD TAP CAP M4X6        |          |                        |   |   |      |
| 6                 | Z0450003010   | SPRING                         | X        |                        |   |   | X*   |
| 7                 | Z045A158122   | E.M. RIGHT SUPPORT             |          |                        |   |   |      |
| 8                 | ELE0000055    | ELECTROMAGNET 5% 24V DC        | X        |                        |   |   | X    |
| 9                 | VIT0005211    | DOWEL PIN 2.5X12               | X        |                        |   |   | X(1) |
| 10                | Z045A158119   | BRACKET                        |          |                        |   |   |      |
| 11                | Z045A158137   | STIRRER EJECTOR                | X        |                        |   |   |      |
| 12                | VIT0002475    | SCREW HEAD TAP M3.5X8          |          |                        |   |   |      |
| 13                | Z045A158118   | PIN                            |          |                        |   |   |      |
| 14                | Z0450003031   | SPACER                         |          |                        |   |   |      |
| 15                | VIT0006504    | RING 5                         |          |                        |   |   |      |
| 16                | Z045A158163   | STIRRER EM COVER               |          |                        |   |   |      |
| 17                | VIT0002401    | SCREW ST HEAD CAP M3.5X9.5     |          |                        |   |   |      |
| 18                | Z045A158127   | 1T STIRRER REGULATOR           |          |                        |   |   |      |
| 19                | VIT0007019    | NUT WINGS M4                   |          |                        |   |   |      |
| 20                | Z045A158116   | 1T STIRRER COVER               |          |                        |   |   |      |
| 21/a              | Z0452400039   | CHUTE BLOCK STIRRER L 66       |          |                        |   |   |      |
| 21/b              | Z0452300043   | CHUTE BLOCK STIRRER L 62       |          |                        |   |   |      |
| 22/a              | Z0452400027CL | § STIRRERS CHUTE               |          |                        |   |   |      |
| 22/b              | Z0452300060CL | § STIRRERS CHUTE               |          |                        |   |   |      |
| 23/a              | Z0452400036   | UPPER SUPPORT 1T               |          |                        |   |   |      |
| 23/b              | Z0452300005   | UPPER SUPPORT 1T               |          |                        |   |   |      |
| 24                | DAM0000056    | NUT M4                         |          |                        |   |   |      |
| 25                | VIT0000011    | SCREW HEAD TAP CAP M4X8        |          |                        |   |   |      |
| 26/a              | Z0452400038   | LOWER SUPPORT 1T               |          |                        |   |   |      |
| 26/b              | Z0452300004   | LOWER SUPPORT 1T               |          |                        |   |   |      |
| 27                | VIT0004830    | NUT M6                         |          |                        |   |   |      |
| 28/a              | 4001012030    | STIRRER WEIGHT 89MM            | X        |                        |   |   |      |
| 28/b              | Z0450003033   | STIRRER WEIGHT 104MM           | X        |                        |   |   |      |
| 28/c              | Z045A158013   | 125 MM STIRRER WEIGHT          |          |                        |   |   |      |
| 100/a             | Z045B170100R5 | § STIRRERS DISPENSER 1T 89/104 |          |                        |   |   |      |
| 100/b             | Z045B170100R3 | § STIRRERS DISPENSER 1T 125    |          |                        |   |   |      |

cups loader (2 turrets)

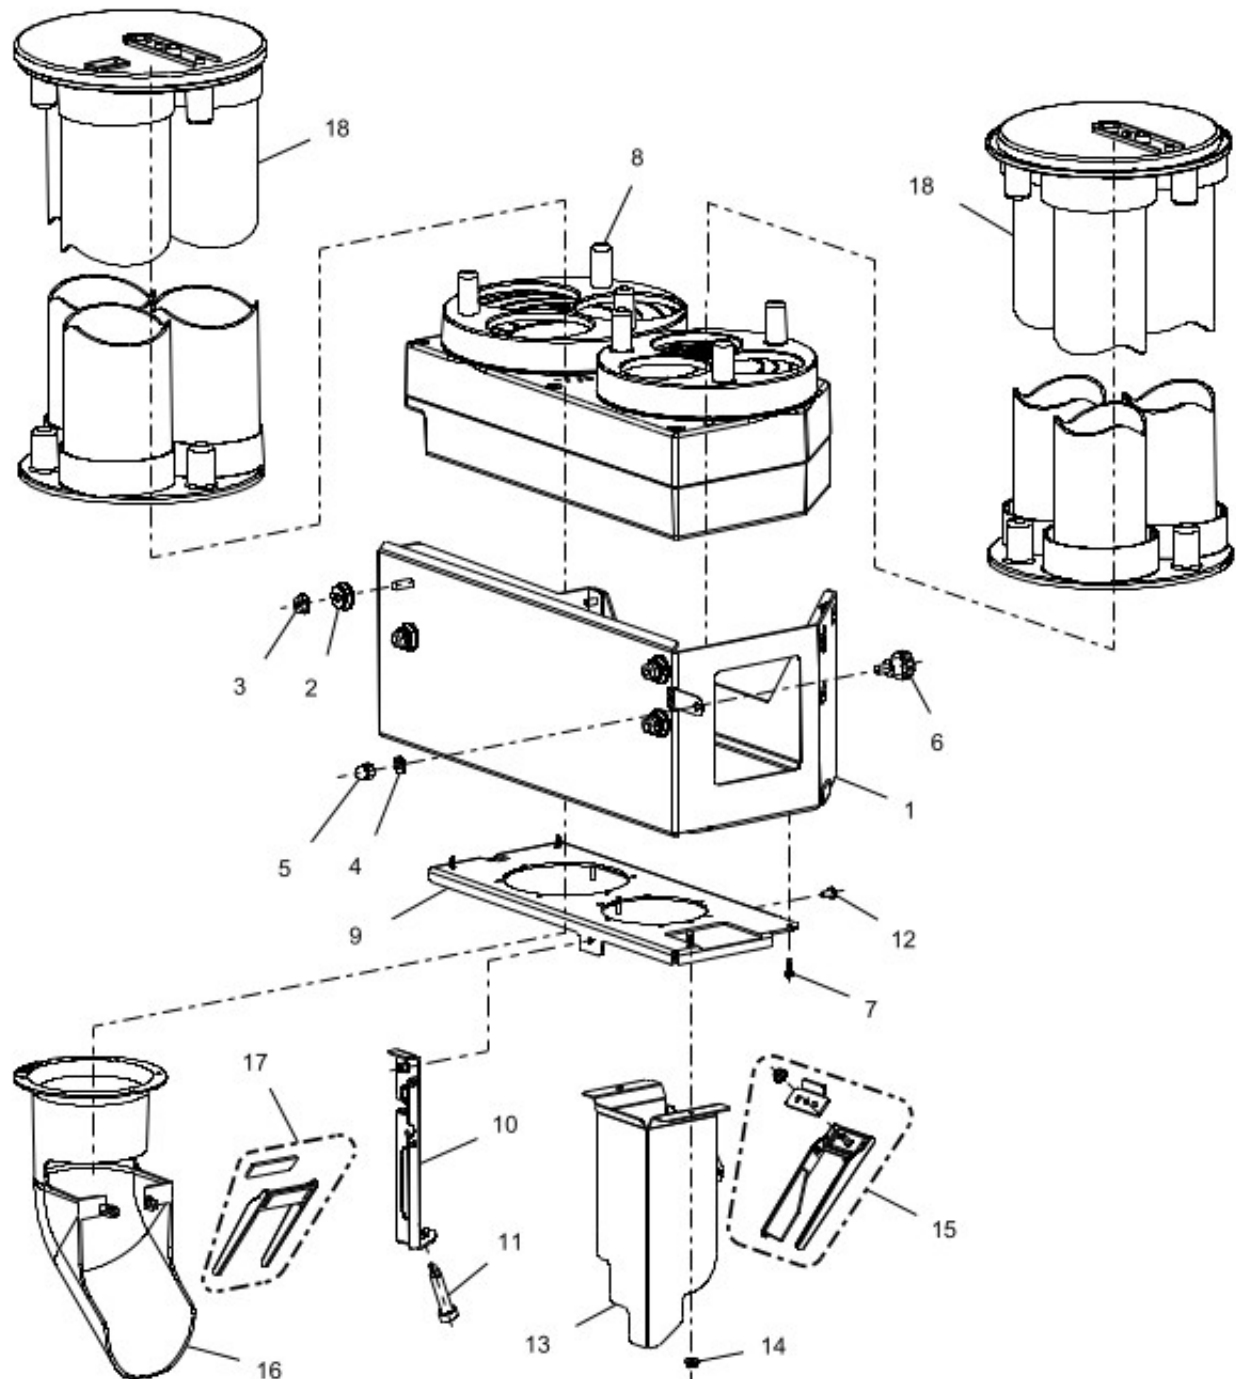


| cups loader (2 turrets) |                |                                       |          |                        |   |   |   |
|-------------------------|----------------|---------------------------------------|----------|------------------------|---|---|---|
|                         |                |                                       |          | Preventive Maintenance |   |   |   |
| Pos.                    | Code           | Description                           | Critical | A                      | B | C | D |
| 1                       | Z002B170357NAR | DB SUPPORT                            |          |                        |   |   |   |
| 2                       | Z0022300111    | DB SUPPORT PIN                        |          |                        |   |   |   |
| 3                       | VIT0004830     | NUT M6                                |          |                        |   |   |   |
| 4                       | VIT0003005     | WASHER 6,4X12X1,6                     |          |                        |   |   |   |
| 5                       | VIT0004903     | BLACK NUT M6 WITH CAPSULE             |          |                        |   |   |   |
| 6                       | VIT0009167     | HANDLE                                |          |                        |   |   |   |
| 7                       | VIT0002469     | SCREW HEAD TAP M3.5X10                |          |                        |   |   |   |
| 8                       |                | See table CUP DISPENSER 2 TURETS      |          |                        |   |   |   |
| 9                       | Z002B170356    | CUP CHUTE SUPPORT                     |          |                        |   |   |   |
| 10                      | Z002B170351    | SPOT SUPPORT                          |          |                        |   |   |   |
| 11                      | ELT0006781     | CUPS STATION LED 24V                  |          |                        |   |   |   |
| 12                      | VIT0000011     | SCREW HEAD TAP CAP M4X8               |          |                        |   |   |   |
| 13                      | Z002B170368    | CUPS CHUTE D.58                       |          |                        |   |   |   |
| 14                      | DAM0000056     | NUT M4                                |          |                        |   |   |   |
| 15                      | Z040B170022NAR | CUP SLOW MOTION Ø 58 + WEIGHT         |          |                        |   |   |   |
| 16                      | Z002B170148NA  | CUPS CHUTE 70/73                      |          |                        |   |   |   |
| 17                      | Z0400009027NAR | CUP SLOW MOTION R9005+1 WEIGHT        | X        |                        |   |   |   |
| 18                      |                | See table D.57/70 COLUMNS CUP TORRRET |          |                        |   |   |   |

CUP DISPENSER 2 TURETS

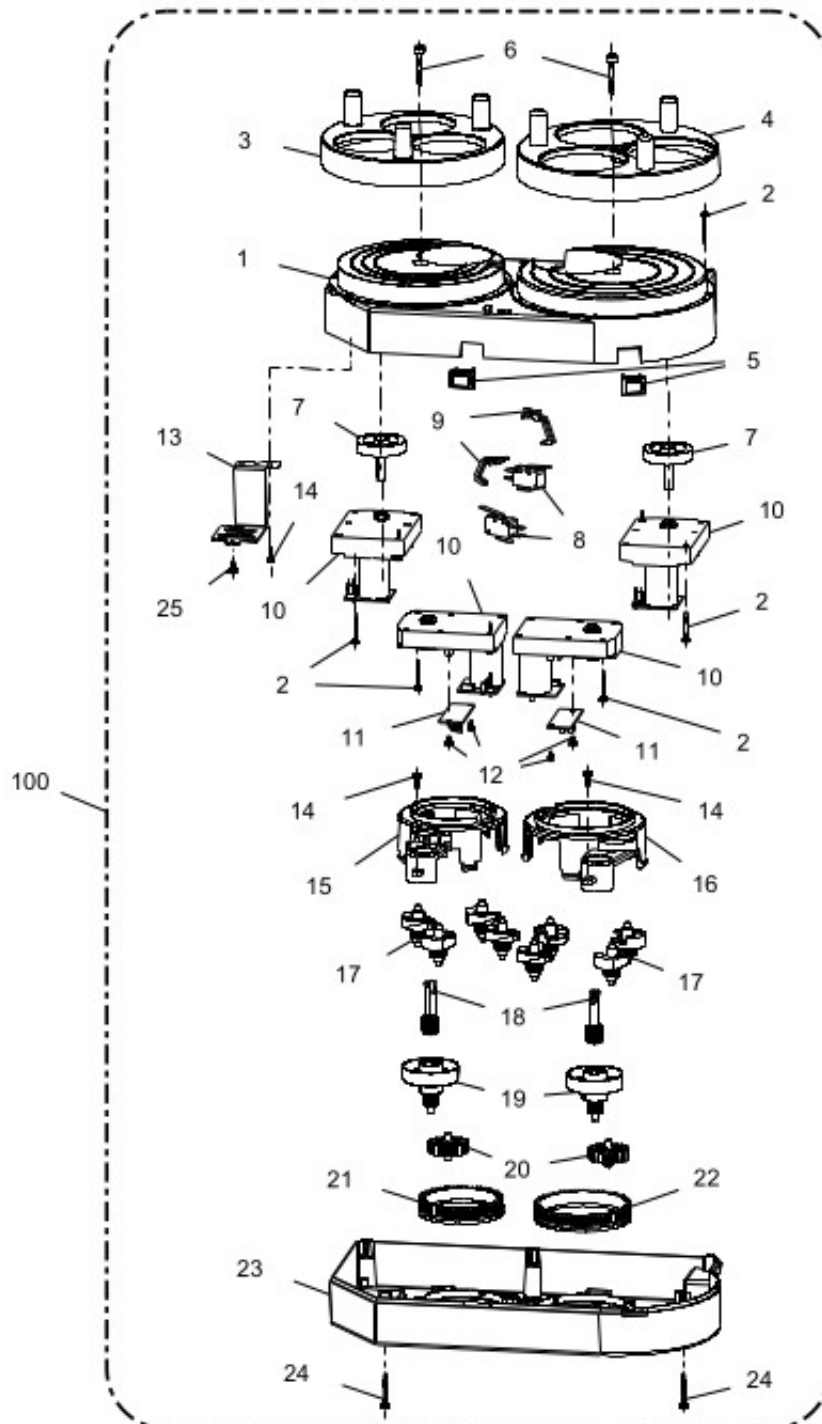


| CUP DISPENSER 2 TURETS |               |                              |          |                        |   |   |      |
|------------------------|---------------|------------------------------|----------|------------------------|---|---|------|
|                        |               |                              |          | Preventive Maintenance |   |   |      |
| Pos.                   | Code          | Description                  | Critical | A                      | B | C | D    |
| 1                      | Z0190006727CW | PALLETS UPPER PLATE RAL 7043 |          |                        |   |   |      |
| 2                      | VIT0002456    | SCREW HEAD TAP M3.5X25       |          |                        |   |   |      |
| 3                      | Z0190006736CW | 53 TURRET ROTATION RING NUT  |          |                        |   |   |      |
| 4                      | Z0190006735CW | 70 TURRET ROTATION RING NUT  |          |                        |   |   |      |
| 5                      | ELE0002258    | PUSH BUTTON RED              |          |                        |   |   |      |
| 6                      | Z0190006751   | PIN                          |          |                        |   |   |      |
| 7                      | Z0190006744   | SPROCKET WHEEL               |          |                        |   |   |      |
| 8                      | ELE0001530    | MICROSWITCH 3A 125-250VA     | X        |                        |   | X |      |
| 9                      | Z0190006556KA | MICROSWITCH LEVER RAL3020    | X        |                        |   |   |      |
| 10                     | Z0090002114R1 | § GEARBOX MOTOR 11RPM 24V DC | X        |                        |   |   | X(1) |
| 11                     | SCH0007000    | SPLIT UP SENSOR              | X        |                        |   |   | X*   |
| 12                     | VIT0002002    | SCREW ST HEAD CAP M3.5X6.5   |          |                        |   |   |      |
| 13                     | Z0190006743   | CONNECTOR SUPPORT            |          |                        |   |   |      |
| 14                     | VIT0002469    | SCREW HEAD TAP M3.5X10       |          |                        |   |   |      |
| 15                     | Z0190006732CW | CUP SPLITTER COVER D.53 7043 |          |                        |   |   |      |
| 16                     | Z0190006731CW | D.70 CUP GUIDE RAL 7043      |          |                        |   |   |      |
| 17                     | Z0190006506IC | SPLIT UP D.70/78-ORANGE PL   |          |                        |   |   |      |
| 18                     | Z0190006518   | TOOTHED SHAFT Z18 WHITE      | X        |                        |   |   | X*   |
| 19                     | Z0190006511NA | CUPS TURRET SPINDLE BLACK    | X        |                        |   |   | X*   |
| 20                     | Z0190006528   | Z26 WHEEL WHITE              | X        |                        |   |   | X*   |
| 21                     | Z0190006726   | Z57 RING NUT                 |          |                        |   |   |      |
| 22                     | Z0190006523   | TOOTHED RING NUT D.70/73     | X        |                        |   |   | X*   |
| 23                     | Z0190006729CW | PALLETS LOWER PLATE RAL 7043 |          |                        |   |   |      |
| 24                     | VIT0002468    | SCREW HEAD TAP M3.5X30       |          |                        |   |   |      |
| 25                     | VIT0002401    | SCREW ST HEAD CAP M3.5X9.5   |          |                        |   |   |      |
| 100                    | Z0190006702CL | § CUP DROP MECH 3C D.57/70   |          |                        |   |   |      |

D.57/70 COLUMNS CUP TORRRET

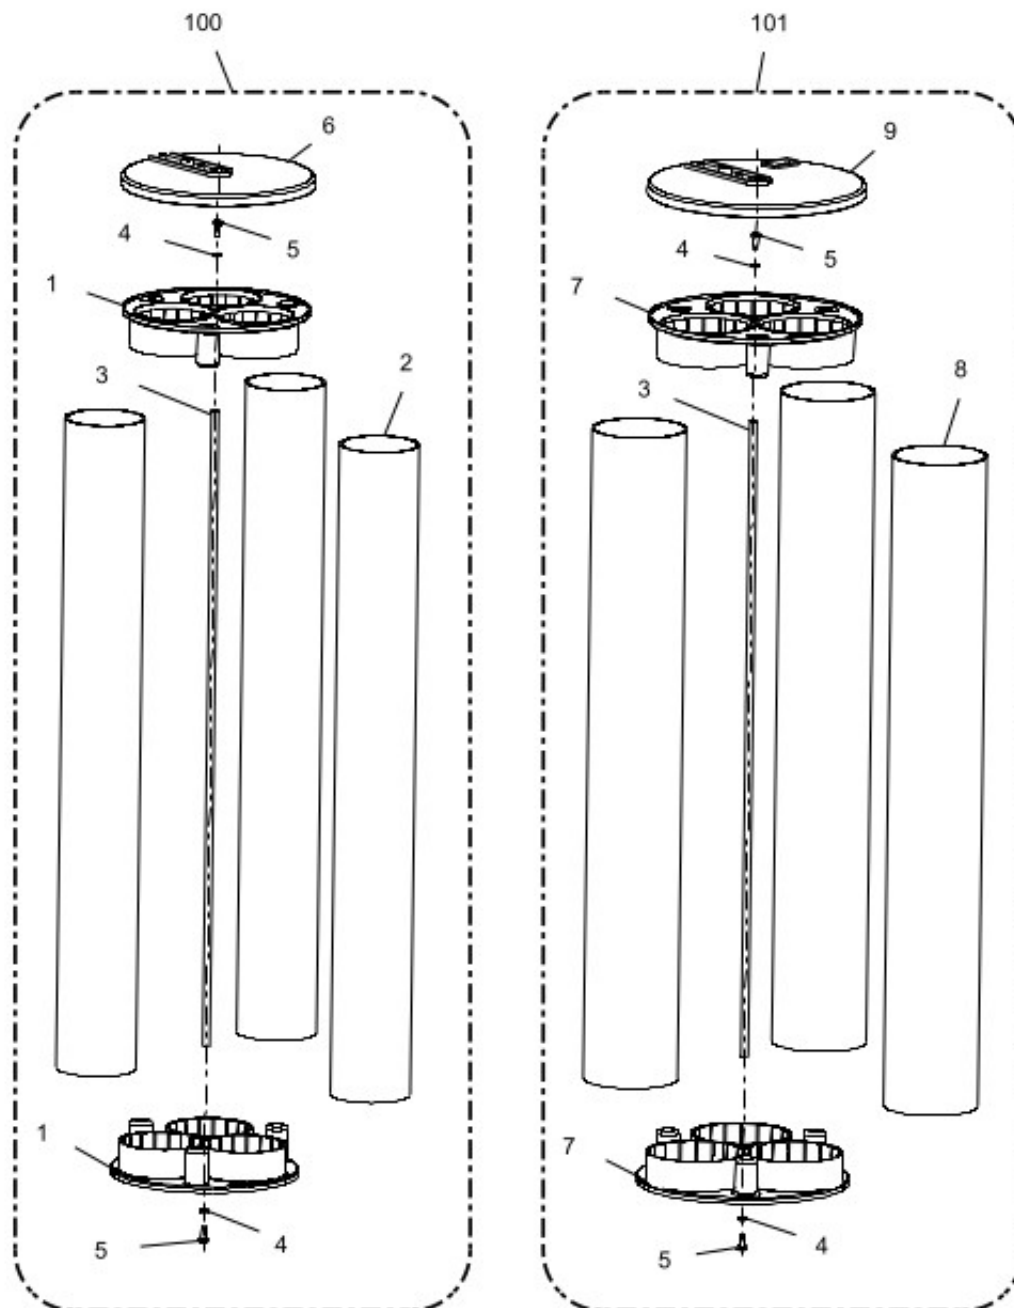


| D.57/70 COLUMNS CUP TORRRET |                  |                                |          |                        |   |   |   |
|-----------------------------|------------------|--------------------------------|----------|------------------------|---|---|---|
|                             |                  |                                |          | Preventive Maintenance |   |   |   |
| Pos.                        | Code             | Description                    | Critical | A                      | B | C | D |
| 1                           | Z0190006738CW-02 | HOSE GUIDE D.62-66 (RAL 7043)  |          |                        |   |   |   |
| 2                           | Z0182300001      | PIPE D 62-64 L 550             |          |                        |   |   |   |
| 3                           | Z018B170002      | TIRANT D.6 L.537               |          |                        |   |   |   |
| 4                           | VIT0003103       | SPRING WASHER 4,3              |          |                        |   |   |   |
| 5                           | VIT0000012       | SCREW HEAD TAP CAP M4X10       |          |                        |   |   |   |
| 6                           | Z0190006747CW    | 62/66 2 TURRETTS COVER         |          |                        |   |   |   |
| 7                           | Z0190006739CW-02 | HOSE GUIDE D.74-78 (RAL 7043)  |          |                        |   |   |   |
| 8                           | Z0182300002      | PIPE D 74-78 L 550             |          |                        |   |   |   |
| 9                           | Z0190006748CW    | 2 TURRETTS COVER D.70 RAL 7043 |          |                        |   |   |   |
| 100                         | Z018B170001R     | § CUPS TURRET 3C D.57          |          |                        |   |   |   |
| 101                         | Z018B170000R     | § CUPS TURRET 3C D.70          |          |                        |   |   |   |

stirrer dispenser (2 TURRETS)

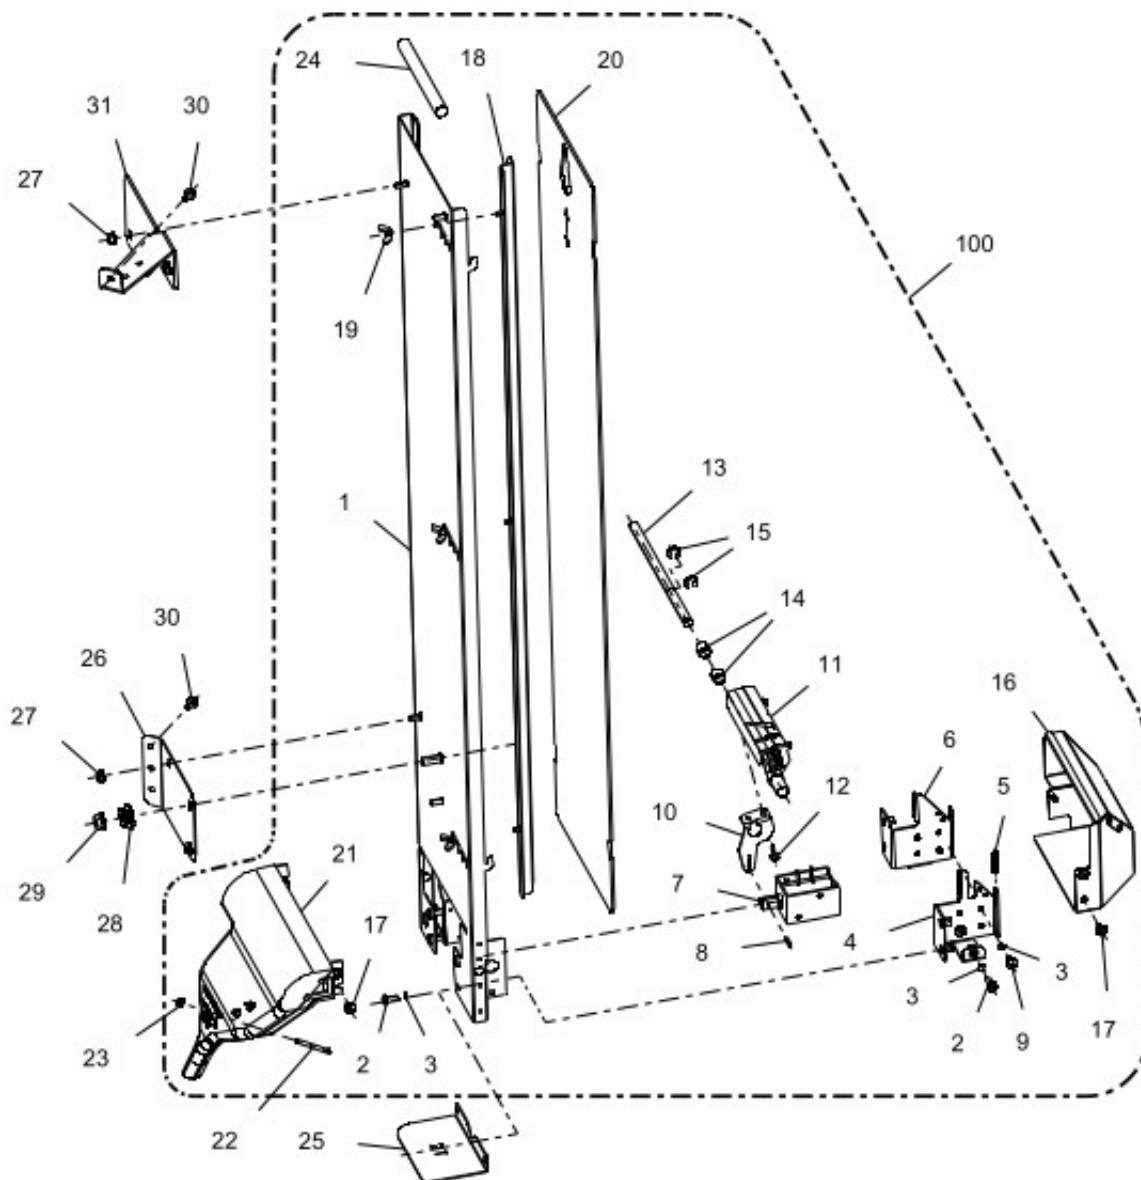


| stirrer dispenser (2 TURRETS) |               |                              |          |                        |   |   |      |
|-------------------------------|---------------|------------------------------|----------|------------------------|---|---|------|
|                               |               |                              |          | Preventive Maintenance |   |   |      |
| Pos.                          | Code          | Description                  | Critical | A                      | B | C | D    |
| 1                             | Z045B170301   | STIRRER DISPENSER SUPPORT    |          |                        |   |   |      |
| 2                             | VIT0000012    | SCREW HEAD TAP CAP M4X10     |          |                        |   |   |      |
| 3                             | VIT0003405    | SPRING WASHER 4,3            |          |                        |   |   |      |
| 4                             | Z045A158123   | E.M. LEFT SUPPORT            |          |                        |   |   |      |
| 5                             | Z0450003010   | SPRING                       | X        |                        |   |   | X*   |
| 6                             | Z045A158122   | E.M. RIGHT SUPPORT           |          |                        |   |   |      |
| 7                             | ELE0000055    | ELECTROMAGNET 5% 24V DC      | X        |                        |   |   | X    |
| 8                             | VIT0005211    | DOWEL PIN 2.5X12             | X        |                        |   |   | X(1) |
| 9                             | VIT0000021    | SCREW HEAD TAP CAP M4X6      |          |                        |   |   |      |
| 10                            | Z045A158119   | BRACKET                      |          |                        |   |   |      |
| 11                            | Z045A158137   | STIRRER EJECTOR              | X        |                        |   |   |      |
| 12                            | VIT0002469    | SCREW HEAD TAP M3.5X10       |          |                        |   |   |      |
| 13                            | Z045A158118   | PIN                          |          |                        |   |   |      |
| 14                            | Z0450003031   | SPACER                       |          |                        |   |   |      |
| 15                            | VIT0006504    | RING 5                       |          |                        |   |   |      |
| 16                            | Z045A158163   | STIRRER EM COVER             |          |                        |   |   |      |
| 17                            | VIT0002401    | SCREW ST HEAD CAP M3.5X9.5   |          |                        |   |   |      |
| 18                            | Z045A158127   | 1T STIRRER REGULATOR         |          |                        |   |   |      |
| 19                            | VIT0007019    | NUT WINGS M4                 |          |                        |   |   |      |
| 20                            | Z045A158116   | 1T STIRRER COVER             |          |                        |   |   |      |
| 21                            | Z045B170026NA | STIRRER CHUTE FS1 89         |          |                        |   |   |      |
| 22                            | VIT0000114    | SCREW M 3X30 TSP             |          |                        |   |   |      |
| 23                            | VIT0004701    | NUT M3                       |          |                        |   |   |      |
| 24                            | 4001012030    | STIRRER WEIGHT 89MM          | X        |                        |   |   |      |
| 25                            | Z045B170307   | CHUTE BLOCK 2T STIRRER       |          |                        |   |   |      |
| 26                            | Z045B170303   | STIRRER DISPENSER BRACKET    |          |                        |   |   |      |
| 27                            | DAM0000056    | NUT M4                       |          |                        |   |   |      |
| 28                            | Z0022300111   | DB SUPPORT PIN               |          |                        |   |   |      |
| 29                            | VIT0004830    | NUT M6                       |          |                        |   |   |      |
| 30                            | VIT0000011    | SCREW HEAD TAP CAP M4X8      |          |                        |   |   |      |
| 31                            | Z045B170302NA | STIRRER DISPENSER SUPPORT 2T |          |                        |   |   |      |
| 100                           | Z045B170101R1 | § STIRRER DISP 2T 57/70 89   |          |                        |   |   |      |

INTRODUCTION/RETURN OF COINS

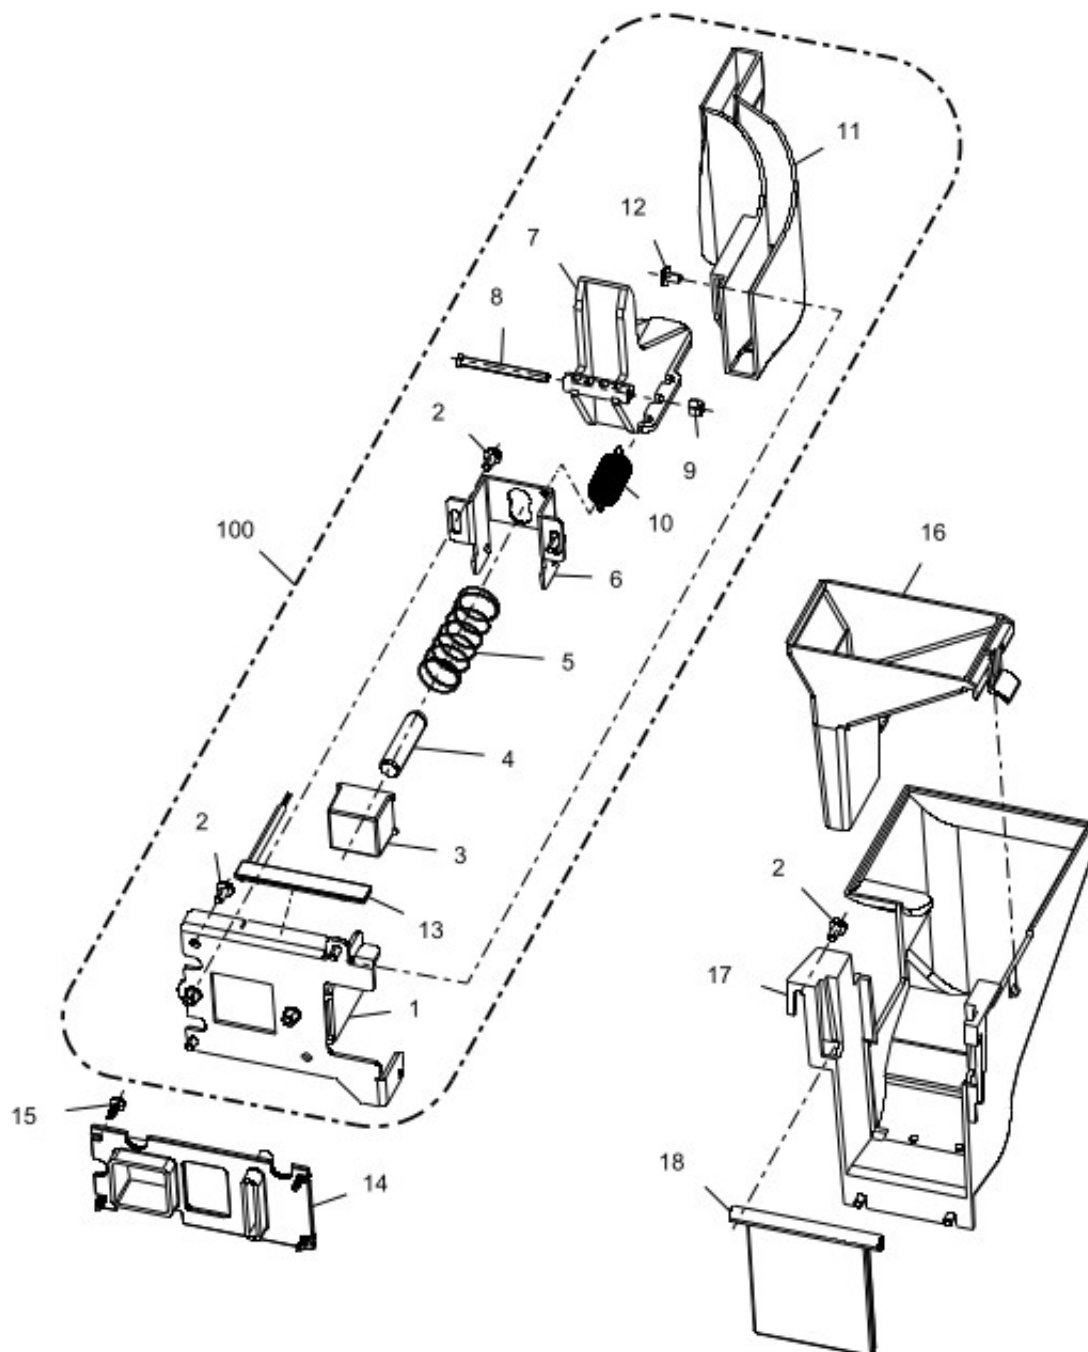


| INTRODUCTION/RETURN OF COINS |               |                                |          |                        |   |   |   |
|------------------------------|---------------|--------------------------------|----------|------------------------|---|---|---|
|                              |               |                                |          | Preventive Maintenance |   |   |   |
| Pos.                         | Code          | Description                    | Critical | A                      | B | C | D |
| 1                            | Z002B170324   | SLIDE COIN SUPPORT             |          |                        |   |   |   |
| 2                            | VIT0000011    | SCREW HEAD TAP CAP M4X8        |          |                        |   |   |   |
| 3                            | Z002A158398NA | COIN RETURN BUTTON             |          |                        |   |   |   |
| 4                            | Z002A158399   | COIN RETURN BOTTON PIN         |          |                        |   |   |   |
| 5                            | 4050010074    | COIN RETURN BUTTON SPRING      | X        |                        |   |   |   |
| 6                            | Z002A158476   | COIN RETURN SUPPORT            |          |                        |   |   |   |
| 7                            | H502120033    | CHANGE RETURN LEVER SQUARE     |          |                        |   |   |   |
| 8                            | VIT0000125    | SCREW COUNT FLAT HEAD M4X45    |          |                        |   |   |   |
| 9                            | VIT0004815    | NUT M4                         |          |                        |   |   |   |
| 10                           | H00016006     | SPRING FOR COIN RETURN LEVER   |          |                        |   |   |   |
| 11                           | H502120031    | COIN ENTRY CHANNEL             |          |                        |   |   |   |
| 12                           | VIT0000030    | SCREW HEAD TAP CAP M4X7        |          |                        |   |   |   |
| 13                           | Z0020055172   | LED LIGHTING SYSTEM INCOME COI | X        |                        |   |   |   |
| 14                           | Z002A158166TR | COIN LIGHT GUIDE               |          |                        |   |   |   |
| 15                           | VIT0002469    | SCREW HEAD TAP M3.5X10         |          |                        |   |   |   |
| 16                           | Z002B170152   | CHUTE COIN                     |          |                        |   |   |   |
| 17                           | Z002B170139NA | COINS RETURN CHUTE             |          |                        |   |   |   |
| 18                           | Z0020038144NA | COINS RETURN FLAP RAL9005      |          |                        |   |   |   |
| 100/a                        | Z002B170048R1 | § INSERT COINS PLATE           |          |                        |   |   |   |
| 100/b                        | Z002B170048R2 | § INSERT COINS PLATE           |          |                        |   |   |   |

CUP STATION HANDLE

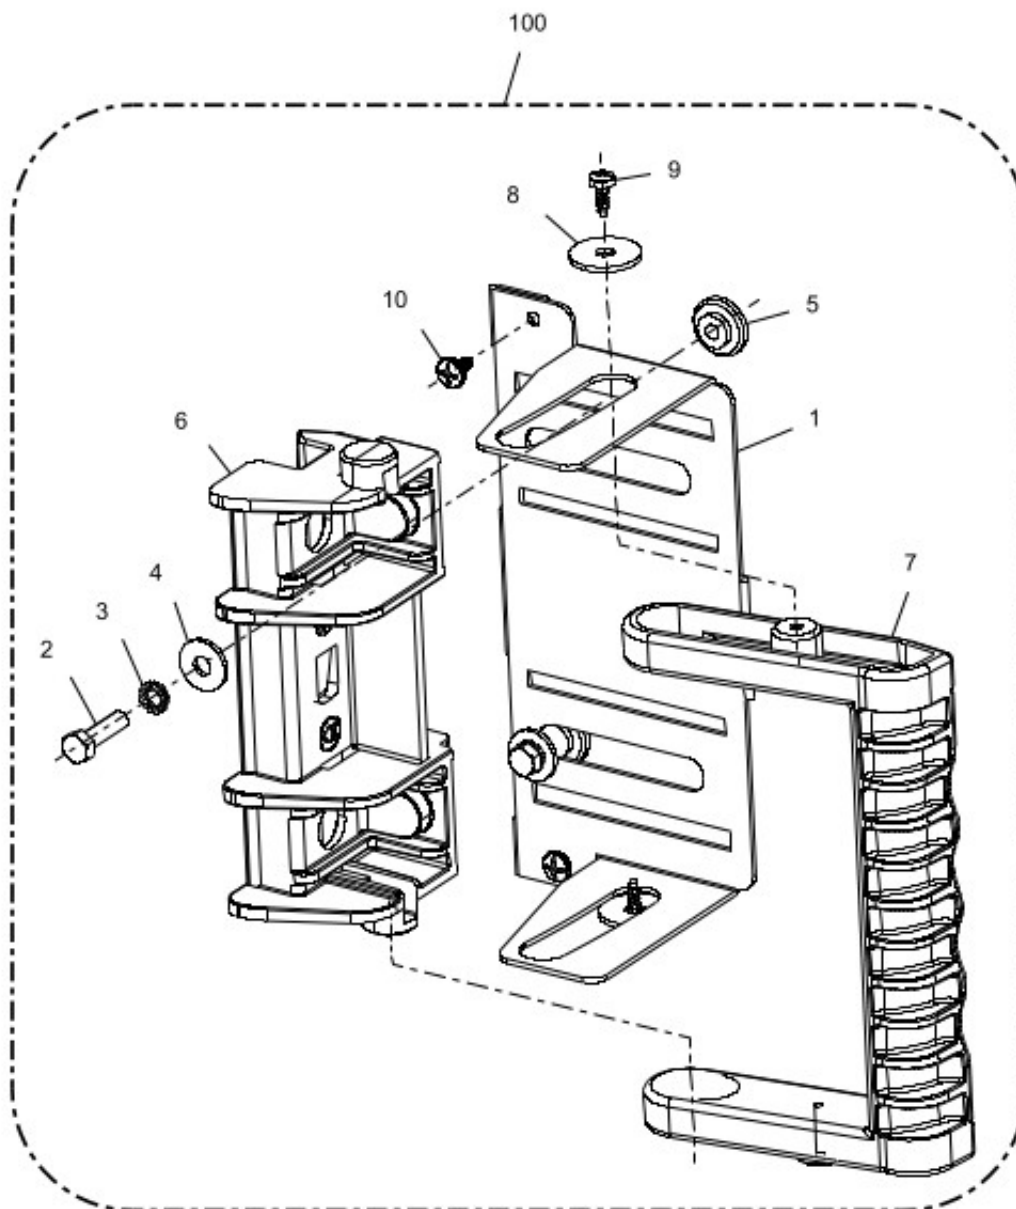


| CUP STATION HANDLE |               |                            |          |                        |   |   |   |
|--------------------|---------------|----------------------------|----------|------------------------|---|---|---|
|                    |               |                            |          | Preventive Maintenance |   |   |   |
| Pos.               | Code          | Description                | Critical | A                      | B | C | D |
| 1                  | Z0400009121   | HANDLE SUPPORT             |          |                        |   |   |   |
| 2                  | VIT0001110    | SCREW HEX HEAD M5X20       |          |                        |   |   |   |
| 3                  | VIT0003104    | SPRING WASHER 5,3          |          |                        |   |   |   |
| 4                  | VIT0003302    | WASHER 5,5X15X1,6          |          |                        |   |   |   |
| 5                  | Z0400009009   | CUP STATION SPACER         |          |                        |   |   |   |
| 6                  | Z0400009007CY | CUP STATION PLATE          |          |                        |   |   |   |
| 7                  | Z0400009008IC | CUP STATION HANDLE RAL2011 |          |                        |   |   |   |
| 8                  | VIT0003305    | WASHER 5,5X20X2            |          |                        |   |   |   |
| 9                  | VIT0002469    | SCREW HEAD TAP M3.5X10     |          |                        |   |   |   |
| 10                 | VIT0002401    | SCREW ST HEAD CAP M3.5X9.5 |          |                        |   |   |   |
| 100                | Z0400009121CL | HANDLE SUPPORT             |          |                        |   |   |   |

COIN BOX COVER

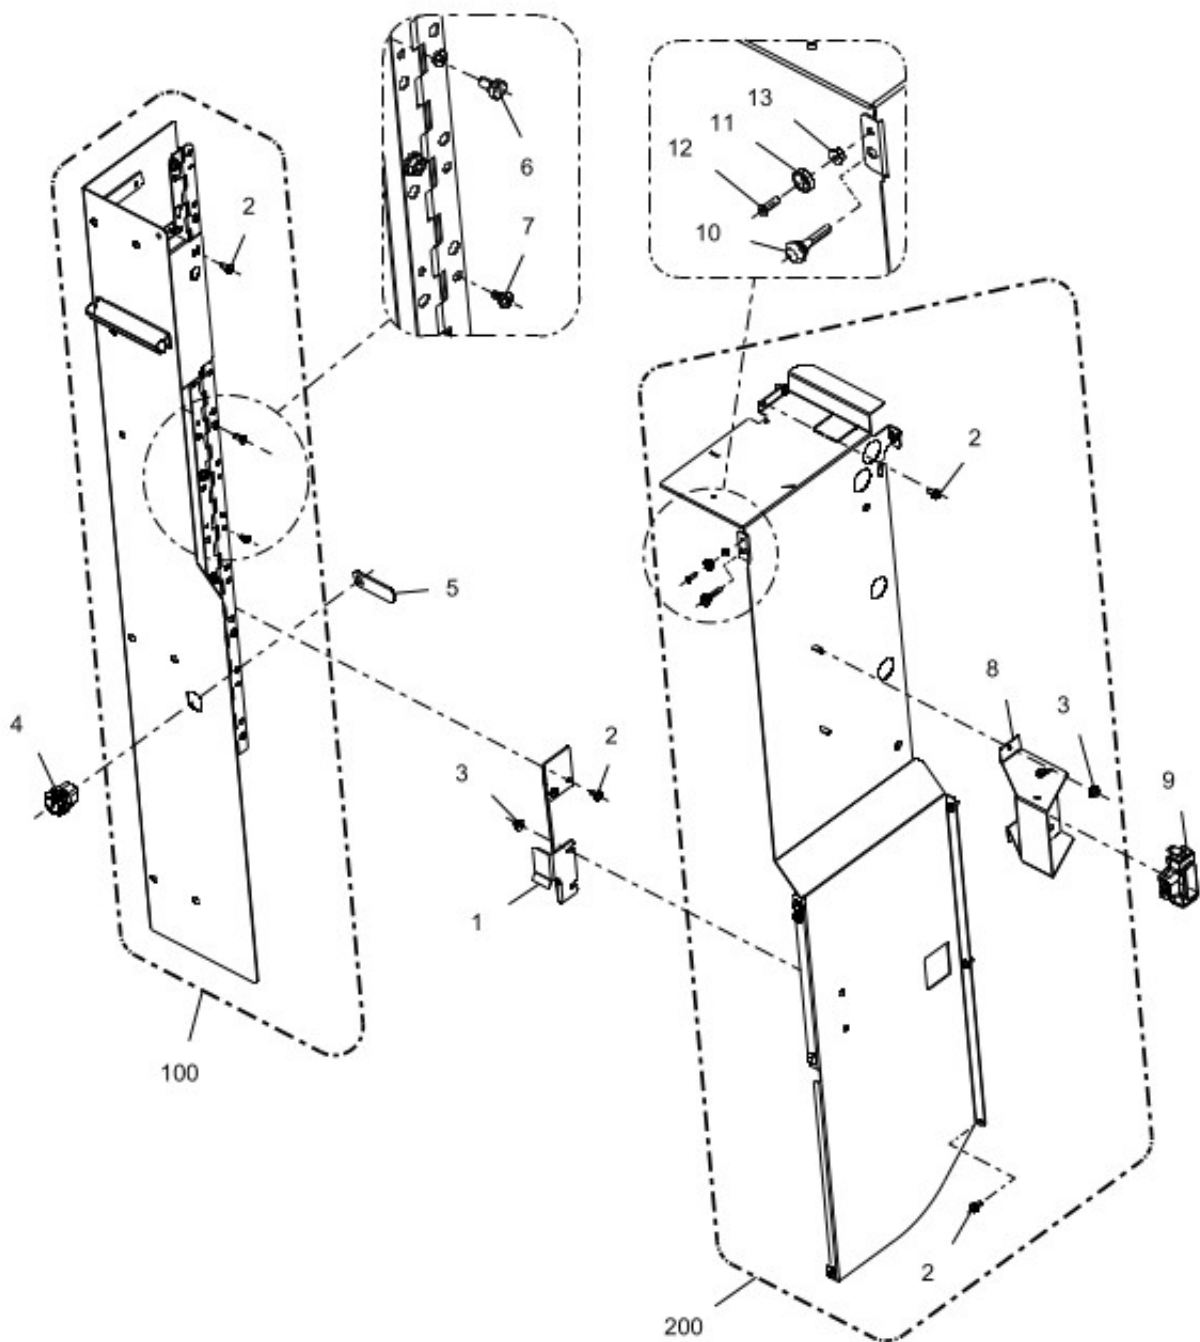


| COIN BOX COVER |                |                              |          |                        |   |   |   |
|----------------|----------------|------------------------------|----------|------------------------|---|---|---|
|                |                |                              |          | Preventive Maintenance |   |   |   |
| Pos.           | Code           | Description                  | Critical | A                      | B | C | D |
| 1              | Z002B170335NA  | LOWER DOOR BRACKET           |          |                        |   |   |   |
| 2              | VIT0000011     | SCREW HEAD TAP CAP M4X8      |          |                        |   |   |   |
| 3              | DAM0000056     | NUT M4                       |          |                        |   |   |   |
| 4              | SER0000028     | LOCK MM20 + KEY 3480         | X        |                        |   |   |   |
| 5              | Z002A158207    | LOCK HOUSING SIDE COVER DOOR |          |                        |   |   |   |
| 6              | 4060010126     | PAYM SYSTEM FIXING SCREW     |          |                        |   |   |   |
| 7              | VIT0002009     | SCREW ST HEAD CAP M3.5X6.5   |          |                        |   |   |   |
| 8              | Z002B170317NA  | SENSOR COVER                 |          |                        |   |   |   |
| 9              | ELT0006813CL2  | § DISTANCE SENSOR            | X        |                        |   |   |   |
| 10             | GUAA113001     | BUMPER                       |          |                        |   |   |   |
| 11             | ELT0030760     | MAGNET D 10X3                |          |                        |   |   |   |
| 12             | VIT0000102     | SCREW COUNT FLAT HEAD M3X10  |          |                        |   |   |   |
| 13             | VIT0004701     | NUT M3                       |          |                        |   |   |   |
| 100            | Z002B170094R1  | § PAY SYSTEM COVER           |          |                        |   |   |   |
| 200            | Z002B170091CL1 | § SIDE DOOR CLOSURE          |          |                        |   |   |   |


COIN BOX

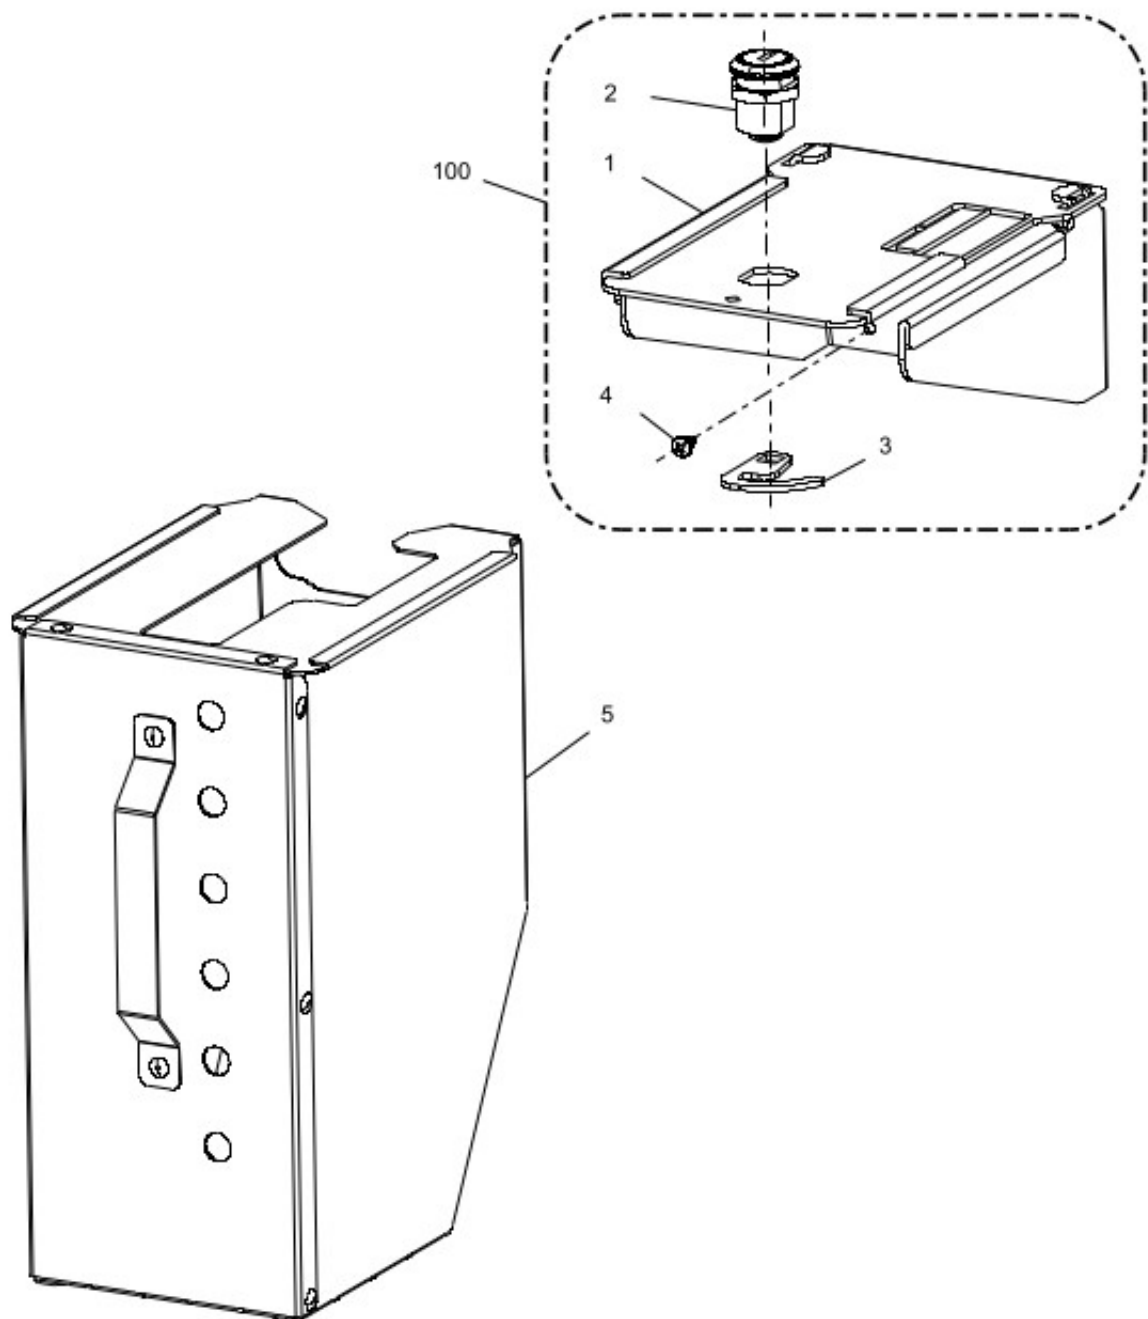

| COIN BOX |                |                         |          |                        |   |   |   |
|----------|----------------|-------------------------|----------|------------------------|---|---|---|
|          |                |                         |          | Preventive Maintenance |   |   |   |
| Pos.     | Code           | Description             | Critical | A                      | B | C | D |
| 1        | Z002A158208    | COIN BOX SUPPORT        |          |                        |   |   |   |
| 2        | SER0000028     | LOCK MM20 + KEY 3480    | X        |                        |   |   |   |
| 3        | Z002A158209    | LOCK HOUSING COIN BOX   |          |                        |   |   |   |
| 4        | VIT0000011     | SCREW HEAD TAP CAP M4X8 |          |                        |   |   |   |
| 5        | Z002B170153CL1 | § COIN BOX              |          |                        |   |   |   |
| 100      | Z002B170150CL  | § COIN BOX SUPPORT      |          |                        |   |   |   |

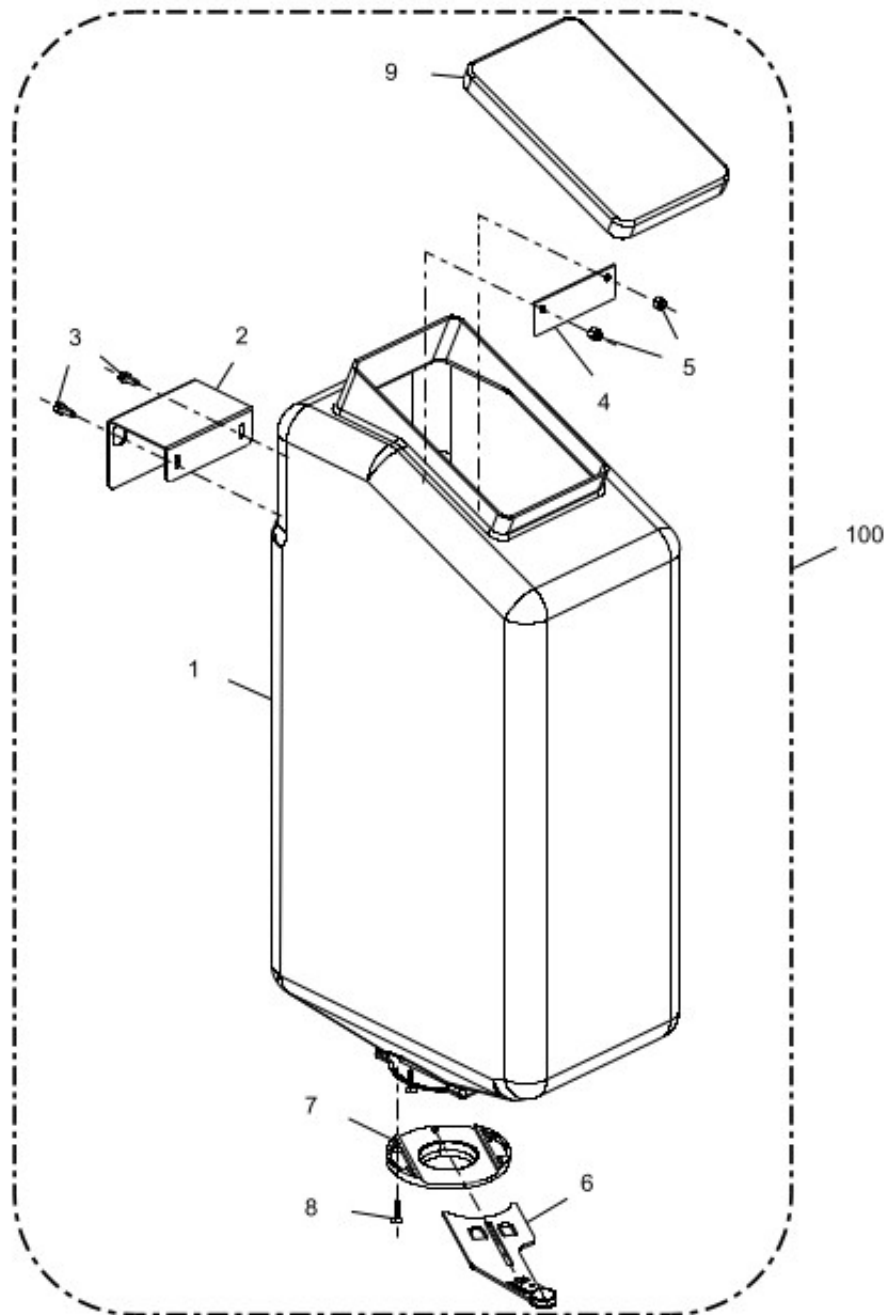


| coffee beans container |               |                               |          |                        |   |    |   |
|------------------------|---------------|-------------------------------|----------|------------------------|---|----|---|
|                        |               |                               |          | Preventive Maintenance |   |    |   |
| Pos.                   | Code          | Description                   | Critical | A                      | B | C  | D |
| 1/a                    | Z0230030481   | COFFEE BEANS CONT. (1GRINDER) | X        |                        |   | CK | X |
| 1/b                    | Z0230030415   | COFFEE BEANS HOPPER 4 KG      | X        |                        |   | CK | X |
| 2/a                    | Z001B170079   | SUPPORT GRAIN CANISTER        |          |                        |   |    |   |
| 2/b                    | Z0232500003   | SUPPORT GRAIN CANISTER        |          |                        |   |    |   |
| 3                      | VIT0005519    | SCREW TCEI 4x12 STAIL STEEL   |          |                        |   |    |   |
| 4                      | Z0230030426   | PLATE                         |          |                        |   |    |   |
| 5                      | VIT0004810    | NUT M4                        |          |                        |   |    |   |
| 6                      | Z0230015207IC | COFFEE BEANS HOPPER STOPPER   | X        |                        |   |    |   |
| 7                      | Z0230030449NA | COFFEE BEANS HOPPER STOPPER   |          |                        |   |    |   |
| 8                      | VIT0002104    | SCREW COUNT FLAT HEAD M3.9X16 |          |                        |   |    |   |
| 9                      | Z0230015057   | COFFEE BEANS HOPPER LID       |          |                        |   |    |   |
| 100/a                  | Z0230030481R1 | § COFFEE BEANS HOPPER 6KG     |          |                        |   |    |   |
| 100/b                  | Z0232500000R  | § COFFEE BEANS HOPPER 4KG     |          |                        |   |    |   |

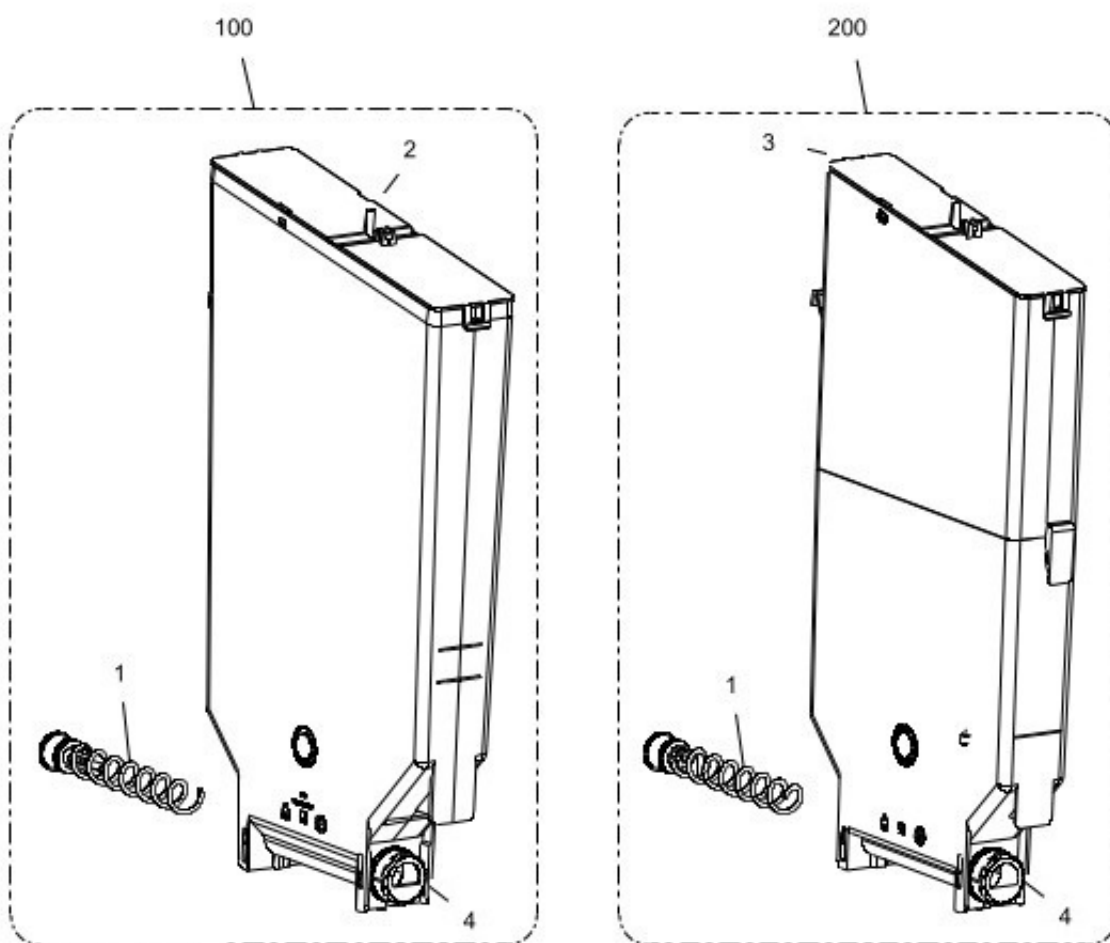

| products container |                |                              |          |                        |   |   |   |
|--------------------|----------------|------------------------------|----------|------------------------|---|---|---|
|                    |                |                              |          | Preventive Maintenance |   |   |   |
| Pos.               | Code           | Description                  | Critical | A                      | B | C | D |
| 1/a                | Z0230030013CL  | § SPIRAL 9                   |          |                        |   |   |   |
| 1/b                | Z0230030014CL  | § SPIRAL 18                  |          |                        |   |   |   |
| 2                  | Z0232400027    | CANISTER COVER 67            |          |                        |   |   |   |
| 3                  | Z023B170033DO  | CANISTER COVER 55            |          |                        |   |   |   |
| 4                  | Z0232400039IC  | SLIDE HOOK (ENLARGED OUTLET) |          |                        |   |   |   |
| 100/a              | Z023B170005CL2 | § CONTAINER 67 R9            |          |                        |   |   |   |
| 100/b              | Z023B170002CL2 | § CONTAINER 67 R18           |          |                        |   |   |   |
| 100/c              | Z023B170004CL3 | § CONTAINER 67 AGIT.9        |          |                        |   |   |   |
| 100/d              | Z023B170001CL3 | § CONTAINER 67 AGIT.18       |          |                        |   |   |   |
| 100/e              | Z023B170006CL2 | § CONTAINER 67 VSF9          |          |                        |   |   |   |
| 100/f              | Z023B170003CL2 | § CONTAINER 67 VSF18         |          |                        |   |   |   |
| 200/a              | Z023B170054CL1 | § CONTAINER 55 R9            |          |                        |   |   |   |
| 200/b              | Z023B170051CL1 | § CONTAINER 55 R18           |          |                        |   |   |   |
| 200/c              | Z023B170053CL1 | § CONTAINER 55 AGIT.9        |          |                        |   |   |   |
| 200/d              | Z023B170050CL1 | § CONTAINER 55 AGIT.18       |          |                        |   |   |   |
| 200/e              | Z023B170055CL1 | § CONTAINER 55 VSF9          |          |                        |   |   |   |
| 200/f              | Z023B170052CL1 | § CONTAINER 55 VSF18         |          |                        |   |   |   |

PRODUCT CHUTE

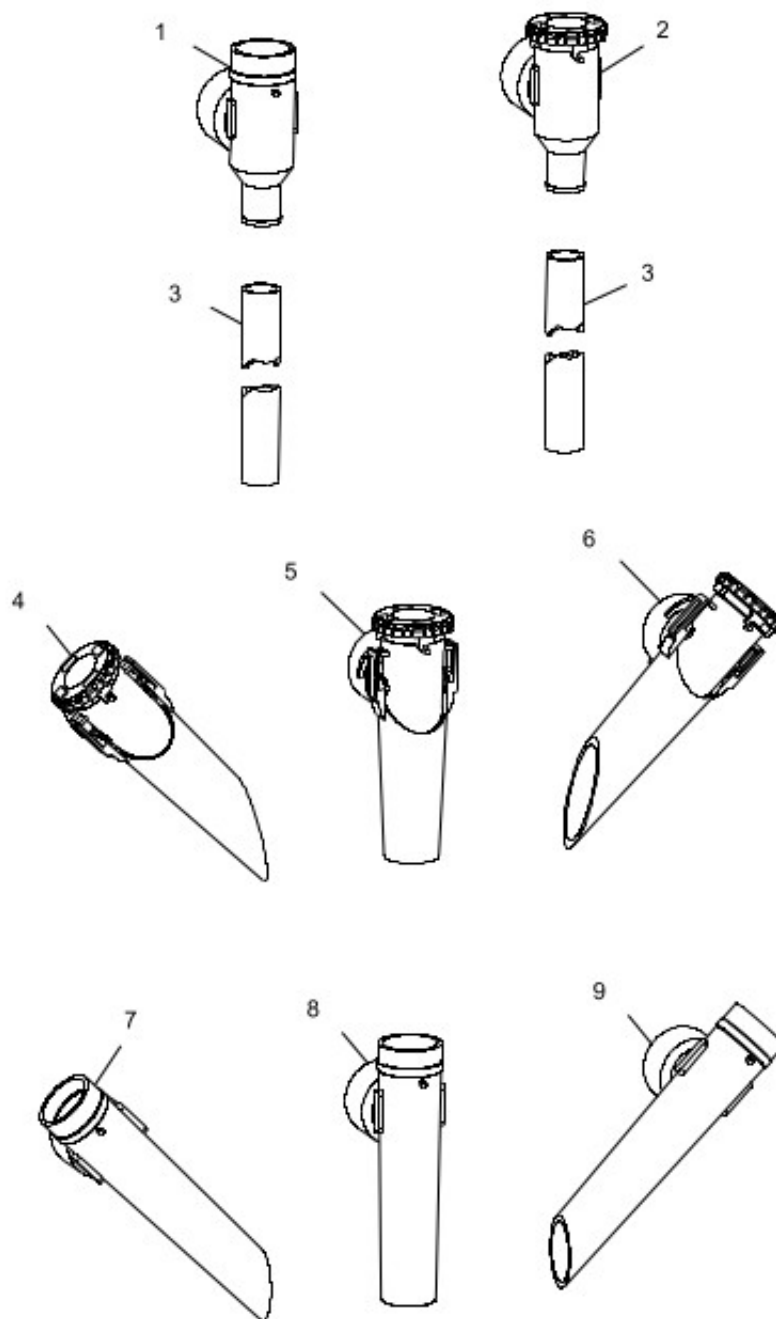

| PRODUCT CHUTE |                 |                                |          |                        |   |   |   |
|---------------|-----------------|--------------------------------|----------|------------------------|---|---|---|
|               |                 |                                |          | Preventive Maintenance |   |   |   |
| Pos.          | Code            | Description                    | Critical | A                      | B | C | D |
| 1             | Z0230016026R    | SUGAR CHUTE + PLUG             |          |                        |   |   |   |
| 2             | Z0230016024R    | § SUGAR CHUTE + A/C PLUG       |          |                        |   |   |   |
| 3/a           | TSIL15/19T-10   | SILICON HOSE 15X19 MT.10       | X        | Y                      | Y | Y | Y |
| 3/b           | TSIL15/19T-50   | SILICON HOSE 15X19 MT.50       |          |                        |   |   |   |
| 4             | Z0230030304R3   | § INGREDIENT CHUTE-LEFT ORANGE | X        |                        |   | X |   |
| 5             | Z0232400042R    | § INGREDIENT CHUTE FRONTAL     |          |                        |   |   |   |
| 6             | Z0230030305R3   | § INGRED. CHUTE-RIGHT ORANGE   | X        |                        |   | X |   |
| 7             | 4001003072/22R1 | § INGREDIENT CHUTE-LEFT WHITE  | X        |                        |   |   |   |
| 8             | 4001003072/20R1 | § PROD.CHUTE FRONTAL WHITE     | X        |                        |   |   |   |
| 9             | 4001003072/21R1 | § INGREDIENT CHUTE-RIGHT WHITE | X        |                        |   |   |   |

The recommended replacement for key parts in the table below, is especially oriented towards machines installed in locations placed far from the headquarter and infrequently visited.

The numbers have been collected on the basis of field experience and should be taken only as a reference. they are subject to change depending on, local operating conditions and therefore must be adapted to local environments.

The replacement numbers are based on a regular maintenance, as described in the technical manual of the respective machine, and also on a good practice of hygienic cleaning and based on using water-filtering systems to avoid high carbonate hardness and bad water quality.

|                                           |      |               |                           |          | Preventive Maintenance |    |    |   | Recommended Spare Parts (considering the number of vending machines) (*1) |       |     |
|-------------------------------------------|------|---------------|---------------------------|----------|------------------------|----|----|---|---------------------------------------------------------------------------|-------|-----|
| Table                                     | Pos. | Code          | Description               | Critical | A                      | B  | C  | D | 1-10                                                                      | 11-50 | >51 |
| cabinet                                   | 14   | ELE0002009    | BIPOLAR SWITCH 15A 250V   | X        |                        |    |    |   | 1                                                                         | 1     | 1   |
| cabinet                                   | 15   | Z0270011109CL | § SERVICE KEY             | X        |                        |    |    |   | 1                                                                         | 2     | 2   |
| cabinet                                   | 35   | Z0110001119   | WATER INLET VALVE 24V DC  | X        |                        | CK | X* |   | 1                                                                         | 2     | 3   |
| CABINET CONTROL PANEL                     | 3    | SCHA161001    | SWITCHING BOARD           | X        |                        |    |    |   | 1                                                                         | 2     | 2   |
| CABINET CONTROL PANEL                     | 7    | ELE0003043    | FUSE 6,3X32 16A           | X        |                        |    |    |   | 10                                                                        | 10    | 20  |
| CABINET CONTROL PANEL                     | 10   | ELE0002319    | MAINS SOCKET SCHUKO       | X        |                        |    |    |   | 1                                                                         | 1     | 1   |
| CABINET CONTROL PANEL                     | 12   | ELE0009066    | NOISE FILTER 16A          | X        |                        |    |    |   | 1                                                                         | 1     | 2   |
| CABINET CONTROL PANEL                     | 14   | ELE0002350    | MAINS SOCKET 16A          | X        |                        |    |    |   | 1                                                                         | 1     | 1   |
| POWER BOARD SUPPORT                       | 3    | SCH0010580    | POWER BOARD               | X        |                        |    |    |   | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER                 | 11/a | Z0090002093   | GEAR MOTOR 33 RPM 24V DC  | X        |                        |    |    | X | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER                 | 11/b | Z0090002082   | MOTOR 24 DC 55 RPM        | X        |                        |    |    | X | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER                 | 11/c | Z0090002081   | MOTOR 24 DC 85 RPM        | X        |                        |    |    | X | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER                 | 12   | Z0230012010   | PINION                    | X        |                        |    |    | X | 1                                                                         | 1     | 2   |
| ESPRESSO BOILER DISPENSER W/ROTATIVE PUMP | 11/a | Z0090002093   | GEAR MOTOR 33 RPM 24V DC  | X        |                        |    |    | X | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER W/ROTATIVE PUMP | 11/b | Z0090002082   | MOTOR 24 DC 55 RPM        | X        |                        |    |    | X | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER W/ROTATIVE PUMP | 11/c | Z0090002081   | MOTOR 24 DC 85 RPM        | X        |                        |    |    | X | 1                                                                         | 2     | 2   |
| ESPRESSO BOILER DISPENSER W/ROTATIVE PUMP | 12   | Z0230012010   | PINION                    | X        |                        |    |    | X | 1                                                                         | 1     | 2   |
| mixer plan                                | 12/a | TSIL15/19T-10 | SILICON HOSE 15X19 MT.10  | X        | Y                      | Y  | Y  | Y | 1                                                                         | 1     | 2   |
| PRO BREWER SUPPORT+MOTOR                  | 2    | ELE0001522    | MICROSWITCH               | X        |                        |    |    |   | 1                                                                         | 2     | 2   |
| PRO BREWER SUPPORT+MOTOR                  | 5    | ELE0000932    | PROBE                     | X        |                        |    |    |   | 1                                                                         | 1     | 2   |
| PRO BREWER SUPPORT+MOTOR                  | 7    | ELE0000467-02 | FAN HEATER 24V DC + BOARD | X        |                        |    |    |   | 1                                                                         | 1     | 2   |

|                                 |      |               |                                |          | Preventive Maintenance |    |    |      | Recommended Spare Parts (considering the number of vending machines) (*1) |       |     |
|---------------------------------|------|---------------|--------------------------------|----------|------------------------|----|----|------|---------------------------------------------------------------------------|-------|-----|
| Table                           | Pos. | Code          | Description                    | Critical | A                      | B  | C  | D    | 1-10                                                                      | 11-50 | >51 |
| PRO BREWER SUPPORT+MOTOR        | 15   | Z0090002250R  | § VARIFLEX BREW. GEARBOX MOTOR | X        |                        |    | CK | X    | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | A    | Z0250014033R  | § CHUTE D. 36                  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | C    | Z0250014040R  | § UPPER FILTER HOLDER D.36     | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.36  | E    | Z0250014030R  | § CHAMBER D.36                 | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.36  | F    | Z0250014034R  | § BRUSH D.36                   | X        | X                      | X  | X  | X    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | G    | Z0250014032R  | § INFUSION CHAMBER D.36        | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.36  | H    | Z0250014038R  | § LOWER FILTER HOLDER D.36     | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.36  | 4    | VIT0009318    | SPACER WASHER                  | X        |                        |    |    | CK   | 2                                                                         | 2     | 4   |
| PROFESSIONAL BREWER GROUP D.36  | 5    | VIT0009317    | BEARING                        | X        |                        |    |    | CK   | 2                                                                         | 2     | 4   |
| PROFESSIONAL BREWER GROUP D.36  | 6    | GUA0001007    | V RING GASKET VA16             | X        |                        |    |    | CK   | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 10   | Z0250014081   | SPRING                         | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 18   | GUA0000045    | OR 108 VITON 80 BLACK          | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 19   | Z0250014048   | SPRING                         | X        | CK                     | X2 | X2 | X2   | 2                                                                         | 4     | 4   |
| PROFESSIONAL BREWER GROUP D.36  | 20   | GUA0000080    | OR 4112 RED SILICONE LSR70     | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 21   | Z0250008099   | COFFEE FILTER 33,4             | X        | CK                     | Y  | Y  | Y    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 27   | GUA0000004    | OR 104 NBR AL 75 BLACK         | X        | CK                     | X  | X  | X    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 32   | GUA0000103    | OR 3075 SILICON                | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 33   | GUA0000080    | OR 4112 RED SILICONE LSR70     | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 34   | Z0250008019   | COFFEE FILTER                  | X        | CK                     | Y  | Y  | Y    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 37   | VIT0009320    | BEARING                        | X        |                        |    |    | CK   | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.36  | 100  | Z0250014060CL | § COFFEE BREWER VARIFLEX D.36  | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | A    | Z0250014008R  | § CHUTE D. 45                  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | C    | Z0250014045R  | § UPPER FILTER HOLDER D.45     | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.45  | E    | Z0250014020R  | § INFUSION CHAMBER D.45        | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.45  | F    | Z0250014024R  | § BRUSH D.45                   | X        | X                      | X  | X  | X    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | G    | Z0250014022R  | § INFUSION CHAMBER D.45        | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.45  | H    | Z0250014028R  | § LOWER FILTER HOLDER D.45     | X        |                        |    |    |      |                                                                           |       |     |
| PROFESSIONAL BREWER GROUP D.45  | 4    | VIT0009318    | SPACER WASHER                  | X        |                        |    |    | CK   | 2                                                                         | 2     | 4   |
| PROFESSIONAL BREWER GROUP D.45  | 5    | VIT0009317    | BEARING                        | X        |                        |    |    | CK   | 2                                                                         | 2     | 4   |
| PROFESSIONAL BREWER GROUP D.45  | 6    | GUA0001007    | V RING GASKET VA16             | X        |                        |    |    | CK   | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 10   | Z0250014081   | SPRING                         | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 18   | GUA0000045    | OR 108 VITON 80 BLACK          | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 19   | Z0250014048   | SPRING                         | X        | CK                     | X2 | X2 | X2   | 2                                                                         | 4     | 4   |
| PROFESSIONAL BREWER GROUP D.45  | 20   | GUA0000097    | OR 4131 RED SILICONE LSR70     | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 21   | Z0250008211   | COFFEE FILTER 37,3             | X        | CK                     | Y  | Y  | Y    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 27   | GUA0000004    | OR 104 NBR AL 75 BLACK         | X        | CK                     | X  | X  | X    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 32   | GUA0000103    | OR 3075 SILICON                | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 33   | GUA0000097    | OR 4131 RED SILICONE LSR70     | X        | CK                     | Y* | Y* | Y*   | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 34   | Z0250014029   | COFFEE FILTER DIAM. 37.3       | X        | CK                     | Y  | Y  | Y    | 1                                                                         | 2     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 37   | VIT0009320    | BEARING                        | X        |                        |    |    | CK   | 1                                                                         | 1     | 2   |
| PROFESSIONAL BREWER GROUP D.45  | 100  | Z0250014000CL | COFFEE BREWER VARIFLEX D 45    | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/SUGAR MOVEMENT | 4    | Z0090002114R  | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/SUGAR MOVEMENT | 9    | ELE0001528    | MICROSWITCH                    | X        |                        |    | X  |      | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/SUGAR MOVEMENT | 12   | Z0380010831   | BUSH 20x4                      | X        |                        |    |    |      | 1                                                                         | 2     | 2   |

|                                   |      |                |                                |          | Preventive Maintenance |    |    |      | Recommended Spare Parts (considering the number of vending machines) (*1) |       |     |
|-----------------------------------|------|----------------|--------------------------------|----------|------------------------|----|----|------|---------------------------------------------------------------------------|-------|-----|
| Table                             | Pos. | Code           | Description                    | Critical | A                      | B  | C  | D    | 1-10                                                                      | 11-50 | >51 |
| PIPES MOVEMENT W/SUGAR MOVEMENT   | 29   | NL201106265    | MICRO LEVER                    | X        |                        |    |    | X    | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/SUGAR MOVEMENT   | 40/b | TSIL06/09PG-50 | SILICON HOSE D6X9 R5012 MT.50  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| PIPES MOVEMENT W/O SUGAR MOVEMENT | 4    | Z0090002114R   | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/O SUGAR MOVEMENT | 9    | ELE0001528     | MICROSWITCH                    | X        |                        |    | X  |      | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/O SUGAR MOVEMENT | 12   | Z0380010831    | BUSH 20x4                      | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/O SUGAR MOVEMENT | 29   | NL201106265    | MICRO LEVER                    | X        |                        |    |    | X    | 1                                                                         | 2     | 2   |
| PIPES MOVEMENT W/O SUGAR MOVEMENT | 40/b | TSIL06/09PG-50 | SILICON HOSE D6X9 R5012 MT.50  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| SUGAR MOVEMENT                    | 2    | Z0090002114R1  | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |
| SUGAR MOVEMENT                    | 6    | ELE0001528     | MICROSWITCH                    | X        |                        |    | X  |      | 1                                                                         | 2     | 2   |
| SUGAR MOVEMENT                    | 10   | Z0380010831    | BUSH 20x4                      | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| mixer                             | 4    | Z0090003023    | MIXER MOTOR 24V DC SHAFT D.4   | X        |                        |    |    | X    | 5                                                                         | 10    | 10  |
| mixer                             | 5    | Z0080100009IC  | MIXER MOTOR SUPPORT RAL2011    | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| mixer                             | 6    | GUA0000084     | OR 3131 RED SILICONE A60       | X        | Y                      | Y  | Y  | Y    | 10                                                                        | 20    | 20  |
| mixer                             | 7    | Z0080100015    | MIXER BUSH                     | X        |                        |    |    |      | 5                                                                         | 10    | 10  |
| mixer                             | 8    | Z0080100102    | MIXER SHAFT GASKET             | X        | CK                     | Y  | Y  | Y    | 1                                                                         | 1     | 2   |
| mixer                             | 9    | Z0080100011    | MIXER FAN                      | X        | CK                     | Y  | Y  | Y    | 10                                                                        | 20    | 20  |
| mixer                             | 10   | Z0080100006IC  | LOCK RING RAL2011              | X        |                        |    |    |      | 5                                                                         | 10    | 10  |
| mixer                             | 12/a | Z0080200101LPG | BLUE LEFT MIX.BODY H2O W/BREAK | X        | Y                      | Y  | Y  | Y    | 2                                                                         | 4     | 4   |
| mixer                             | 12/b | Z0080200104LPG | BLUE L.MIX BODY H2O W/O BREAK  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| mixer                             | 15/b | TSIL06/09PG-50 | SILICON HOSE D6X9 R5012 MT.50  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| mixer                             | 100  | Z0080100001R   | § MIXER BOWL BASE+MOTOR        | X        |                        |    |    |      | 5                                                                         | 10    | 10  |
| SOLUBLES VALVES                   | 2    | Z0110001141    | EV 2Vx2 DN2 G1/8 F A.R. 24VDC  | X        |                        |    | X  |      | 1                                                                         | 1     | 2   |
| SOLUBLES VALVES                   | 4/a  | Z008B185013PL  | EV MIXER THR.NOZZLE Ø5 BLUE    | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES                   | 4/b  | Z008B185013MD  | EV MIXER THR.NOZZLE Ø5 GREEN   | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES                   | 4/d  | Z008B185013NA  | EV MIXER THR.NOZZLE Ø5 BLACK   | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES                   | 4/e  | Z008B185013KA  | EV MIXER THR.NOZZLE Ø5 RED     | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES                   | 5    | GUA0000085     | OR 106 RED SILICONE A70        | X        | Y*                     | Y* | Y* | Y*   | 10                                                                        | 20    | 20  |
| SOLUBLES VALVES                   | 6    | TTEF04/06T     | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y    | 1                                                                         | 1     | 1   |
| SOLUBLES VALVES                   | 7    | Z0110001134    | VALVE BLOCK 3V 2W 24V DC       | X        |                        |    | X  |      | 1                                                                         | 1     | 2   |
| SOLUBLES VALVES                   | 8    | Z0100001156    | FITTING ELBOW D6-D6            | X        |                        |    |    |      | 2                                                                         | 4     | 4   |
| SOLUBLES VALVES W/HOT WATER       | 2    | Z0110001141    | EV 2Vx2 DN2 G1/8 F A.R. 24VDC  | X        |                        |    | X  |      | 1                                                                         | 1     | 2   |
| SOLUBLES VALVES W/HOT WATER       | 4/a  | Z008B185013PL  | EV MIXER THR.NOZZLE Ø5 BLUE    | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES W/HOT WATER       | 4/b  | Z008B185013MD  | EV MIXER THR.NOZZLE Ø5 GREEN   | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES W/HOT WATER       | 4/d  | Z008B185013NA  | EV MIXER THR.NOZZLE Ø5 BLACK   | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES W/HOT WATER       | 4/e  | Z008B185013KA  | EV MIXER THR.NOZZLE Ø5 RED     | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| SOLUBLES VALVES W/HOT WATER       | 5    | GUA0000085     | OR 106 RED SILICONE A70        | X        | Y*                     | Y* | Y* | Y*   | 10                                                                        | 20    | 20  |
| SOLUBLES VALVES W/HOT WATER       | 6    | TTEF04/06T     | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y    | 1                                                                         | 1     | 1   |
| SOLUBLES VALVES W/HOT WATER       | 7    | Z0110001134    | VALVE BLOCK 3V 2W 24V DC       | X        |                        |    | X  |      | 1                                                                         | 1     | 2   |
| SOLUBLES VALVES W/HOT WATER       | 11   | Z0100001156    | FITTING ELBOW D6-D6            | X        |                        |    |    |      | 2                                                                         | 4     | 4   |
| VIBRATION PUMP HYDRIC CIRCUIT     | 5    | Z0110007003    | VOLUMETRIC COUNTER             | X        | CK                     | CK | CK | X    | 1                                                                         | 1     | 2   |
| VIBRATION PUMP HYDRIC CIRCUIT     | 7/a  | TSIL05/08T-10  | SILICON HOSE 5X8 MT.10         | X        | Y                      | Y  | Y  | Y    | 1                                                                         | 1     | 2   |
| VIBRATION PUMP HYDRIC CIRCUIT     | 9    | Z0112500019    | NO RETURN VALVE 16 BAR         | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| VIBRATION PUMP HYDRIC CIRCUIT     | 15   | ELE0000991     | TEMPERATURE PROBE              | X        | CK                     | CK | CK | CK   | 1                                                                         | 2     | 2   |
| VIBRATION PUMP HYDRIC CIRCUIT     | 17   | TTEF04/06T     | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y    | 1                                                                         | 1     | 1   |

|                               |      |               |                                |          | Preventive Maintenance |    |    |    | Recommended Spare Parts (considering the number of vending machines) (*1) |       |     |
|-------------------------------|------|---------------|--------------------------------|----------|------------------------|----|----|----|---------------------------------------------------------------------------|-------|-----|
| Table                         | Pos. | Code          | Description                    | Critical | A                      | B  | C  | D  | 1-10                                                                      | 11-50 | >51 |
| VIBRATION PUMP HYDRIC CIRCUIT | 26   | Z0380010831   | BUSH 20x4                      | X        |                        |    |    |    | 1                                                                         | 2     | 2   |
| VIBRATION PUMP HYDRIC CIRCUIT | 29   | Z060B185111NA | 3 WAYS SUPPORT                 | X        |                        |    |    |    | 2                                                                         | 2     | 4   |
| VIBRATION PUMP HYDRIC CIRCUIT | 31   | Z011B185023   | VALVE 3/2 24V+BOARD PWM        | X        |                        | CK | X  |    | 2                                                                         | 4     | 6   |
| VIBRATION PUMP HYDRIC CIRCUIT | 32   | Z0100001238   | ELBOW CONNECTOR                | X        |                        |    |    |    |                                                                           |       |     |
| VIBRATION PUMP HYDRIC CIRCUIT | 33/a | TSIL05/08T-10 | SILICON HOSE 5X8 MT.10         | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 5    | Z0110007003   | VOLUMETRIC COUNTER             | X        | CK                     | CK | CK | X  | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 7/a  | TSIL04/06T-10 | SILICON HOSE 4X6 MT.10         | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 8/a  | TSIL06/11T-10 | SILICON HOSE 6X11 MT.10        | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 10   | Z0112500019   | NO RETURN VALVE 16 BAR         | X        |                        |    |    |    | 1                                                                         | 2     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 16   | ELE0000991    | TEMPERATURE PROBE              | X        | CK                     | CK | CK | CK | 1                                                                         | 2     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 22/a | TSIL07/11T-10 | SILICON HOSE 7X11 MT.10        | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 23   | TTEF04/06T    | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 1   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 33   | Z0380010831   | BUSH 20x4                      | X        |                        |    |    |    | 1                                                                         | 2     | 2   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 35   | Z060B185111NA | 3 WAYS SUPPORT                 | X        |                        |    |    |    | 2                                                                         | 2     | 4   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 37   | Z011B185023   | VALVE 3/2 24V+BOARD PWM        | X        |                        | CK | X  |    | 2                                                                         | 4     | 6   |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 38   | Z0100001238   | ELBOW CONNECTOR                | X        |                        |    |    |    |                                                                           |       |     |
| ROTATIVE PUMP HYDRIC CIRCUIT  | 39/a | TSIL05/08T-10 | SILICON HOSE 5X8 MT.10         | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| BOILER DISCHARGE VALVE        | 1    | Z011B185022   | VALVE 2 WAY 24DC               | X        |                        |    |    |    | 2                                                                         | 2     | 4   |
| BOILER DISCHARGE VALVE        | 3/a  | TSIL05/08T-10 | SILICON HOSE 5X8 MT.10         | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| BOILER DISCHARGE VALVE        | 4    | TTEF04/06T    | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 1   |
| COFFEE PUMP                   | 1    | Z0110004065   | PUMP PLUS PGØ7 230V-50HZ       | X        |                        | CK | X  |    | 1                                                                         | 2     | 2   |
| COFFEE PUMP                   | 2    | Z0110001151R  | VALVE 3W W/BY-PASS 11BAR       | X        |                        | CK | X* |    | 1                                                                         | 2     | 3   |
| COFFEE PUMP                   | 3/a  | TSIL05/08T-10 | SILICON HOSE 5X8 MT.10         | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| COFFEE PUMP                   | 5    | TTEF04/06T    | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 1   |
| COFFEE PUMP                   | 6    | Z0110004023   | CONNECTOR                      | X        |                        |    |    |    | 1                                                                         | 2     | 2   |
| COFFEE PUMP                   | 7    | Z0100003022   | T CONNECTOR 461 TS UL          | X        |                        |    |    |    | 2                                                                         | 1     | 2   |
| COFFEE PUMP                   | 8    | ELE0000915    | PUMP THERMOPROTECTOR           | X        |                        |    |    |    | 1                                                                         | 1     | 1   |
| ROTATIVE PUMP                 | 2    | Z0110004033   | PROCON PUMP MOD.13BB015F116A   | X        |                        |    |    |    | 1                                                                         | 2     | 2   |
| ROTATIVE PUMP                 | 3    | Z0100001022   | ELBOW CONNECTOR 8-3/8-1/4      | X        | CK                     | CK | X  |    | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP                 | 7    | TTEF04/06T    | PTFE PIPE 4X6                  | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 1   |
| ROTATIVE PUMP                 | 9/a  | TSIL06/11T-10 | SILICON HOSE 6X11 MT.10        | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| ROTATIVE PUMP                 | 200  | Z0110004033/0 | PROCON PUMP MOD.CB1521PX+CLAMP | X        |                        |    |    |    | 1                                                                         | 2     | 2   |
| water inlet panel             | 2    | Z0110020007   | PLASTIC FILTER DIAM. 20        | X        |                        |    | X  |    | 1                                                                         | 1     | 1   |
| water inlet panel             | 3    | Z0800013046   | AIR BREAK WASTE FLOAT          | X        |                        |    |    |    | 1                                                                         | 1     | 2   |
| water inlet panel             | 4    | GUA0000082    | SILICON GASKET D.6             | X        |                        | CK |    | CK | 1                                                                         | 2     | 2   |
| water inlet panel             | 6    | ELE0001514    | MICROSWITCH 3A 125-250VA       | X        |                        |    | CK | X  | 1                                                                         | 2     | 2   |
| water inlet panel             | 8    | GUA0000043    | OR 109 NBR AL 75 BLACK         | X        |                        |    |    | X  | 2                                                                         | 2     | 4   |
| water inlet panel             | 9    | Z0800009211   | ELBOW CONNECTOR                | X        |                        |    |    | X  | 1                                                                         | 1     | 2   |
| water inlet panel             | 10/a | TSIL06/11T-10 | SILICON HOSE 6X11 MT.10        | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| water inlet panel             | 11   | Z0109002002   | H2O FILTER                     | X        |                        | CK | CK | CK | 1                                                                         | 1     | 2   |
| water inlet panel             | 12/a | TSIL07/11T-10 | SILICON HOSE 7X11 MT.10        | X        | Y                      | Y  | Y  | Y  | 1                                                                         | 1     | 2   |
| GRINDER                       | 2    | Z0090003047   | GRINDER MOTOR 230V DC          | X        |                        |    |    | CK | 1                                                                         | 2     | 2   |
| GRINDER                       | 7    | Z0320001608R  | TRANSMISSION WHEEL             | X        |                        |    |    | CK | 1                                                                         | 2     | 2   |
| GRINDER                       | 8    | Z0320001704   | GRINDER ROTATION PIN REINFORCE | X        |                        | CK | CK | CK | 10                                                                        | 20    | 20  |

|                               |      |                |                                |          | Preventive Maintenance |    |    |      | Recommended Spare Parts (considering the number of vending machines) (*1) |       |     |
|-------------------------------|------|----------------|--------------------------------|----------|------------------------|----|----|------|---------------------------------------------------------------------------|-------|-----|
| Table                         | Pos. | Code           | Description                    | Critical | A                      | B  | C  | D    | 1-10                                                                      | 11-50 | >51 |
| GRINDER                       | 14   | VIT0009325     | BEARING                        | X        |                        |    |    | CK   | 1                                                                         | 1     | 2   |
| GRINDER                       | 20   | Z0320001636    | EJECTOR                        | X        |                        |    | CK |      | 1                                                                         | 1     | 2   |
| GRINDER                       | 21   | GUA0000124     | SILICONE OR 2137               | X        |                        | X  |    |      | 1                                                                         | 2     | 2   |
| GRINDER                       | 22   | Z0320001680    | CONIC BLADES PLUS              | X        |                        | CK |    | X    | 1                                                                         | 1     | 2   |
| ASPIRATION FAN                | 7    | TEOL000002     | EXTRACTOR TUBE D.30            | X        |                        |    |    | X    | 1                                                                         | 2     | 2   |
| ASPIRATION FAN                | 9    | ELE0000468R    | § FAN 24V DC-HIGH SPEED-D.92   | X        |                        |    | X  |      | 1                                                                         | 1     | 2   |
| DOOR CLOSURE                  | 2/a  | SER0000028     | LOCK MM20 + KEY 3480           | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| DOOR CLOSURE                  | 2/b  | SER0000023     | LOCK RIELDA                    | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| RFID CARD READER              | 2    | SCH0006261     | RFID CARD READER_1             | X        |                        |    |    |      | 1                                                                         | 1     | 1   |
| DOOR CONTROL PANEL            | 2    | SCH0007904     | CPU BOARD (2017)               | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| DOOR CONTROL PANEL            | 7    | ELTB170001     | PROGRAM. KEYPAD                | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| DOOR CONTROL PANEL            | 11   | BRD07004A-00   | CONNECTION BOARD RHEAFLASH IN  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| 1 turret cups station         | 3    | Z0020042251    | TRANSPARENT PLEXIGLASS SENSOR  | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| CUP DISPENSER 1 TURET         | 2/a  | Z0190006537CY  | TURRET CUP CONNEC. 4C. RAL9018 | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 5    | VIT0005223     | PIN 4X18 DIN 1475              | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 7/a  | Z0190006543-01 | MICROSWITCH LEVER WHITE        | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 7/b  | Z0190006556KA  | MICROSWITCH LEVER RAL3020      | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 8    | ELE0001530     | MICROSWITCH 3A 125-250VA       | X        |                        |    | X  |      | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 13   | Z0090002114R2  | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 14   | Z0190006518    | TOOTHED SHAFT Z18 WHITE        | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 15   | SCH0007000     | SPLIT UP SENSOR                | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 21   | Z0190006511NA  | CUPS TURRET SPINDLE BLACK      | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 22   | Z0190006528    | Z26 WHEEL WHITE                | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 24/a | Z0190006523    | TOOTHED RING NUT D.70/73       | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 1 TURET         | 24/b | Z0190006507    | TOOTHED RING NUT D.78/80 WHITE | X        |                        |    |    | X*   | 1                                                                         | 1     | 2   |
| CUP DISPENSER 1 TURET         | 26   | Z0400009027NAR | CUP SLOW MOTION R9005+1 WEIGHT | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| stirrer dispenser             | 6    | Z0450003010    | SPRING                         | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| stirrer dispenser             | 8    | ELE0000055     | ELECTROMAGNET 5% 24V DC        | X        |                        |    |    | X    | 1                                                                         | 2     | 2   |
| stirrer dispenser             | 9    | VIT0005211     | DOWEL PIN 2.5X12               | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |
| stirrer dispenser             | 11   | Z045A158137    | STIRRER EJECTOR                | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| stirrer dispenser             | 28/a | 4001012030     | STIRRER WEIGHT 89MM            | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| stirrer dispenser             | 28/b | Z0450003033    | STIRRER WEIGHT 104MM           | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| cups loader (2 turrets)       | 17   | Z0400009027NAR | CUP SLOW MOTION R9005+1 WEIGHT | X        |                        |    |    |      | 1                                                                         | 1     | 2   |
| CUP DISPENSER 2 TURETS        | 8    | ELE0001530     | MICROSWITCH 3A 125-250VA       | X        |                        |    | X  |      | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 9    | Z0190006556KA  | MICROSWITCH LEVER RAL3020      | X        |                        |    |    |      | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 10   | Z0090002114R1  | § GEARBOX MOTOR 11RPM 24V DC   | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 11   | SCH0007000     | SPLIT UP SENSOR                | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 18   | Z0190006518    | TOOTHED SHAFT Z18 WHITE        | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 19   | Z0190006511NA  | CUPS TURRET SPINDLE BLACK      | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 20   | Z0190006528    | Z26 WHEEL WHITE                | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| CUP DISPENSER 2 TURETS        | 22   | Z0190006523    | TOOTHED RING NUT D.70/73       | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| stirrer dispenser (2 TURRETS) | 5    | Z0450003010    | SPRING                         | X        |                        |    |    | X*   | 1                                                                         | 2     | 2   |
| stirrer dispenser (2 TURRETS) | 7    | ELE0000055     | ELECTROMAGNET 5% 24V DC        | X        |                        |    |    | X    | 1                                                                         | 2     | 2   |
| stirrer dispenser (2 TURRETS) | 8    | VIT0005211     | DOWEL PIN 2.5X12               | X        |                        |    |    | X(1) | 1                                                                         | 2     | 2   |

|                               |      |                 |                                |          | Preventive Maintenance |   |    |   | Recommended Spare Parts (considering the number of vending machines) (*1) |       |     |
|-------------------------------|------|-----------------|--------------------------------|----------|------------------------|---|----|---|---------------------------------------------------------------------------|-------|-----|
| Table                         | Pos. | Code            | Description                    | Critical | A                      | B | C  | D | 1-10                                                                      | 11-50 | >51 |
| stirrer dispenser (2 TURRETS) | 11   | Z045A158137     | STIRRER EJECTOR                | X        |                        |   |    |   | 1                                                                         | 2     | 2   |
| stirrer dispenser (2 TURRETS) | 24   | 4001012030      | STIRRER WEIGHT 89MM            | X        |                        |   |    |   | 1                                                                         | 1     | 2   |
| INTRODUCTION/RETURN OF COINS  | 5    | 4050010074      | COIN RETURN BUTTON SPRING      | X        |                        |   |    |   | 1                                                                         | 2     | 2   |
| INTRODUCTION/RETURN OF COINS  | 13   | Z0020055172     | LED LIGHTING SYSTEM INCOME COI | X        |                        |   |    |   | 1                                                                         | 1     | 2   |
| COIN BOX COVER                | 4    | SER0000028      | LOCK MM20 + KEY 3480           | X        |                        |   |    |   | 1                                                                         | 1     | 2   |
| COIN BOX COVER                | 9    | ELT0006813CL2   | § DISTANCE SENSOR              | X        |                        |   |    |   | 1                                                                         | 2     | 2   |
| COIN BOX                      | 2    | SER0000028      | LOCK MM20 + KEY 3480           | X        |                        |   |    |   | 1                                                                         | 1     | 2   |
| coffee beans container        | 1/a  | Z0230030481     | COFFEE BEANS CONT. (1GRINDER)  | X        |                        |   | CK | X | 1                                                                         | 1     | 2   |
| coffee beans container        | 1/b  | Z0230030415     | COFFEE BEANS HOPPER 4 KG       | X        |                        |   | CK | X | 1                                                                         | 1     | 2   |
| coffee beans container        | 6    | Z0230015207IC   | COFFEE BEANS HOPPER STOPPER    | X        |                        |   |    |   | 1                                                                         | 1     | 1   |
| PRODUCT CHUTE                 | 3/a  | TSIL15/19T-10   | SILICON HOSE 15X19 MT.10       | X        | Y                      | Y | Y  | Y | 1                                                                         | 1     | 2   |
| PRODUCT CHUTE                 | 4    | Z0230030304R3   | § INGREDIENT CHUTE-LEFT ORANGE | X        |                        |   | X  |   | 1                                                                         | 2     | 2   |
| PRODUCT CHUTE                 | 6    | Z0230030305R3   | § INGRED. CHUTE-RIGHT ORANGE   | X        |                        |   | X  |   | 1                                                                         | 2     | 2   |
| PRODUCT CHUTE                 | 7    | 4001003072/22R1 | § INGREDIENT CHUTE-LEFT WHITE  | X        |                        |   |    |   | 1                                                                         | 2     | 2   |
| PRODUCT CHUTE                 | 8    | 4001003072/20R1 | § PROD.CHUTE FRONTAL WHITE     | X        |                        |   |    |   | 1                                                                         | 2     | 2   |
| PRODUCT CHUTE                 | 9    | 4001003072/21R1 | § INGREDIENT CHUTE-RIGHT WHITE | X        |                        |   |    |   | 1                                                                         | 2     | 2   |

